



SERVICE MANUAL

234

SYNCASET

SPECIFICATIONS

仕様

MECHANICAL

Tape:

Track Format:

Heads:

Motors:

Tape Speed*1: Pitch Control: Wow & Flutter*1:

Fast Wind Time:

Recording Time: Dimensions (W x H x D):

Weight:

Compact Cassette, C-30 to C-90, chrome (cobalt) tape (70 μ s EQ) such as TDK SA, MAXELL XL II or equivalent.

4-track, 4 channel one direction recording/playback

4 channel record/playback (Permalloy)

4 channel erase (Ferrite)

1 FG servo-controlled DC capstan motor, 1 DC reel motor,

1 DC control motor 9.5 cm/s (3-3/4 ips) ±1% ±12% of normal tape speed

±0.06% peak (DIN/IEC/ANSI weighted) 0.04% RMS (JIS/NAB, weighted) Approx. 85 seconds for C-60 tape

-60 dBV (1 mV) to -10 dBV (0.3 V) -70 dBV (0.3 mV), at TRIM max.

+15 dBV (5.6 V), at TRIM min.

-10 dBV (0.3 V) -20 dBV (0.1 V), at INPUT max. +15 dBV (5.6 V)

-10 dBV (0.3 V), PAN fully L/R +15 dBV (5.6 V)

15 minutes for C-60 tape

19" x 5-13/16" x 14-1/16" (482 x 147 x 357 mm)

9.8 kg net, 21-5/8 lbs.

100k ohms, unbalanced

22k ohms, unbalanced

100 ohms

10k ohms

1.7k ohms -10 dBV (0.3 V) +15 dBV (5.6 V)

100 ohms

10k ohms

1.7k ohms

8 ohms

ELECTRICAL

Mixer Section

LINE IN (x4)

Nominal Input Level: Min. Input Level:

Max. Input Level: LINE OUT (x4)

> Nominal Load Impedance: Nominal Output Level:

CUE OUT (L, R)

Nominal Load Impedance:

Maximum Output Level:

PHONES Output (Stereo)

Minimum Load Impedance: Maximum Output Level:

S/N Ratio

One mic/inst in to line out:

4 ohms

100 mW (8 ohms)

20 Hz - 20 kHz +0/-2 dB

68 dB (TRIM max.)/82 dB (TRIM min.)

(IHF, A weighted)

64 dB (TRIM max.)/78 dB (TRIM min.)

(unweighted, 20 - 20,000 Hz)

82 dB (IHF, A weighted)

78 dB (unweighted 20 - 20,000 Hz)

0.05% (1 kHz, 0VU)

65 dB (1 kHz)

Light up at 8 dB above 0VU

MIC/INST Input (x4)

Input Impedance: Nominal Input Level: Min. Input Level:

Max, Input Level:

Input Impedance:

Output Impedance: Minimum Load Impedance: Maximum Output Level:

Output Impedance:

Minimum Load Impedance: Nominal Output Level:

Nominal Load Impedance:

Frequency Response:

One line in to line out:

Total Harmonic Dist.:

Crosstalk:

Peak Level Indicators:

Recorder Section

Record Channels: Playback Channels:

Bias and erasing freq.:

Overall Freq. Response*2: Signal-to-Noise Ratio*2:

(Referenced to 3 % THD level [285 nWb/m] at 315 Hz)

Total Harm. Distortion*2:

Crosstalk:

(to adjacent chan.)

Erasure:

Power Requirements:

4 (4 dbx II NR, switchable)

4 (4 dbx II NR, switchable)

100 kHz

 $3180 \mu s + 70 \mu s$

40 Hz - 14,000 Hz ±3 dB at OVU (Rec/Repro)

54 dB (dbx OUT, IHF, A weighted 400 Hz)

52 dB (dbx OUT, unweighted, 20 Hz - 20,000 Hz) 95 dB (dbx IN, IHF, A weighted 1 kHz)

90 dB (dbx IN, unweighted, 20 Hz - 20,000 Hz)

1.0% (400 Hz, OVU)

70 dB (1 kHz, 0VU, dbx IN)

50 dB (1 kHz, 0VU, dbx OUT)

70 dB referenced to 285 nWb/m at 1 kHz

100/120/220/240 V AC, 50/60 Hz, 30 W (General Export Model) 100 V AC, 50/60 Hz, 30W (Japan Model)

120 V AC, 60 Hz, 30W (USA/Canada Model) 220 V AC, 50 Hz, 30W (Europe Model) 240 V AC, 50 Hz, 30W (UK/Australia Model)

- Specifications were determined using TEAC Test Tape MXT-111.
- *2 Specifications were determined using TEAC Test Tape MTT-5061 (blank tape).
- この項の仕様は、TEACテスト・テープMXT-111によ リます.
- この項の仕様は、 TEAC テスト・テープ MTT-5061 (ブ ランク・テープ)によります。
- In these specification, 0 dBV is referenced to 1.0 Volt. Actual voltage levels are also given in parenthesis.
- Changes in specifications and features may be made without notice or obligation.
- ●この仕様中の 0 dBVは1.0Vを基準としています。 実際の電) で示しています。
- ●仕様及び外観は改善のため予告なく変更することがあります。
- dbx Noise Reduction system made under license from dbx, incorporated. The name "dbx" and the dbx symbol are trademarks of dbx, Incorporated.
- dbx および dbx マークは dbx インコーボレーテットの登 録商標です。
- ●dbx システムはdbx インコーポレーテッドの実施権に基 づいて製造されています.

CAUTION

♠ Parts marked with this sign are safety critical components. They must always be replaced with identical componentsrefer to the appropriate parts list and ensure exact replace-

注 意

△印は安全重要部品です。 交換する時は必ずティアック指 定の部品を使用してください。

2 REMOVAL OF EXTERNAL COMPONENTS 外装部品の外し方

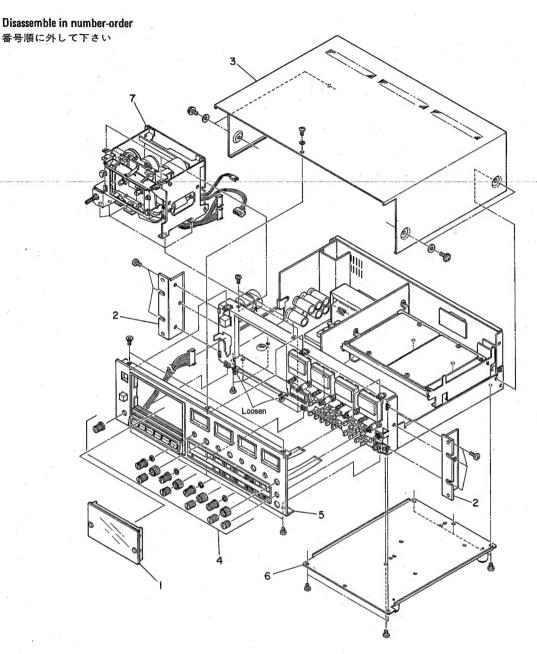


Fig. 2-1


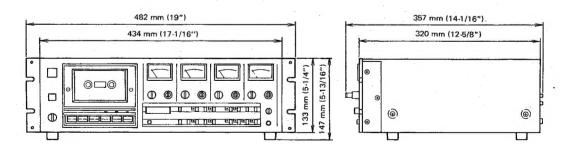


Fig. 2-2 Dimensions 寸法図

3 PARTS LOCATION 部品配置図

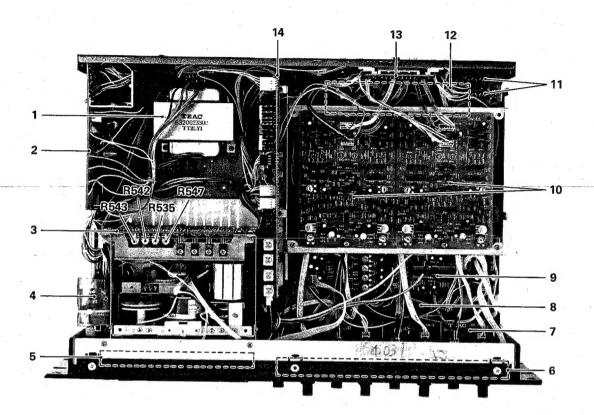

1	POWER TRANSFORMER	8	SW (B) PCB
2	POWER SUPPLY PCB	9	R/P PCB
3	CONTROL (A) PCB	10	DBX PCB
4	POWER SW PCB	11	CONTROL (C) PCB
5	OPE. SW PCB	12	MIC AMPL PCB
6	METER PCB	13	REMOTE PCB
7	VR PCB	14	CONTROL (B) PCB

Fig. 3-1 Top view 上面図

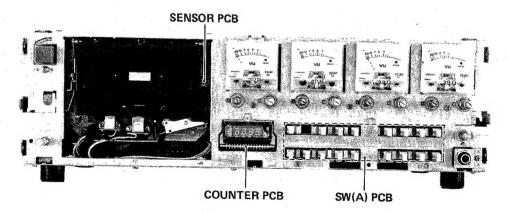


Fig. 3-2 Front view 正面図

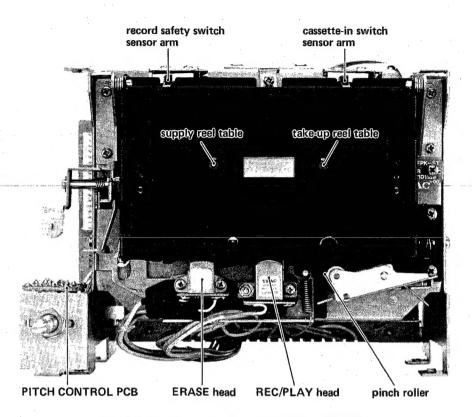


Fig. 3-3 Transport front view トランスポート前面図

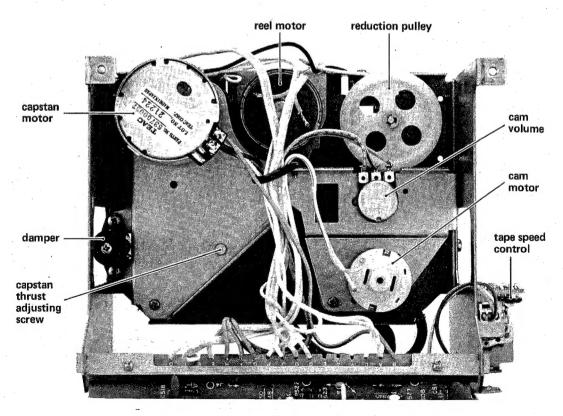


Fig. 3-4 Transport rear view トランスポート後面図

4 MECHANICAL CHECKS AND ADJUSTMENTS

機構部の確認と調整

4-1 SPECIAL TEST EQUIPMENT

- 1. Cassette torque meter
 - CT-120 (TEAC P/N 5104185000):
 For take-up and supply torque checks, 0 to 120 g-cm (0 to 1.7 oz-inch)
 - CT-160 (TEAC P/N 5104186000):
 For fast forward and rewind torque checks.
 0 to 160 g-cm (0 to 2.2 oz-inch)
- 2. Mirror tape
 - TEAC MTT-901:
 For tape path check: C-60, 30 m
 - TEAC MTT-902:
 For tape path check: C-90, 45m
- 3. Test tape
 - TEAC MXT-111:
 For tape speed and wow/flutter (reproduce method) checks
 3 000 Hz, -10 dB is recorded.
 - TEAC MTT-5061 (TDK SA) or equivalent:
 For wow/flutter (record/reproduce method) check, blank tape, Co (CrO₂) formula type

4-2 CAPSTAN ASSEMBLY THRUST

 Turn the thust adjusting screw so that thrust of the capstan shaft is from 0.05 mm to 0.15 mm. For thrust adjusting screw location, see fig. 3-4.

4-3 MICRO SWITCH

- Prepare a standard cassette shell with the record protection tabs in place.
- 2. Load this cassette and close the cassette holder.
- 3. Adjust mounting position of the two micro switches, cassette-in switch (S581) and record safety switch (S582) (for switch location, refer to fig. 3-3), so that the actuator position is in the setting range shown by fig. 4-1.
- Be sure that the cassette-in switch is properly actuated to start the capstan motor.
- Make sure that the record safety switch is properly actuated so that when depressing the RECORD button together with the PLAY button, the deck is set in record mode (or can not be set in record mode if the cassette loaded has no tabs).

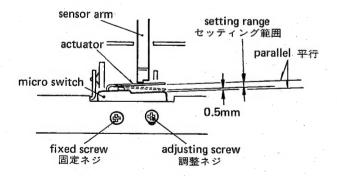


Fig. 4-1

4-1 測定器とテスト・テープ

- 1. カセット・トルク・メータ
 - ・CT-120 (TEAC品番 5104185000) テイクアップ, サプライ・トルク チェック用 0~120g·cm (0~1.7oz·inch)
 - ・CT-160 (TEAC品番 5104186000) F. FWD トルク、REW トルク チェック用 0~160g・cm (0~2.2oz・inch)
- 2. ミラー・テーブ
 - · TEAC MTT-901

テープ・パス・チェック用 : C-60, 30m

• TEAC MTT-902

テープ・パス チェック用: C-90, 45m

- 3. テスト・テーブ
 - ・TEAC MXT-111 テープ・スピード・チェック用 ワウ・フラッタ(再生法) チェック用 信号レベル ; 3000Hz/-10dB
 - ・TEAC MTT-5061 (TDK SA) 又は同等品 ワウ・フラッタ (録再法) チェック用 Co(CrO₂) タイプ, ブランク・テープ

4-2 キャプスタンAssyスラスト

1. キャプスタン・シャフトのスラストが0.05mm~0.15 mm になるようにスラスト調整ネジ(図3-4参照)を回す。

4-3 マイクロ・スイッチ

- 1. 誤消去防止用ツメ付の標準力セットを用意する.
- 2. このカセットを装てんし、カセット・ホルダを閉じる。
- 3. カセットイン・スイッチ (S581), 録音防止スイッチ (S582) 共 (両スイッチ取付個所は図3-3を参照), アクチエー 夕位置が 図4-1 のセッティング範囲内になるようにスイッチ取付位置を調整する.
- 4. カセットイン・スイッチが正しく作動してキャブスタン・ モータが回転するか確認する.

4-4 HEAD BASE POSITION

4-4-1 STOP MODE

- 1. With the deck in STOP mode, adjust the trim pot R543 so that the head base comes to the lowest position.
- Turn the reduction pulley (see fig. 3-4) with your hand to check whether the head base exceeds the lowest position adjusted above or not.
- 3. If it does, adjust R543 again.
- 4. Repeat steps 1 through 3 until a good result is achieved.
- Operate the deck in the sequence of PLAY, STOP, PLAY, and finally power-off modes. Repeat this sequence two or three times
- Then observe the stop position of the head base. If the head base still exceeds than the position in step 3, readjust R543 and repeat steps 1 through 6 until the head base comes to the lowest position.

4-4 ヘッド・ベース位置

4-4-1 ストップ・モード時

- 1. ストップ・モード時に、ヘッド・ベースが最も下方にくるように半固定抵抗 R543を調整する。
- 2. 減速ブーリ (図3-4参照) を手で回転させ、ヘット・ヘース が上記の調整位置よりさらに下へくるかどうか確認する.
- 3. もし下へくるようならば、R543をさらに調整する。
- 4.1~3項を繰り返して、結果が良くなるようにする。
- 5. プレイ・モードからストップ・モード, そしてプレイ・モードから電源を切る操作を 2, 3 度繰り返す.
- 6.5項を終了後、ヘッド・ペースの停止位置を見る。もし、 3項で調整された位置より下にくるようならば、R543をさらに調整し次に1~6項を繰り返して、ヘッド・ペースが最も下にくるようにする。

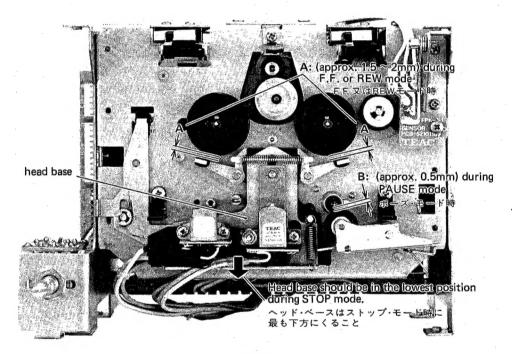


Fig. 4-2

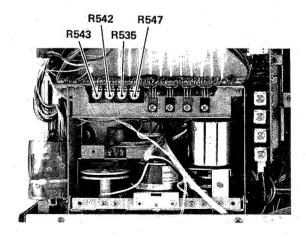


Fig. 4-3

4-4-2 F.F./REW MODES

- Run the deck in the F.F. (fast forward) or REW (rewind) mode and adjust the trim pot R535 so that the following two conditions are obtained.
- a) A clearance between brake drum and brake pad ("A" in fig. 4-2) of approx. 1.5 to 2 mm.
- b) Head base should not go too far up (so the heads do not touch the moving tape, and quick braking action is possible).
- Repeat switching operations from the STOP mode to F.F. or REW mode two or three times and make sure the above adjustment is satisfied.

4-4-3 PAUSE MODE

- 1. With the deck in the play mode, check that there is a clearance of approx. 0.5 mm between the pinch roller arm and the spring arm ("D" in fig. 4-4).
- Set the deck to PAUSE mode and observe the clearance between the pinch roller and capstan shaft ("B" in fig. 4-2). It should be approx. 0.5 mm.
- 3. If not, adjust the trim pot R542.
- 4. Repeat switching operations from STOP to PAUSE mode two or three times, and make sure that when repeating steps 1 and 2, the clearances "D" and "B" are within the specified range respectively. Also make sure there is a clearance between head base and spring stud ("C" in fig. 4-4).

4-5 PINCH ROLLER PRESSURE

 Pushing up the cassette-in sensor arm (refer to fig. 3-3), activate the play mode. Keep the sensor arm pushed up during measurement.

Note: During play operation, make sure there is a clearance of approx. 0.5 mm between the pinch roller arm and the spring arm. Refer to fig. 4-4.

- 2. Hook a spring scale to the small opening on the pinch roller arm.
- Pull the scale as shown by arrow until the pinch roller moves away from the capstan shaft by approx. 2 mm, and then allow the pinch roller to just touch the capstan shaft again.
- 4. Read the scale when the pinch roller just starts to rotate. The reading should be from 350 g to 500 g (12.3 Oz. to 17.6 Oz.).
- If the pinch roller spring (fig. 4-5) was replaced for repair, always position the spring around the lower half of the spring shaft as shown in fig. 4-5.

C: during PAUSE mode ポーズ・モード時

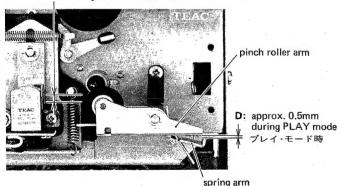


Fig. 4-4

4-4-2 F.F./RWDモード時

- 1. F.F. (早送リ) またはRWD (早巻戻し) モード中に下記の 状態が得られるように半固定抵抗 R535を調整する。
 - ・ブレーキ・ドラムとブレーキ・パッドのすき間(図4-2のA) が約1.5mm~2mmであること。
 - ・ヘッド・ペースはできるだけ上方へ行かないこと……… 走行中のテープが各ヘットに当らない状態を得る為、およ びフレーキのタイミングをできるだけ早くする為。
- 2. ストップ・モードから F. F., または RWD モードへの切換 え操作を 2, 3 度繰り返し上記の調整を満足しているか確 認する。

4-4-3 ボーズ・モード時

- 1. ブレイ・モードにして、ビンチ・ローラ・アームとスプリング・アームのすき間 (図4-4のD) が約0.5mm であるか確認する。
- 2. ボーズ・モードの時にピンチ・ローラとキャプスタン・シャフトの間隔(図4-2のB)が約0.5mmであるか確認する。
- 3. もし外れている場合は、半固定抵抗 R 542 で調整する、
- 4. ストップ・モードからボーズ・モードへの切換え操作を 2, 3 度繰り返した後, 再度1, 2項のチェックをして, 間隔 D と B がそれぞれ規定通りか確認する。また, ヘッド・ペースとスプリング支柱との間 (図4-4の C) にすき間があるか確認する。

4-5 ピンチ・ローラ圧着力

1. カセットイン・センサ・アーム (図3-3参照) を上方に押して, プレイ・モードにする. 測定中, センサ・アームは上方に押し続けること.

注意: プレイ・モード中, ビンチ・ローラ・アームとス プリング・アーム間に約0.5mmのすき間があるか 確認する(図4-4参照).

- 2. ピンチ・ローラ・アームの小さい穴にバネ秤を掛ける。
- 3. ピンチ・ローラがキャブスタン・シャフトから約2 mm 離れるように秤を矢印の方向に引張った後、ピンチ・ローラが再びキャブスタン・シャフトに接触するように除々に戻す。
- 4. ピンチ・ローラが回りはじめる時の値を読む。測定値は350 g から500 g の範囲内に入ること。
- 5. もし修理のためにピンチ・ローラ・スプリング (図4-5) の 交換をした時は、必ず 図4-5 のようにスプリングをスプリ ング・シャフトの下側に位置させる。

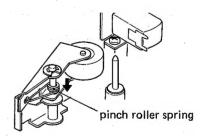


Fig. 4-5

4-6 REEL TORQUE

4-6-1 TAKE-UP/BACK TENSION TORQUES

 Load a cassette torque meter (CT-120) in the cassette holder, and run the deck in play mode. The meter reading should be:

Take-up torque (right reel table):

45 ±5 g-cm (0.56 to 0.69 oz-inch)

Back tension torque (left reel table):

2 to 4 q-cm

(0.028 to 0.056 oz-inch)

2. If the take-up torque is out of the limits, adjust the trim pot R547 (refer to fig. 4-3).

3. If the take-up torque is still out of the limits, adjust the torque adjusting ring provided on the right reel table. The torque can be adjusted to three values as shown in fig. 4-6. Turn the torque adjusting ring with the tab A, pulling slightly upward, and place the tab on one of three stepped portions having pawls to fix the tab.

4. Repeat steps 2 and 3 until good results are achieved.

4-6 リール・トルク

4--1 テイクアップ・トルク/バック・テンション・トルク

 カセット・ホルダにカセット・トルク・メータ (CT-120) を装てん後、プレイ・モードにする。規定値は次の通りです。

テイクアップ・トルク(右リール台): $45\pm 5 \cdot \text{cm}$ パック・テンション・トルク(左リール台): $2\sim 4g \cdot \text{cm}$

2. もしテイクアップ・トルクが規定値から外れている場合は、 半固定抵抗 R547(図4-3参照)を調整する

3. もしテイクアップ・トルクが更に規定値から外れている場合は、右リール台のトルク調整リングを回して調整する。 トルクは 図4-6 に示すように 3 段階に調整できる。リール台のマーカのある部分だけ階段部分にツメが設けられているので、調整時にはタブ@を持ち上げるようにしてトルク調整リングを回す。

4.2,3頃を繰り返して最適トルクを求める。

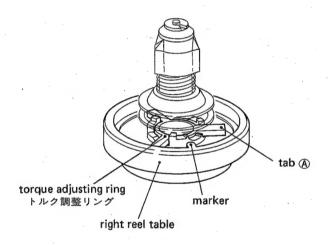


Fig. 4-6

4-6-2 F.F./REW TORQUES

 Load a cassette torque meter (CT-160) in the cassette holder and measure starting torque for both F.F. (fast forward) and REW (rewind) operations with the tape wound close to end or rewound close to beginning, respectively.

The reading should be:

F.F. torque (right reel table): more

more than 55 g-cm

(0.76 oz-inch)

REW torque (left reel table):

from 80 to 150 g-cm (1.1 to 2.1 oz-inch)

4-6-2 F.F./RWDトルク

 カセット・ホルダにカセット・トルク・メータ(CT-160) を装てんし、F.F.(早送り)動作の起動トルクをテープの 巻終り近くで、また RWD 動作の起動トルクをテープの巻 始め近くでそれぞれ測定する。 規格は次の通りです。

F.F.トルク (右リール台) :55 g・cm以上 RWDトルク(左リール台) :80~150 g・cm

4-7 TAPE SPEED

- 1. Connect a frequency counter to either one of LINE OUT jacks. Refer to fig. 4-7.
- 2. Depress POWER switch to ON.
- 3. Load a TEAC MXT-111 test tape contining a 3000 Hz test tone, then leave the deck for at least one minute to warm up the capstan motor.
- 4. Playback the test tape, and make sure the following values are obtained at the beginning and at the end of the tape.

Deviation:

3000 Hz ±30 Hz

Width of deviation:

Within 30 Hz

PITCH CONTrol range: Min. : less than 2640 Hz at fully CCW

Max. : higher than 3360 Hz

at fully CW

- 5. If the speed is out of the limits, adjust as follows:
 - a) Clean the tape path and check the pinch roller pressure and take-up torque.
 - b) If they are normal, push PITCH CONTrol (off), and reproduce approx, the mid portion of the test tape.
 - c) Adjust the trim pot R571 (refer to fig. 4-8) provided on the rear side of the PITCH CONTrol using a small "-" driver with the handle completely insulated from the blade to obtain a 3000 Hz ± 5 Hz reading on the frequency counter.

4-7 テープ速度

- 1. 周波数カウンタを LINE OUT ジャックのいずれかに接続 する (図4-7参照)
- 2. POWERスイッチを押してオンにする。
- 3. キャプスタン・モータを回転させウォーミングアップする ためにTEAC MXT-111テスト・テープを装てんして、少 くとも一分間そのままにしておく。
- 4. テスト・テープを再生させ、テープの巻始めと巻終りにて 下記の値が得られるか確認する.

3000Hz±30Hz) PITCH CONTつまみは押し

変動巾: 30Hz以内

人 込まれた状態(オフ)

ピッチ・コントロール可変範囲:

最小: 充分反時計方向にセットして2640Hz以下 最大: 充分時計方向にセットして3360Hz以上

- 5. もし速度が範囲から外れている場合は、次の通り調整する。
 - a.テープ走行面を清掃して、ピンチ・ローラ圧着力、テ イクアップ・トルクをチェックする.
 - b. その結果が正常であれば、ピッチ・コントロールを押 してオフにさせ、テスト・テープのテープ巻きの中ほ どを再生する。
 - c. 周波数カウンタが3000Hz±5Hzを示すようにピッチ・ コントロールの裏側にある半固定抵抗 R571 (図4-8) を回して調整する。調整には柄が刃先から完全に絶縁 されている小型マイナス・ドライバを用いること。

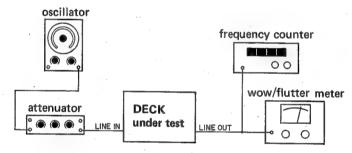


Fig. 4-7

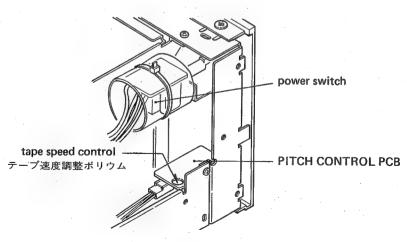


Fig. 4-8

4-8 WOW AND FLUTTER

Note: These measurements should be made at the beginning, middle and the end of the tape.

4-8-1 REPRODUCE METHOD

- Connect a wow and flutter meter to the deck as shown in fig. 4-7
- 2. Load and play a TEAC MXT-111 test tape or equivalent,
- 3. Measure the wow and flutter value.

Specifications: ±0.06% peack (DIN/IEC/ANSI weighted)

±0,14% peak (DIN/IEC/ANSI unweighted)

0.04% RMS (JIS/NAB weighted)

0.08% RMS (JIS/NAB unweighted)

4-8-2 RECORD/REPRODUCE METHOD

Note: When measuring with this method, the recorded section should be reproduced repeatedly to obtain an average value. Be careful not to read the meter for those parts of the tape in which wow and flutter components in recording and reproducing cancel each other.

- Load a blank TEAC MTT-5061 test tape (C-60) or equivalent and record a 3000 Hz signal.
- Rewind the tape to the beginning of the recorded section, and play it.
- The wow and flutter should not be more than specifications below.

Specifications: ±0.06% peak (DIN/IEC/ANSI weighted)

±0,15% peak (DIN/IEC/ANSI unweighted)

0.05% RMS (JIS/NAB weighted) 0.09% RMS (JIST/NAB unweighted)

4-9 CASSETTE HOLDER

 Adjust the holder guide plate's mounting position so that when the cassette holder in which the cassette tape is inserted is closed, the parallel condition shown in fig. 4-9 is obtained.

4-8 ワウ・フラッタ

注意: テーブの巻始め、中間、巻終リでそれぞれ測定します。

4-8-1 再生法

- 1. 図 4-7 のようにワウ・フラッタ・メータをデッキに接続する
- 2. TEAC MXT-111テスト・テープまたは相当品を装てんして再生する.
- 3. ワウ・フラッタ値を測定する。

規格: 0.04%WRMS(聴感補正) 0.08%RMS(非聴感補正)

4-8-2 録再法

注意: 本測定法の場合,録音した部分を幾度かストップ,再生を繰り返し、大きく振れる平均的な値を読む.録音生を繰り返し、大きく振れる平均的な値を読む.録音した時と再生した時のワウ・フラッタの成分の位相がキャンセルしたところを読まないようにする.

- 4. ブランク・テスト・テープTEAC MTT-5061(C-60)または 相当品を装てんして、3000Hz信号を録音する。
- 5. テープの録音した部分を巻戻して再生する。
- 6. ワウ・フラッタ値は下記の規格から外れないこと。

規格: 0.05%WRMS(聴感補正) 0.09%RMS(非聴感補正)

4-9 カセット・ホルダ

1. カセットがそう入されたカセット・ホルダを閉じて、図4-9 に示す平行状態が得られるようにホルダ・カイド板の取付 位置を調整する。

Viewed from right side 右側面図

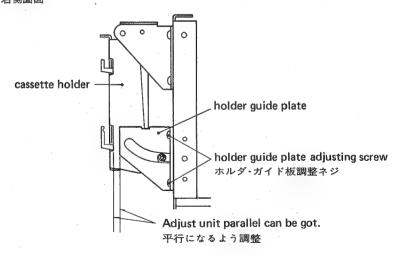


Fig. 4-9

4-10 DAMPER ADJUSTMENT

- Load a C-60 tape and close the cassette holder (with the door cover attached).
- Turn the air adjusting screw so that when pushing the EJECT button, the cassette holder opens smoothly and completely, taking 0.5 to 1.5 seconds.

4-11 LUBRICATION

Lubrication is only required when parts are replaced. For this purpose, use the oil and grease specified below.

Oil: TEAC TZ-255A motor oil (from TEAC TZ-255 oil kit), Mobil D.T.E. Oil Light, or equivalent

Grease: ORE-LUBE G1/3 or equivalent

- Apply a drop of oil with an oil applicator to a point about 1/3
 the way down the shaft (from the free end) of the flywheel, then
 insert the shaft into the capstan housing.
- 2. Apply a suitable amount of light grease to the well of the flywheel bearing.

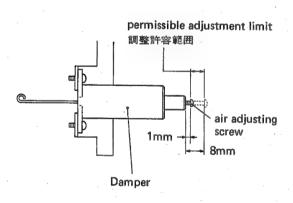


Fig. 4-10

4-10 ダンパ調整

- 1. C-60テープを装てんして、カセット・ホルタ (ドア付) を閉じる.
- 2. EJECT 釦を押した時, カセット・ホルダが0.5秒~1.5秒 の時間でなめらかにかつ完全に開くように, エア調整ネジ を回して調整する。

4-11 注油

注油は部品が交換される時のみ必要です。 注油には下記に明示 するオイルとグリースを使用します。

オイル: TEAC TZ-255Aモータ・オイル (TEAC TZ-255オイル・キットから) モービル $D \cdot T \cdot E$ オイル・ライト、または

グリース:オア・ルーブG1/3, または相当品

相当品

- 1. フライホイル軸の先端から約1/3下った軸面へ,注油器に てオイル1滴を注油後,フライホイル軸をキャプスタン・ ハウジングへそう入する.
- 2. 適量のグリースをフライホイル・ヘアリング受けへつける。

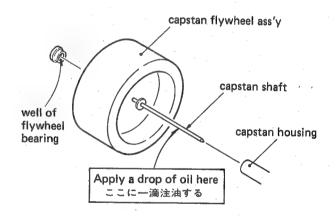


Fig. 4-11

4-12 VOLTAGE CONVERSION (FOR GENERAL EXPORT MODELS)

ALWAYS DISCONNECT THE POWER LINE CORD BEFORE MAKING THESE CHANGES.

- 1. Locate the voltage selector on the bottom of the SYNCASET.
- Using a regular (slot blade) screwdriver, turn the selector until the numerals corresponding the voltage requirements of your area appear.
- 3. We suggest you label the rear panel with the set AC line voltage.

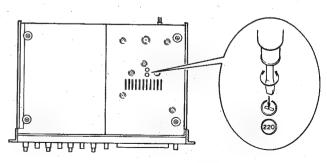


Fig. 4-12

5 AMPLIFIER SECTION CHECKS AND ADJUSTMENTS

アンプ部の確認と調整

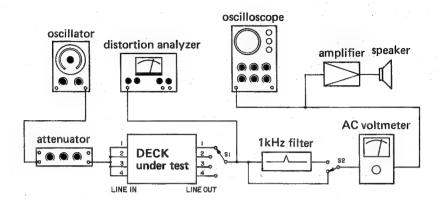


Fig. 5-1 Basic test setup 基本測定接続図

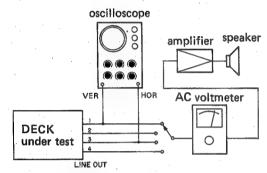


Figure shows measurements being performed on Ch-1 and Ch-3.

図はCh-I-Ch-3間測定を示す

Fig. 5-2 Test setup for azimuth check 位相測定接続図

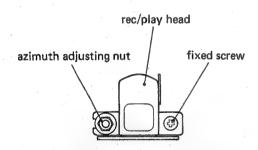


Fig. 5-3 Azimuth nut location 位相調整ナット




Fig. 5-4 Confirming phase relationship 位相

The head wiring between adjacent tracks are connected in opposite phase to improve crosstalk.

Therefore, when the test tape is played back, signals from tracks #1 and #2 will be in opposite phase but tracks #1 and #3 (or tracks #2 and #4) will be in the same phase.

When recorded and played back by the same Model 234, the signals between each track will be in the same phase as usual but crosstalk between tracks will be greatly improved.

本機は、クロストークをより改善するために、隣接間のトラックの配線を、図のようにして位相を逆にしています。

従って、テストテープを再生した場合は、1トラックと2トラックは逆位相で再生されます。また1トラックと3トラック(2トラックと4トラック)とでは、同位相で再生される事になります。

本体で録音し再生した場合、通常通リトラック間は同位 相で再生されトラック間のクロストークもより改善され て再生されます。

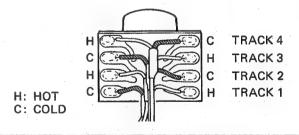


Fig. 5-5 REC/PLAY head wiring diagram 録/再ヘッド接続図

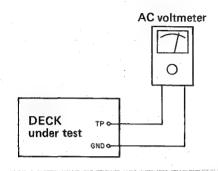


Fig. 5-6 Connections for steps 2-1 and 13-1 2- | 及び|3-|項の場合の接続

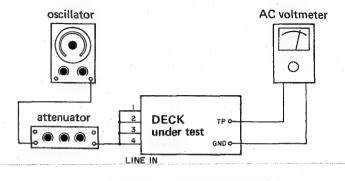


Fig. 5-9 Connections for items 23, 24 and 25 23、24及び25項の場合の接続

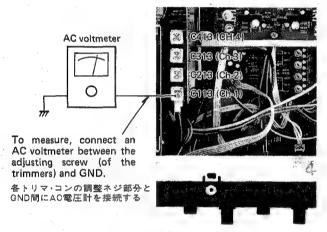


Fig. 5-7 Oscillator output check 発振器出力のチェック

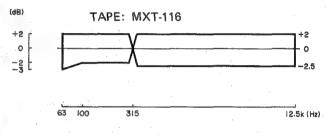


Fig. 5-10 Playback frequency response 再生周波数特性

Adjust C113, C213, C313 or C413 to obtain approx. 3 dB over-bias position.

CII3、C2I3、C3I3又はC4I3を調整して オーバー・バイアスでピークから約3dB下った点を求める

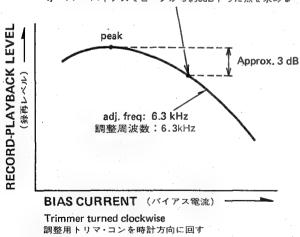


Fig. 5-8 Record bias adjustment バイアス調整

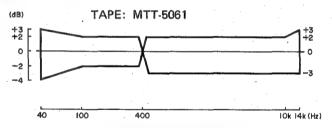


Fig. 5-11 Overall frequency response (NR: OUT) 録再周波数特性 NR:OUT

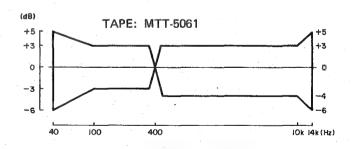


Fig. 5-12 Overall frequency response (NR: IN) 録再周波数特性 NR: IN

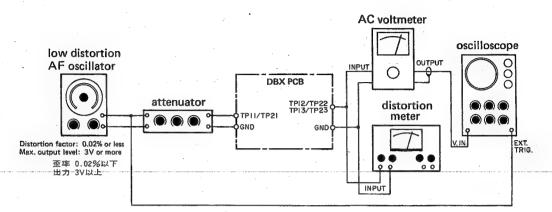


Fig. 5-13 DBX PCB adjustment setup DBX PCB調整時の接続

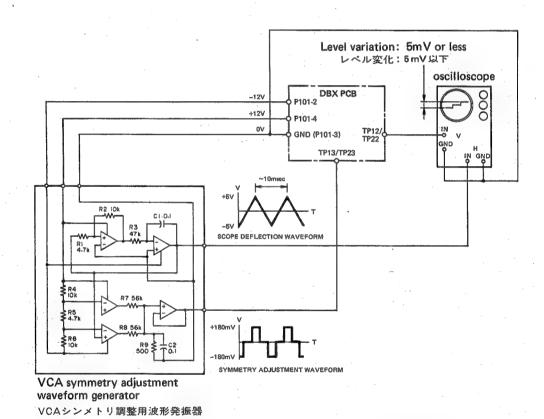


Fig. 5-14 VCA symmetry adjustment setup VCAシンメトリ調整時の接続




Fig. 5-15 RMS symmetry adjustment (incorrect) RMSシンメトリ調整・不良






Fig. 5-16 RMS symmetry adjustment (correct) RMSシンメトリ調整・良

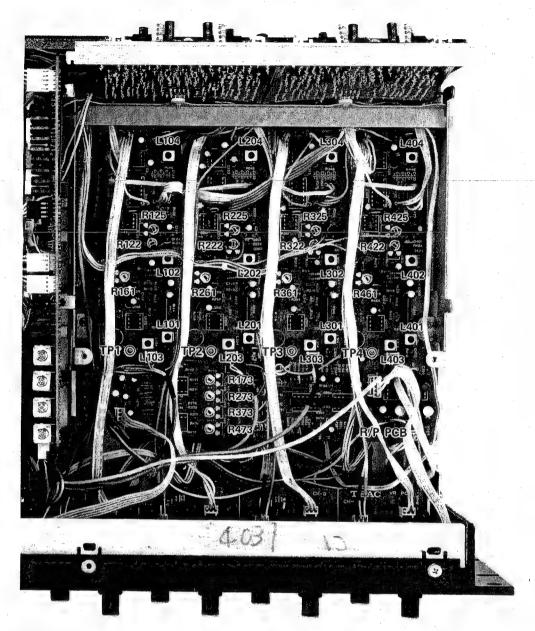

R/P PCB

Ch-1	Ch-2	Ch-3	Ch-4		
L101	L201	L301	L401	Bias trap (playback)	バイアス・トラップ(再生系)
L102	L202	L302	L402	Bias trap (playback)	バイアス・トラップ(再生系)
L103	L203	L303	L403	Bias trap (recording)	バイアス・トラップ(録音系)
L104	L204	L304	L404	Bias trap (playback)	バイアス・トラップ(再生系)
R122	R222	R322	R422	Playback equalization	再生イコライザ
R125	R225	R325	R425	Playback reference level	再生基準レベル
R161	R261	R361	R461	Record reference level	録音基準レベル
R173	R273	R373	R473	Meter level	メータ・レベル

Fig. 5-17 Adjustment and test point location (R/P PCB) 調整及びテスト・ポイント

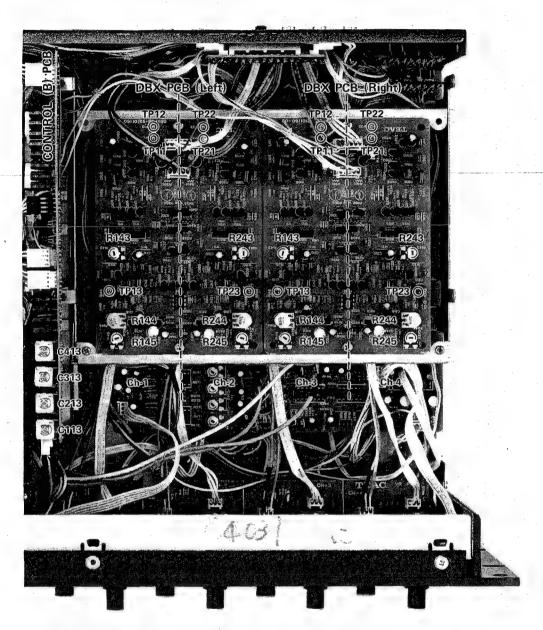

DBX PCB

Ch-1	Ch-2	Ch-3	Ch-4		
R143	R243	R143	R243	VCA symmetry	VCAシンメトリ
R144	R244	R144	R244	Nominal level	基準レベル
R145	R245	R145	R245	RMS symmetry	RMSシンメトリ

CONTROL (B) PCB

Ch-1	Ch-2	Ch-3	Ch-4		 · ·	
C113	C213	C313	C413	Bias	 バイアス	·

Fig. 5-18 Adjustment and test point location (DBX PCB, CONTROL (B) PCB) 調整及びテスト・ポイント

5-1 PRECAUTIONS

- 1. Before performing adjustments or checks, clean and demagnetize the entire tape path.
- 2. Make sure the deck is properly set for the voltage in your area.
- 3. The AC voltmeter used in the procedures must have an input impedance of 1 megachm or more.
- 4. 0 dB is referenced to 1 V.

5-2 PLAYBACK SYSTEM

CONTROLS/SWITCHES	Abb.	SETTINGS	CONTROLS/SWITCHES	Abb.	SETTINGS
PITCH CONTrol	PITCH	OFF	FUNCTION SELECT switch (1~4)	FUNC. SEL.	OFF
INPUT control (1~4)	INP.	Min.	METER switch	METER	TRK
OUTPUT control (1~4)	OUT.	Min.	CUE switch	CUE	STEREO
PAN control (1~4)	PAN	Any position	PHONES control	PHONES	Min.
OUTPUT SELECT switch	OUT. SEL.	TAPE	NOISE REDUCTION switch	NR	OUT
SYNC/INPUT switch	SYNC/INP.	INPUT	TRIM contrl (1~4)	TRIM	Min.

Table 1. Initial settings of playback system

Mode: PLAY . . . Except for item 5

Measuring point: LINE OUT terminals . . . Unless otherwise specified.

ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
	1-1	Connections: Fig. 5-2 Settings: Table 1 OUT. (Ea. Ch.): Max.	MXT-116 (12,5 kHz)	R/P head azimuth nut (Fig. 5-3)	Ea. Ch.: Max. output	
1. REC/PLAY head azimuth	1-2		MXT-116 (315 Hz)	Check	Between Ch-1/Ch-3: Between Ch-2/Ch-4: Phase: in phase (45° or less)	Refer to Figs. 5-4, 5-5
	1-3	,	<i>u</i>	Check	Between Ch-1/Ch-2: Between Ch-3/Ch-4: Phase: Out of phase (135° or more)	,,
	2-1	Same as above Connections: Fig. 5-6	MXT-116 (315 Hz reference level)	R125 (Ch-1) R225 (Ch-2) R325 (Ch-3) R425 (Ch-4)	TP11 (Left DBX PCB) TP21 (Left DBX PCB) TP11 (Right DBX PCB TP21 (Right DBX PCB)	(Ch-2): 3) (Ch-3):
2. Playback reference (nominal) level	2-2	"Connections: Fig. 5-1	,,	Check	Ea. Ch.: 0 dB ±1 dB* ¹ (0.891 V ~ 1.1 2V)	+1 +10 dB ±1dB against ref. output (-10 dB)
	2-3	,,	. ,,	OUTPUT cont. (Ea. Ch.)	Ea. Ch.: -10 dB (0.316 V) (ref. output)	
		After adjusting 2-3, check the left (specific position).	hat OUTPUT contro	l (ea. ch.) is set b	etween "7 and 8", when	counting from
	2-4	IMPORTANT: Do not distu adjustments	urb the above-adjuste s and checks are com	d settings of OUT	IPUT control until the re	emainder of the

ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
3. VU meter level	3-1	Same as above	Same as above	R173 (Ch-1) R273 (Ch-2) R373 (Ch-3) R473 (Ch-4)	VU meter (Ea. Ch.): 0VU	
4. Playback frequency response	4-1	Same as above	MXT-116	R122 (Ch-1) R222 (Ch-2) R322 (Ch-3) R422 (Ch-4)	Ea. Ch.: Standard: Fig. 5-10	
5. Playback S/N ratio	5-1	Same as above Mode: PLAY/PAUSE	. <u>-</u>	Check	Ea. Ch.: S/N: 49 dB min.	-10 dB is the reference level

5-3 MONITOR SYSTEM

CONTROLS/SWITCHES	Abb.	SETTINGS	CONTROLS/SWITCHES	Abb.	SETTINGS
PITCH CONTrol	PITCH	OFF	FUNCTION SELECT switch (1~4)	FUNC. SEL.	OFF
INPUT control (1~4)	INP.	Min.	METER switch	METER	TRK
OUTPUT control (1~4)	OUT.	*1	CUE switch	CUE	STEREO
PAN control (1~4)	PAN	Any position	PHONES control	PHONES	Min.
OUTPUT SELECT switch	OUT. SEL.	INPUT	NOISE REDUCTION switch	NR	OUT
SYNC/INPUT switch	SYNC/INP.	INPUT	TRIM control (1~4)	TRIM	Min.

^{*1} Specific position (Between "7 and 8". Refer to step 2-3.)

Table 2 Initial settings of the monitor system

Mode: STOP

Signal input points: LINE IN terminals . . . Except for item 9

Measuring points: LINE OUT terminals . . . Unless otherwise specified

	ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS	
6.	Min. LINE input level	6-1	Connections: Fig. 5-1 Settings: Table 2 INP. (Ea. Ch.): Max.	Ea. Ch.: 400 Hz/-10dB (0,316V) (ref. input)	Check	Ea. Ch.: 0 dB±2 dB* ² (0.794 V ~ 1.26 V)	+10 dB ±2 dB against ref. output (-10 dB)	
7.	PEAK LED threshold level	7-1	Same as above	Same as above	INPUT cont. (Ea. Ch.)	PEAK LED (Ea. Ch.): Lights when LINE OUT output is -2 dB ±2 dB (0.316 V ~ 0.631 V)*3 (Goes off when lit value drops -1 dB.)		
						*3+8 dB ±2 dB against (~10 dB)	ref. output	
		8-1	Same as above	Same as above	INPUT cont. (Ea. Ch.)	Ea. Ch.: -10 dB (0.316 V) (ref. output)		
8.	LINE reference		After adjusting 8-1, check that INPUT control is set between "7 and 8", when counting from the left (specific position).					
	(nominal) input level	8-2	IMPORTANT: Do not distr adjustments	urb the above-adjuste s and checks are comp		UT control until the ren	nainder of the	
		8-3	Same as 8-1 INP. (Ea. Ch.): Specified position	Same as 8-1	Check	VU meter (Ea. Ch.): 0 VU ±0.5 VU		
9	. Specified MIC input level	9-1	Same as above TRIM (Ea. Ch.): Max.	MIC/INST (Ea. Ch.): -60 dB (1.00 mV)	Check	Ea, Ch,: -10 dB ±2 dB (251 mV ~ 398 mV)	After checking, set each TRIM to min.	

ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS	
	10-1	Measurements should be ta No input should be applied Procedure for channel 1 is	to any channel other	r than the channe	el under measurement.		
	10-2	Same as 9-1 TRIM (Ea. Ch.): Min. METER: CUE PAN (Ch-1): Fully CCW	Ch-1: 400 Hz/~10 dB (0.316 V) (ref, input)	Check	CUE OUT (L)*4: -10 dB ±1 dB (282 mV ~ 355 mV) VU meter (CUE OUT L): 0 VU ±1 VU	** ** * * * * * * * * * * * * * * * *	
	10-3	PAN (Ch-1): Fully CW	,,,	Check	CUE OUT (R)*5; -10 dB ±1 dB (282 mV ~ 355 mV) VU meter (CUE OUT R): 0 VU ±1 VU	be 50 dB (min.) against ref. output (-10 dB)	
10. CUE OUT level	10-4	Adjust for equal L & R output at CUE OUT terminals	"	PAN cont. (Ch-1)	CUE OUT (L, R): -12.5 dB ±1 dB*6 (211 mV ~ 266 mV)	+6.5 dB ±1 dB against ref. output (-10 dB)	
					After adjusting, control about ±1 graduation from	ol should be within om middle.	
	10-5	PAN (Ch-1): Position pre-adjusted in step 10-4 CUE: MONO	••	Check	CUE OUT (L, R): Output is within ±1 dB of the above measured value when CUE is at STEREO.		
	10-6	PAN (Ch-1): Fully CCW		Check	CUE OUT (L, R): Approx16 dB*7 (158 mV)	*7 Approx6 dB against ref. output (-10 dB)	
11. Monitor S/N ratio	11-1	Same as above TRIM (Ea. Ch.): Max.	Ea. Ch.: No signal	Check	Ea. Ch.: S/N: 60 dB min.	-10 dB is the	
7. WOINTOI 5/14 18U0	11-2	TRIM (Ea. Ch.): Min.	. "	Check	Ea. Ch.: S/N: 75 dB min.	reference level.	

5-4 RECORDING SYSTEM

CONTROLS/SWITCHES	Abb.	SETTINGS	CONTROLS/SWITCHES	Abb.	SETTINGS
PITCH CONTrol	PITCH	OFF	FUNCTION SELECT switch (1~4)	FUNC. SEL.	ON
INPUT control (1~4)	INP.	*1	METER switch	METER	TRK
OUTPUT control (1~4)	OUT.	*2	CUE switch	CUE	STEREO
PAN control (1~4)	PAN	Any position	PHONES control	PHONES	Min.
OUTPUT SELECT switch	OUT. SEL.	TAPE	NOISE REDUCTION switch	NR	OUT
SYNC/INPUT switch	SYNC/INP.	SYNC	TRIM control (1~4)	TRIM	Min.

- *1 Specific position (Between "7 and 8". Refer to step 8-1.)
- *2 Specific position (Between "7 and 8"; Refer to step 2-3.)

Table 3 Initial settings of the recording and DBX systems

Mode: RECORD/PLAY ... Unless otherwise specified

Signal input points: LINE IN terminals

Measuring points: LINE OUT terminals . . . Unless otherwise specified

	ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
12.	Oscillator output	12-1	Connections: Fig. 5-7 Settings: Table 3 Mode: REC/PAUSE	_	Check	Measuring point: Refer to Fig. 5-7 Ea. Ch.: 38 V ±2V	
13.	Bias trap (recording)	13-1	Same as above Connections: Fig. 5-6		L103 (Ch-1) L203 (Ch-2) L303 (Ch-3) L403 (Ch-4)	R/P PCB: TP1 (Ch-1): TP2 (Ch-2): TP3 (Ch-3): TP4 (Ch-4): Min. bias leakage	
		14-1	Same as above FUNC. SEL.: Ch-1: OFF Others: ON	_	L101 L102 L104	Ch-1: Min. bias leakage	
14.	. Bias trap	14-2	FUNC. SEL.: Ch-2: OFF Others: ON	_	L201 L202 L204	Ch-2: Min, bias leakage	
	(playback)	14-3	" FUNC. SEL.: Ch-3: OFF Others: ON		L301 L302 L304	Ch-3: Min. bias leakage	
		14-4	FUNC. SEL.: Ch-4: OFF Others: ON	· _	L401 L402 L404	Ch-4: Min. bias leakage	
		15-1	When viewed from the top (minimum bias).	of the deck, initially	set C113, C213,	C313 and C413 fully co	unterclockwise
15	. Record bias	15-2	Same as 14-4 Mode: REC/PLAY FUNC. SEL. (Ea. Ch.): Tape: MTT-5061	Ea. Ch.: 6.3 kHz/-20 dB*8 (100 mV) *8-10 dB against ref. input (-10 dB)	C113 (Ch-1) C213 (Ch-2) C313 (Ch-3) C413 (Ch-4)	Ea. Ch.: Output level (record lowered to approx.) from the peak. See I	3 dB over-bias

ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
16. Record level	16-1	Same as above	Ea. Ch.: 400 Hz/-10 dB (0.316 V) (ref. input)	R161 (Ch-1) R261 (Ch-2) R361 (Ch-3) R461 (Ch-4)	Ea. Ch.: Output level (record and playback): -10 dB (0.316 V) (ref. output)	
17. Total harmonic distortion	17-1	Same as above	Same as above	Check	Ea. Ch.: 1.0% or less	,
18. Overall frequency response	18-1	Same as above	Ea.Ch.: 40 Hz ~ 14 kHz/ -30 dB*9 (31.6-mV) *2-20 dB against ref. input (-10 dB)	Check (Adjust)	Ea. Ch.: Standard: Fig. 5-11 Bias setting timmers pe ment of the bias (15-2) Total harmonic distort specified standard value	on should be
19. Erase efficiency	19-1	Same as above Connection: Fig. 5-1 (engage 1 kHz filter)	Ea. Ch.: 1 kHz/0 dB*10 (1V) *10+10 dB against ref. input (~10 dB)	Check	Ea. Ch.: The difference of pla levels between 1 kHz and its erased portion	recorded portion
20. Overall S/N ratio	20-1	Same as above Connection: Fig. 5-1	Ea. Ch.: 400 Hz/-10 dB (0.316 V) ↓ No signal	Check	Ea. Ch.: The difference of played-back output level, between 400 Hz recorded portionand no signal recorded portion: 45 dl min.	
	21-1	Same as above Mode: REC/PAUSE FUNC. SEL.: Ch-2: ON Others: OFF	Ch-2: 15 kHz/-10 dB (0.316 V),	Check	Ch-1: The difference betwe level (signal leakage fi output level (-10 dB)	om Ch-2) and ref.
	21-2	FUNC. SEL.: Ch-1 or Ch-3: ON Others: OFF	Ch-1 or Ch-3 (Whichever FUNC, SEL, is ON):	Check	Ch-2: The difference betwe level (signal leakage fi and ref, output level:	om Ch-1 or Ch-3)
21. Sync crosstalk	21-3	FUNC. SEL.: Ch-2 or Ch-4: ON Others: OFF	Ch-2 or Ch-4 (whichever FUNC. SEL. is ON):	Check	Ch-3: The difference betwee level (signal leakage fr and ref. output level:	om Ch-2 or Ch-4)
	21-4	FUNC. SEL.: Ch-3: ON Others: OFF	Ch-3: "	Check	Ch-4: The difference betwee level (signal leakage fr output level: 1 dB mir	om Ch-3) and ref.
	22-1	Measure each channel. Proc	edure for channel 1 i	s shown below.		
22. Crosstalk between channels	22-2	Same as 21-1 Connections: Fig. 5-1 (engage 1 kHz filter) Mode: REC/PLAY FUNC. SEL, (Ea. Ch.): ON	Ch-1: No signal. Other Ch's: 1 kHz/-10 dB (0.316 V)	Check	Ch-1: The difference between output level measured OUT terminal (signal channels) and ref. out 50 dB min.	at Ch-1 LINE leakage from other

5-5 DBX SYSTEM

Note: Continue with this section's checks and adjustments only after you are sure that "5-6 DBX PCB ADJUSTMENT" has been correctly performed.

Signal input points: LINE IN terminals

Measuring points: (ex.) TP11/TP21 indicates the following content. Refer to Fig. 5-18,

Left DBX PCB: TP11 ... Ch-1, TP21 ... Ch-2 Right DBX PCB: TP11 ... Ch-3, TP21 ... Ch-4

ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
	23-1	Connections: Fig. 5-9 Settings: Table 3 NR: IN Mode: REC/PAUSE	Ea. Ch.: 400 Hz/-10 dB (0.316 V) (ref. input)	Check	TP11/TP21: -10 dB (0.316 V)	
23. Encoding level	23-2	n	,,	Check	TP12/TP22: -10 dB ±1 dB (282mV ~ 355 mV) (ref. level (1))	Give actually- measured level as ref, level (1) for items 24 and 25
24. Encoding signal frequency	24-1	Same as above	Ea. Ch.; 400 Hz/-10 dB (0.316 V)	Check	TP12/TP22: Difference against ref. level (1): +0.2 dB ±1 dB	,
response	24-2	, ,	Ea. Ch.: 10 kHz/-10 dB (0.316 V)	Check	TP12/TP22: Difference against ref. level (1): -3.3 dB ±1 dB	
25. Encoding opera-	25-1	Same as above	Ea. Ch.: 400 Hz/–70 dB ^{*11} (316 μV)	Check	TP12/TP22: Difference against ref, level (1): -30 dB ±1 dB	*11 -60 dB against ref. input (-10 dB)
tion level	25-2		Ea. Ch.: 400 Hz/+10 dB ^{*12} (3.16 V)	Check	TP12/TP22: Difference against ref, level (1): +10 dB ±1 dB	*12 +20 dB against ref. input (-10 dB)
26. Decoding level	26-1	Same as above Connections: Fig. 5-1 NR: OUT Mode: REC/PLAY	Ea. Ch.: 400 Hz/-10 dB (0.316 V)	Check	OUTPUT (Ea. Ch.): Give record-playback output as ref, level (2) for next step	ref. level (2)
26. Decoding level	26-2	NR: IN	,,	Check	OUTPUT (Ea. Ch.): Difference against ref. level (2): within ±2 dB	
27. Distortion	27-1	Same as above	Same as above	Check	OUTPUT (Ea. Ch.): 1.5% or less	
28. S/N ratio	28-1	Same as above	Ea. Ch.: After making "no signal" re- cording, play its portion back	Check	OUTPUT (Ea. Ch.): Difference between no signal record-play- back output and ref. output (~10 dB): 80 dB min.	

5-6 DBX PCB ADJUSTMENT

Notes:

- Since the DBX PCB assembly has been precisely adjusted at the factory, this adjustment is not usually needed unless the trimmers have been changed, or certain PCB components have sustained damage.
- 2. Disconnect connectors J102/P102 on each DBX PCB. Turn the deck OFF to prevent accidental damage when disconnecting (or reconnecting). After disconnecting, set POWER switch to ON

to supply power via the connectors J101/P101 to the PCB.

3. TP11/TP21 in the tables below indicate the following contents (example). Refer to Fig. 5-18.

 Left DBX PCB

 \[
 \text{TP11 . . . Ch-1} \\
 \text{TP21 . . . Ch-2} \\
 \text{TP11 . . . Ch-3} \\
 \text{TP21 . . . Ch-4}
 \]

5-6-1 ENCODING ADJUSTMENT

Mode: REC/PAUSE

ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
1. RMS SYM	1-1	Connections: Fig. 5-13	TP11/TP21: 100 Hz/300 mV	R145/R245	TP13/TP23: Adjust for clean 200 Hz sine-wave	Refer to Fig's 5-15 and 5-16
2. Encoding level	2-1	Same as above	TP11/TP21: 400 Hz/300 mV	R144/R244	TP12/TP22: 300 mV	
3. VCA SYM	3-1	Connections: Fig. 5-14 Short TP11/TP21 to GND.	TP13/TP23: Symmetry adj. waveform	R143/R243	TP12/TP22: A relatively straight I the scope (Level variation: 5 m	
4. Encoding single frequency	4-1	Connections: Fig. 5-13 Remove TP11/TP21 short- circuit,	TP11/TP21: 100 Hz/300 mV	Check	TP12/TP22: 290 mV ~ 325 mV	,
response	4-2	"	TP11/TP21: 10 kHz/300 mV	Check	TP12/TP22: 194 mV ~ 217 mV	
	5-1	Same as above	TP11/TP21: 400 Hz/300 μV	Check	TP12/TP22: 8.96 mV ~ 10,1 mV	
5. Encoding opera- tion level	5-2	,	TP11/TP21: 400 Hz/3.0 V	Check	TP12/TP22: 0.896 V ~ 1.01 V Distortion: 0.3% or less	

5-6-2 DECODING ADJUSTMENT

Mode: STOP

ITEM	STEP	SETTINGS	INPUT SIGNAL	ADJUST (or CHECK)	MEASURING POINT: RESULT	REMARKS
6. RMS SYM	RMS SYM 6-1 Connections: Fig. 5-13		TP11/TP21: 100 Hz/300 mV	Check	TP13/TP23: Adjust for clean 200 Hz sine-wave	Refer to Fig's 5-15 and 5-16
7. Decoding level	7-1	Same as above	TP11/TP21: 400 Hz/300 mV	Check	TP12/TP22: 260 mV ~ 337 mV	
8. VCA SYM	8-1	Connections: Fig. 5-14 Short TP11/TP21 to GND	TP13/TP23: Symmetry adj. waveform	Check	TP12/TP22: A relatively straight horizontal line on the scope (Level variation: 5 mV or less)	
9. Decoding single frequency	9-1	Connections: Fig. 5-13 Remove TP11/TP21 short- circuit	TP11/TP21: 100 Hz/300 mV	Check	TP12/TP22: 261 mV ~ 329 mV	
response	9-2	"	TP/TP21: 10 kHz/300 mV	Check	TP12/TP22: 504 mV ~ 634 mV	
10. Decoding opera-	10-1	Same as above	TP11/TP21: 400 Hz/9.49 mV	Check	TP12/TP22: 267 μV ~ 337 μV	
tion level	10-2	••	TP11/TP21: 400 Hz/0.949 V	Check	TP12/TP22: 2.67 V ~ 3.37 V	

5-1 注意

- 1. アンプ部の調整の前に、消去ヘッド、緑/再ヘッド、テープ走行部分それぞれを充分消磁し、クリーナ液で清掃して下さい。
- 2. レベル計は入力インビーダンス $1\,\mathrm{M}\,\Omega$ 以上のものを使用して下さい。
- 3.0dB=1V

5-2 再生系

		· · · · · · · · · · · · · · · · · · ·	
PITCH CONT スイッチ/つまみ	OFF	FUNCTION SELECT スイッチ(1~4)	OFF
INPUT つまみ(1~4)	最小	METER スイッチ	TRK
OUTPUT つまみ(1~4)	最小	CUE スイッチ	STEREO
PAN つまみ(1~4)	任意	PHONES つまみ	最小
OUTPUT SELECT スイッチ	TAPE	NOISE REDUCTION スイッチ	OUT
SYNC/INPUT スイッチ	INPUT	TRIM つまみ(1~4)	最小

表 1 再生系予備設定

モード: PLAY (第5項を除く)

測定個所:特に指示の無い場合はLINE OUT端子とする。

調整項目		準備 · 設定	入力信号	調整個所	測定個所 • 調整値	備	考
	1-1	接続:Fig.5·2参照 設定:表1 OUTPUTつまみ(各ch): 最大	MXT-116 (12.5kHz区分)	録/再ヘッドの アジマス調整ナ ット(Fig.5-3)	各ch: 搬大出力		
1. 録/再ヘッド・ アジマス調整	1-2	同上	MXT-116 (315Hz区分)	チェック	ch1—ch3間: ch2—ch4間: 位相:同位相(45°以下)	Figs. 5-4 参照	, 5-5
	1-3	同上	同上	チェック	ch1—ch2間: ch3—ch4間: 位相:逆位相(135°以上)	同	Ŀ
	2-1	同 上 接続:Fig.5-6参照	MXT-116 (315Hz/基準レベル区分)	R125 (ch1) R225 (ch2) R325 (ch3) R425 (ch4)	TP11 (左 DBX PCB) (ch1 TP21 (左 DBX PCB) (ch2 TP11 (右 DBX PCB) (ch3 TP21 (右 DBX PCB) (ch4):):	-10dB -10dB -10dB -10dB
2. 再生基準レベル	2-2	同 上 接続:Fig.5-1参照	同 上	チェック	各ch: 0dB±1dB*1 *1基準出力(-10dB)に対し	+ 10dB ± 1	1dB
	2-3	同上	同上	OUTPUTつまみ (各ch)	各ch:-10dB(基準出力) 調整後,つまみ位置は目標 こと(規定位置)	坠7 − 8 階	にある
3. メータ・レベル セット	3-1	同 上 OUTPUTつまみ(各ch): 規定位置(2-3項)	同上	R173 (ch1) R273 (ch2) R373 (ch3) R473 (ch4)	VUメータ(各ch): 0VU		
4. 再生周波数特性	4-1	周 上	MXT-116	R122 (ch1) R222 (ch2) R322 (ch3) R422 (ch4)	各ch: 規格: Fig.5-10		
5 . 再生S/N	5-1	同 上 モード:PLAY/PAUSE		チェック	各ch: S/N:49dB以上	基準レイ -10dB	

5-3 モニタ系

PITCH CONT スイッチ/つまみ	OFF	FUNCTION SELECT スイッチ(1~4)	OFF
INPUT つまみ(1~4)	最小	METER スイッチ	TRK
OUTPUT つまみ(1~4)	規定位置*	CUE スイッチ	STEREO
PAN つまみ(1~4)	任意	PHONES つまみ	最小
OUTPUT SELECT スイッチ	INPUT	NOISE REDUCTION スイッチ	OUT
SYNC/INPUT スイッチ(1~4)	INPUT	TRIM つまみ(1~4)	最小

* 目盛7-8間, 2-3項参照

表 2 モニタ系予備設定

±- ⊬:STOP

信号入力個所:LINE IN端子(第9項を除く)

測定個所:LINE OUT端子(特に指示のある場合を除く)

調整項目		準備・設定	入力信号	調整個所	測定個所 • 調整値	備考
LINE最小入力 8 レベル	6-1	接続: Fig.5-1参照 設定:表2 INPUTつまみ(各ch): 最大	各ch: 400Hz/-10dB (基準入力)	チェック	各ch: 0dB±2dB*2 *2基準出力(-10dB)に対し	+10dB±2dB
7.PEAK LEDの 7. 点灯レベル	7-1	同上	間 上	INPUTつまみ (各ch)	PEAK LED(各ch): LINE OUT出力が-2dB (点灯レベルより1dB低い *3基準出力(-10dB)に対し	トレベルの時消灯
LINE基準入力	8-1	同上	同 上	INPUTつまみ (各ch)	各ch: -10dB(基準出力) 調整後, つまみ位置は目標 こと (規定位置)	※ 7 - 8 間にある
レベル	8-2	問 上 INPUTつまみ(各ch): 規定位置(8-1項)	同 上	チェック	VUメータ(各ch): 0VU±0.5VU	
g MIC基準入力 レベル	9-1	同 上 TRIMつまみ(各ch): 最大	MIC/INST(各ch): -60dB	チェック	各ch:-10dB±2dB	測定後は各TRIM つまみを最小にして おくこと。
	10-1	測定は各チャネル毎に行ない ch1測定の場合を10-2項~10-	ヽ,測定していない他チャネル 6項に示す。	vの入力は切っておく	くこと。	
CUE OUT	10-2	同 上 TRIMつまみ(各ch): 最小 METERスイッチ: CUE PANつまみ(chl): 左一杯	ch1:400Hz/-10dB (基準入力)	チェック	CUE OUT (L)*4: -10dB±1dB VUメータ(CUE OUT L): 0VU±1VU	*4の時はRchの *5の時はLchの CUE OUT 端子 に於けるクロス トークは基準出 カ(-10dB) に
(統<)	10-3	同 上 PANつまみ(chl): 右一杯	同上	チェック	CUE OUT(R)*5: -10dB±1dB VUメータ(CUE OUT R): 0VU±1VU	対し 50dB以上

調整項目		準備・設定	入	カ	信	号	調整個所	測定個所 • 調整値	備考
(統合)	10-4	同 上 PANつまみ(ch1): ほぼ中央		同	上		PANつまみ (ch1)	CUE OUT L, Rの出力が等し PANつまみを調整後下記をラ CUE OUT (L, R): -12.5dE *6基準出力(-10dB)に対し- PANつまみ位置: 中央より	Fェックする B±1dB* ⁶ -2.5dB±1dB
CUE OUT 10. レベル	10-5	同 上 PANつまみ(chl): 10-4項での調整位置		同	上		チェック	CUE OUT (L, R): CUEスイッチをSTEREO。 えた時の出力レベル変化	
	10-6	同 上 CUEスイッチ:MONO PANつまみ(ch1): 右又は左一杯	-	同	-±		チェック	CUE OUT (L, R共):約-16 *7基準出力(-10dB)に対し	
11. モニタS/N	11-1	同 上 TRIMつまみ(各ch): 最大	各ch:			無信号	チェック	各ch: S/N 60dB以 上	基準レベルは
11. EL 75/N	11-2	同 上 TRIMつまみ(各ch): 最小		同	上		チェック	各ch: S/N 75dB以上	-10dB

5-4 録音系

PITCH CONT スイッチ/つまみ	OFF	FUNCTION SELECT スイッチ(1~4)	ON
INPUT つまみ(1~4)	規定位置*	METER スイッチ	TRK
OUTPUT つまみ(1~4)	規定位置**	CUE スイッチ	STEREO
PAN つまみ(1~4)	任意	PHONES つまみ	最小
OUTPUT SELECT スイッチ	TAPE	NOISE REDUCTION スイッチ	OUT
SYNC/IPUT スイッチ	SYNC	TRIM つまみ(1~4)	最小

^{*} 目盛7-8間,8-1項参照

表 3 録音系及びDBX系予備設定

モード:REC/PLAY(特に指示のある場合を除く)

信号入力個所:LINE IN端子

測定個所:LINE OUT端子(特に指示のある場合を除く)

調整項	1	準備・設定	入力信号	調整個所	測定個所 • 調整值	備考
12. 発振器出力	12-1	接続:Fig.5-7参照 設定:表 3 モード: REC/PAUSE		チェック	測定個所: Fig.5-7参照 各ch 38V±2V	
録音系 13. バイアス・トラッ プ調整	13-1	同 上 接続: Fig.5-6参照		L103 (ch1) L203 (ch2) L303 (ch3) L403 (ch4)	R/P PCB TP1 (ch1): TP2 (ch2): TP3 (ch3): TP4 (ch4): パイアス漏れ最小	

^{**}目盛7-8間, 2-3項参照

調整項目		準備・設定	入力信号	調整個所	測定個所・調整値	備考
	14-1	同 上 FUNCTION SELECT スイッチ: ch1 OFF 他ch ON		L101 L102 L104	ch1 バイアス漏れ最小	
再生系 14. バイアス・トラッ	14-2	同 上 FUNCTION SELECT スイッチ: ch2 OFF 他ch ON	<u> </u>	L201 L202 L204	ch2 パイアス漏れ最小	
プ調整	14-3	同 上 FUNCTION SELECT スイッチ: ch3 OFF 他ch ON		L301 L302 L304	ch3 パイアス漏れ最小	
	14-4	同 上 FUNCTION SELECT スイッチ: ch4 OFF 他ch ON		L401 L402 L404	ch4 パイアス漏れ最小	
	15-1	C113, C213, C313, C413はデ	ッキ上面から見て反時計方向-	一杯(バイアス値最小	h)にしておく	
15. パイアス・セット	15-2	14-4と同 モード: REC/PLAY FUNCTION SELECT スイッチ(各ch): ON テーブ: MTT-5061	各ch: 6.3kHz/-20dB*8	C113 (ch1) C213 (ch2) C313 (ch3) C413 (ch4)	各ch: オーバー・パイアス値 約3dB (Fig.5-8)	, ,
16. 録音基準	16-1	同上	各ch: 400Hz/-10dB (基準入力)	R161 (ch1) R261 (ch2) R361 (ch3) R461 (ch4)	各ch, 録再出力: -10dB(基準出力)	
17. 総合歪率	17-1	同上	同上	チェック	各ch: 1.0%以下	
18. 録再周波数特性	18-1	同上	各ch: 40Hz~14kHz/ -30dB*9	チェック	各ch: 規格Fig.5-11	* ⁹ 基準入力(-10dB) に対し-20dB
			-30dB	(調整)	パイアス・セット用トリマ(総合歪率が規格内に入ってい	
19. 消去率	19-1	同上 接続: Fig.5-1 (1kHz B.P.F.使用)	各ch: 1kHz/0dB*10	チェック	各ch: 録音部分を再生した時のレベルを基準レベルとし、録音部分を消去しそれを再生した時の出力レベルとの差70dB以上	* ¹⁰ 基準入力 (ー 10dB) に対し, +10dB
20. 総合S/N	20-1	同 上 接続: Pig.5-1	各ch: 400Hz/-10dB 無信号	チェック	各ch: 400Hz録再出力と無信号録 再出力との差 45dB以上	•

調整項目		準備・設定	入力信号	調整個所	測定個所 • 調整值 備 考
	21-1	同 上 モード: REC/PAUSE FUNCTION SELECT スイッチ: ch2 ON 他ch OFF	ch2: 15kHz/-10dB	チェック	ch1: 測定された信号 (ch2 からの漏れ信号) レベ ルと基準出力 (-10dB) との差 1dB以上
シンク・ 21. クロストーク	21-2	同 上 FUNCTION SELECT スイッチ: chl 又は ch3 ON 他ch OFF	ch1 又は ch3 (FUNCTION SELECT スイッチがONのch): 15kHz/-10dB	チェック	ch2: 測定された信号(ch1 又は ch3からの漏れ信号)レベルと基準出力(-10dB)との差 1dB以上
	21-3	同 上 FUNCTION SELECT スイッチ: ch2 又は ch4 ON 他ch OFF	ch2 又は ch4. (FUNCTION SELECT スイッチがONのch); 15kHz/-10dB	チェック	ch3: 測定された信号(ch2 又はch4からの漏れ信号)レベルと基準出力(-10dB)との差 1dB以上
	21-4	同 上 FUNCTION SELECT スイッチ: ch3 ON 他ch OFF	ch3: 15kHz/-10dB	チェック	ch4: 測定された信号 (ch3 からの漏れ信号) レベ ルと基準出力 (-10dB) との差 1dB以上
	22-1	測定は各チャネル毎に行なっ)。chlの場合を下に示す。		
チャネル間 22. クロストーク	22-2	同 上 接続: Fig.5-1 (1kHz B.P.F.使用) モード: REC/PLAY FUNCTION SELECT スイッチ(各ch): ON	ch1: 無信号 他ch: 1kHz/-10dB	チェック	ch1: ch1 LINE OUT 端子で測定した録再出力 (他チャネルからの漏れ信号)レベルと基準 出力(-10dB)との差

5-5 DBX系

信号入力個所:LINE IN端子

測定個所:(例) TP11/TP21は下記を意味する。

Fig.5-18参照

左側 DBX PCB { TP11······ch1 TP21······ch2

右側 DBX PCB { TP11······ch3 TP21······ch4

			(1121	<u> </u>			
Ŀ	調整項目		準備・設定	入力信号	調整個所	測定個所 • 調整値	備考
2	3. エンコーダ・ ンベル	23-1	接続: Fig. 5-9 設定: 表3 NOISE REDUCTION スイッチ: IN モード: REC/PAUSE	各ch: 400Hz/-10dB (基準入力)	チェック	TP11/TP21: -10dB	
		23-2	同上	同上	チェック	TP12/TP22: -10dB±1dB	実測値を24、25 項の基準レベル (1)とする
,	エンコーダ・ 4. 単一周波数応答	24-1	同上	各ch: 400Hz/-10dB	チェック	TP12/TP22: 基準レベル(1)との差 +0.2dB±1dB	
	チェック	24-2	同上	各ch: 10kHz/-10dB	チェック	TP12/TP22: 基準レベル(1)との差 -3.3dB±1dB	
2	エンコーダ・ 5. 動作レベル・	25-1	同上	各ch: 400Hz/70dB*11	チェック	TP12/TP22: 基準レベル(1)との差 -30dB±1dB	* ¹¹ 基準入力 (- 10dB) に対して -60dB
	チェック	25-2	同上	各ch: 400Hz/+10dB*12	チェック	TP12/TP22: 基準レベル(1)との差 +10dB±1dB	* ¹² 基準入力(- 10dB) に対して +20dB
2	デコーダ・ 6. レベル	26-1	同 上 接続: Fig.5-1 モード: REC/PL'AY NOISE REDUCTION スイッチ: OUT	各ch: 400Hz/-10dB	チェック	OUTPUT(各ch): 録再出力を次項の基準レ ベル(2)とする	
		26-2	同 上 NOISE REDUCTION スイッチ: IN	同上	チェック	OUTPUT(各ch): 基準レベル(2)との差 ±2dB以内	
2	7. 錄再歪率	27-1	問 上	同上	チェック	OUTPUT(各ch): 歪率1.5%以下	,
2	8. 錄再S/N	28-1	同上	各ch: 無信号録音後再生する	チェック	OUTPUT(各ch): 無信号録再出力と基準出 カ(-10dB)との差 80dB以上	

5-6 DBX基板単体調整

注1. DBX基板単体は通常調整の必要はありません。 もし調整する場合は以下の要領で行なって下さい。

注2、 電源を切って、各DBX基板のコネクタJ102/P102を 外して下さい。 注3. (例)表内のTP11/TP21は下記を意味します。Fig.5-18参照

左側 DBX PCB { TP11 ······ch1 TP21 ······ch2

右側 DBX PCB { TP11······ch3 TP21······ch4

5-6-1 エンコーダ調整 (モード: REC/PAUSE)

調整項目		準備・設定	入力信号	調整個所	測定個所。調整値	備考	
1. RMS SYM調整	1-1	接続: Fig.5-13	TP11/TP21; 100Hz/300mV	R145/R245	TP13/TP23: 出力波形が200Hzの正弦波 になるよう調整する	Figs. 5-15、5-16	
2. 基準レベル調整	2-1	同上	TP11/TP21: 400Hz/300mV	R144/R244	TP12/TP22: 300mV		
3. VCA SYM調整	3-1	接続: Fig.5-14 TP11/TP21をGNDへ短絡 すること	TP13/TP23: 階段波	R143/R243	TP12/TP22: モニタ波形がほぼー直線 (5r.	nV以下) になる	
4 周波数特性 チェック	4-1	接続: Fig.5-13 TP11/TP21とGNDの短絡 を外すこと	TP11/TP21: 100Hz/300mV	チェック	よう調整する TP12/TP22: 290mV~325mV		
	4-2	同上	TP11/TP21: 10kHz/300mV	チェック	TP12/TP22: 194mV~217mV		
ェンコード効果	5-1	同上	TP11/TP21: 400Hz/300µV	チェック	TP12/TP22: 8.96mV~10.1mV		
チェック	5-2	同 上	TP11/TP21: 400Hz/3.0V	チェック	- 0.30mV ~ 10.1mV TP12/TP22: 0.896V~1.01V 亜率 0.3%以下		

5-6-2 デコーダ調整 (モード:STOP)

	調整項目	1	準備・設定	入力信号	調整個所	測定個所・調整値	備考	
6	テェック	6-1	接続: Fig.5-13	TP11/TP21: 100Hz/300mV	チェック	TP13/TP23: 出力波形が200Hzの正弦波 になっていること	Figs. 5-15、5-1	
7.	チェック	7-1	同 上 接続: Fig 5.14	TP11/TP21: 400Hz/300mV	チェック	TP12/TP22; 260mV~337mV		
8.	VCA SYM・ チェック	8-1	接続: Fig.5-14 TP11/TP21をGNDへ短絡 すること	TP13/TP23: 階段波	チェック	TP12/TP22: モニタ波形がほぼ一直線(5mV以下)になっ		
8. 周波数特性 チェック		9-1	接続: Fig.5-13 TP11/TP21とGNDの短絡 を外すこと	TP11/TP21: 100Hz/300mV	チェック	いること TP12/TP22: 261mV~329mV		
		9-2	同上	TP11/TP21: 10kHz/300mV	チェック	TP12/TP22: 504mV-634mV		
の デコード効果 チェック	10-1	同上	TP11/TP21: 400Hz/9.49mV	チェック	TP12/TP22: 267μV~337μV			
		10-2	间上	TP11/TP21: 400Hz/0.949V	チェック	TP12/TP22: 2.67V~3.37V		

6 CIRCUIT DESCRIPTION

同路説明

The circuitry of the 234 consists of the following 4 major circuits, each with distinct functions:

(1) Mode Control Circuitry

This controls the basic mechanical transport functions PLAY, RECORD, PAUSE, FF, REW and STOP. It is mounted on the CONTROL (A) PCB.

(2) Auxiliary Function Control Circuitry

Consists of 2 main circuits:

Punch-in/out: This circuit, also mounted on the CONTROL (A) PCB, automatically switches between playback and recording or vice versa during punch-in/out.

Memory, Zero Return: Controls the Memory and Zero Return functions, using the tape counter for STOP, PLAY and REW or for Block Repeat, Zero Return Play etc. Mounted on SW (A) PCB and SW (B) PCB.

(3) Amp Control Circuitry

Controls the switching of each channel between playback and recording and display of its status, head switching, amp muting, meter switching etc. The respective circuits are mounted on the SW (A), SW (B), CONTROL (B), CONTROL (C), POWER SUPPLY and R/P PCBs.

(4) Amp Circuitry

This circuitry is connected with input and output of the audio signal, playback and recording. It consists of playback, recording and mike amps, meter, monitor output and dbx NR circuits etc., mounted on the MIC AMP, R/P, dbx, VR PCBs.

Each circuit is described in detail below. Unless specified otherwise, the deck is placed in STOP mode. Numbers given for voltages, operation time etc. are reference values.

6-1 Mode Control Circuit

This circuit consists of the following parts: A system control IC (U501) which stores the operating instructions and generates the signals required to carry out these instructions, a circuit controlling the mechanism drive motor which determines the transport's operating mode (U506-1/2, Q504-Q506, Q511, Q512), a circuit controlling the reel motor (U506-1/2, Q509, Q510, Q513, Q514), gate units required for logic operations, etc.

6-1-1 System Control IC (U501)

This IC's inputs are wired as shown in fig. 6-2. By setting the input command terminals (f.e. pin 1, PLAY) to logic level "L", the commands are stored in the IC and logic level "H" signals are output from the output terminals corresponding to the command (f.e. pin 12, PLAY OUT).

For details about this system control IC, see below.

234の回路は、その機能で分けると次の四つの回路で構成されています。

(1) モード制御回路

PLAY, RECORD, PAUSE, F.FWD, REW及びSTOP の基本 的機械動作を制御します. 回路はCONTROL (A) PCBに マウ ントされています.

(2) 付属機能制御回路

PUNCH IN/OUT……再生から録音に、或いは録音から再生に自動的に切替える回路で、CONTROL (A) PCBにマウントされています。

MEMORY, ZERO RETURN……テーブ・カウンタを利用してテーブのSTOP, PLAY, REW或いはブロック・リピート, ゼロ・リターン・プレイなどの動作を制御します。回路はSW (A) PCB及びSW (B) PCBにマウントされています。

(3) アンプ制御回路

各チャネルの録音・再生切替及びその動作状態の表示, ヘッドの切換, アンプのミューティング, VUメータ切換などを行ないます. 関係回路はSW (A), SW (B), CONTROL (B), CONTROL (C), POWER SUPPLY 及び R/P各PCBにマウントされています.

(4) アンプ回路

オーディオ信号の入出力、再生、録音に関係する回路で、再生アンプ、録音アンプ、マイク・アンプ、メータ回路、モニタ出力回路、dbx NR 回路などで構成されています。回路は MIC AMPL、R/P、dbx、VR各PCBにマウントされています。

以下に各回路について説明します。説明中特に断りのない場合、 デッキの最初の状態はSTOPモートとします。尚、文中の電圧 値、動作時間等は参考値です。

6-1 モード制御回路

この回路は、命令動作を記憶し、命令を実行するために必要な信号を発生するシステム制御 IC (U501)、メカの動作モードを決定するメカニズム・ドライブ・モータを制御する回路 (U506-1/2, Q504~Q506, Q511, Q512)、リール・モータを制御する回路 (U506-1/2, Q509, Q510, Q513, Q514)、及びロジック操作に必要なゲート回路などによって構成されています。

6-1-1 システム制御 IC (U5OI)

システム制御ICの大力回路は図6-2のように接続されています。 入力命令端子(例。ビン1, PLAY) を論理レベル"L"にすること により、その命令は IC 内部に記憶され、その命令に対応する出 力端子(例。ビン12, PLAY OUT)に論理レベル"H"の信号が出 力されます。

システム制御ICの詳細については下記を参照してください。

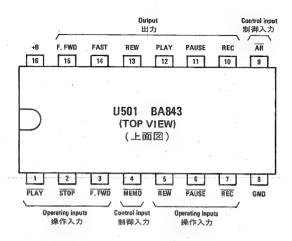


Fig. 6-1 Pin assignments 端子配列

	Pin No.	Pin name	F	unction				
	1	PLAY	Playback start signal input terminal.	Signal level: L				
	2	STOP	Stop signal input terminal	Signal level: L				
Operation	3	F. FWD	Fast-forward signal input terminal.	Signal level: L				
inputs	5	REW	Rewind signal input terminal.	Signal level: L				
	6	PAUSE	Pause signal input terminal.	Signal level: L				
	7.	REC	Record signal input terminal.	Signal level: L				
Control	4	MEMO	Memory input terminal (resets rewind mode when at L level)					
inputs	9 -	AR	Record inhibit signal input terminal (L level: record inhibited, H level: record enabled)					
	10	REC	H-level signal output terminal during record/playback or record/pause mode					
	11	PAUSE	H-level signal output terminal during pause mode					
Output	12	PLAY	H-level signal output terminal during playback mode.					
power	13	REW	H-level signal output terminal during rewind mode.					
	14	FAST	H-level signal output terminal during rewind or fast-forward mode.					
	15	F. FWD	H-level signal output terminal during fast-forward mode.					
	8	GND	Ground terminal.					
Power	16	+B	Power supply terminal (standard: +5 V ±	10%)				

	端子	端子名	機能		
	1	PLAY	再生の開始を命令する入力端子 命令信号はLレベル		
	2	STOP	動作の停止を命令する入力端子 命令信号はLレベル		
	3	F.FWD	早送りを命令する入力端子 命令信号はしレベル		
,,,	5	REW	巻戻しを命令する入力端子 命令信号はLレベル		
	6	PAUSE	一時停止を命令する入力端子 命令信号はLレベル・		
	7	REC	録音を命令する入力端子 命令信号はLレベル		
_	4	MEMO	メモリー入力端子(Lレベルの時 REWモードをリセット)		
制御入力	. 9	AR	録音防止入力端子(Lレベルの時 録音不可、Hレベルの時 録音可)		
	10	REC	REC/PLAY又はREC/PAUSEモード時、Hレベル信号がでる出力端子		
	, 11	PAUSE	PAUSEモードの時、Hレベル信号がでる出力端子		
+-	12	PLAY	PLAYモードの時、Hレベル信号がでる出力端子		
73	//	73	13	REW	REWモード時、Hレベル信号がでる出力端子
	14	FAST	REW又はF.FWDモードの時、Hレベル信号がでる出力端子		
	15	F.FWD	F.FWDモードの時、Hレベル信号がでる出力端子		
福	8	GND	接地端子		
<i>117</i> 5.	16	+B	電源供給端子(標準值+5V±10%)		
	カカカ	カ 2 3 5 6 7 7 4 9 10 11 12 13 14 15 8	1 PLAY 2 STOP 3 F.FWD 5 REW 6 PAUSE 7 REC 4 MEMO 9 AR 10 REC 11 PAUSE 12 PLAY 13 REW 14 FAST 15 F.FWD 8 GND		

Table 6-1 Functions 機能表

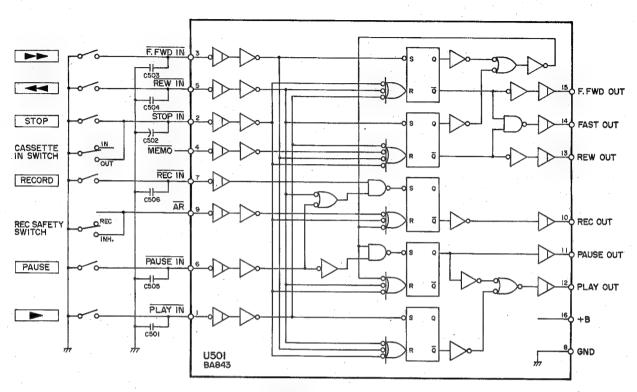


Fig. 6-2 Block diagram ブロック・ダイヤグラム

Output signal	REC	PAUSE	PLAY	REW	FAST	F. FWD	
Input signal "L"	Pin 10	Pin 11	Pin 12	Pin 13	Pin 14	Pin 15	Operating mode
PLAY	L	L	Н	L	L	L	PLAY mode
STOP	L	L	L	L	L	L	STOP mode
F. FWD	L	L	L	L	Н	Н	F. FWD mode
REW	L	L	L	Н	Н	L	R EW mode
PAUSE	L	н	L	L	L	L	PAUSE mode
REC and PLAY	H	L	Н	L	L	L	REC/PLAY mode
REC and PAUSE	Н	Н	L	L	L	L	REC/PAUSE mode

- Notes 1. The mode is set at the decaying edge of the input signal waveform.
 - 2. The output retains the current mode until an input signal indicating a different mode is received.
 - 3. Output REC remains at L as long as input AR is L.
 - 4. Output REW remains at L as long as input MEMO is L.
 - 注1. 各モードは入力信号波形の立ち下がり部でセットされます。
 - 2. 各出力は、その出力モートと異なるモートの入力信号が与えられるまで出力状態を維持します。
 - 3. AR入力がレレベルになっている間は、REC出力はHレベルになりません。
 - 4. MEMO入力がレレベルになっている間は、REW出力はHレベルになりません。

Table 6-2 Input signals and resulting modes 各入力に対する出力モードと信号

6-1-2 Playback Control Circuit

Depressing the PLAY button sets pin 1 of U501 to L level, and an H signal is output from pin 12. Thus, pin 5 of U507 is set to H and pin 12 to L, lighting PLAY LED D572. Meanwhile, since pin 15 and 13 of U501 are both set to L, pin 8 of U503 is L and pin 10 of U503 (pin 8 of U502) is therefore set to H. As pin 8 of U502 is H, pin 10 of U502 goes to H when H is output from pin 12 of U501. This H signal performs the following operations (1) to (6):

- (1) Sets pin 1 and 2 of U503 to H via D506, pin 3 becoming L. Q515 is therefore turned off, its collector becoming H, and a count-up signal is sent to the tape-counter.
- (2) Since pin 2 of U504 goes to H, pin 3 goes to L, activating the tape end-detecting circuit. (For this circuit, see 6-1-9 (2)).
- (3) Sets Q505 to on, applying the reference play mode voltage (in this case, about 0.3V) to pin 3 of U506.

The tape transport mechanism of this deck is so constructed that the modes are changed over by a cam provided on a gear which is driven by the mechanism drive motor. The resistance of the variable resistor R581 shown in fig. 6-3 depends on the rotation of this gear.

When the deck is in STOP mode and the gear in the stop position, a voltage corresponding to this stop position (approx. 4.4V) is applied to pin 2 of U506 via R551. When Q505 is on and the reference play mode voltage (approx. 0.3V) is applied to pin 3 of U506, a voltage (in this case, a negative one) corresponding to the voltage difference between pins 2 and 3 is developed at pin 1 of U506 and, passing Q512, makes the mechanism drive motor rotate. The motor turns the gear (variable resistor R581) until the voltages of pins 2 and 3 of U506 are equivalent. Theoretically, when the voltage at pin 2 becomes equal to the reference voltage of pin 3, the output voltage of pin 1 becomes 0 and the motor stops. However, in actual operation, mechanical load is placed on the gear via the cam. Therefore, the voltage at pin 1 of U506 does not become 0, but rather maintains a voltage sufficient for the motor to generate the torque necessary to offset this load.

(4) Sets pin 2 of U505 to H via R558, R559. Also sets pin 1 of U505 to H via D516, R563, R562. Since pin 1 of U505 goes to H only after C523 is charged, it is approx. 0.2 sec. late in going to H compared to pin 2. This delay serves the purpose of starting the reel motor after the mechanical operation described in (3) has been completed.

When pin 1 and pin 2 of U505 both go to H, pin 3 also is set to H and Q510 turned on. Since Q510 is on, Q509 is also turned on and the reference voltage necessary for play mode (about 2.8V), which is adjusted by R547, is supplied to pin 5 of operational amplifier U506. Pin 7 of U506 then develops positive voltage (about 6.6V), causing the reel motor to rotate in the forward direction (via Q513).

6-1-2 再生制御回路

PLAY SWを押すとU501のピン1はLになり、ピン12からはH 信号が出力されます。このためU507のピン5はH, ピン12 はL となって PLAY LED D572 か点灯します。

一方U501のピン15とピン13は共にLなのでU503のピン8はL、従ってU503のピン10 (U502のピン8) はHに固定されています。U502のピン8がHなので,U501のピン12からHが出力されるとU502のピン10 はHになります。このH信号は次の (1)~(6) の動作をします。

- (1) D506を通してU503のピン1, 2をHにし、ピン3はUになります。このためQ515はOFFになり、そのコレクタはHになってテープ・カウンタにカウント・アップ信号を送出します。
- (2) U504のピン2がHになるのでピン3はLになり、テープ・エント検出回路を能動状態にします。 (テープ・エント検出回路:6-1-9(2)項参照)
- (3) Q505をONにし、U506のピン3にプレイ・モート基準電圧 (この場合約0.3V)を与えます。

本デッキのテーブ走行機構は、メカニズム・ドライブ・モータで駆動される歯車に設けられたカムによって切替えられます。図6-3に示す可変抵抗R581はこの歯車の回転に対応して抵抗値が変化します。

デッキがストップ・モードで歯車がSTOP位置にあるとき、その STOP位置に対応する電圧 (約4.4V) が R551 を通し て U506のピン2に加えられています。Q505がONになってU506のピン3にプレイ・モード基準電圧 (約0.3V) が与えられると、ピン2とピン3の電圧差に対応する出力(この場合は負電圧)が U506のピン1に発生し、Q512を通してメカニズム・ドライブ・モータを回転させます。モータは、U506のピン2の電圧がピン3の電圧に等しくなるように歯車(可変抵抗R581)を回転させます。理論的にはピン2の電圧がピン3の基準電圧と等しくなったときピン1の出力電圧がゼロになってモータの回転が停止します。しかし、実際には歯車にはカムを介して機械的負荷がかかっているので、この負荷に対抗するトルクを歯車(モータ)に与えるためにU506のピン1の電圧はゼロにならず、負荷に相当するある値を維持しています。

(4) R558, R559 を通ってU505のピン2をHにします。また D516, R563, R562を通してU505のピン1をHにします。この 時U505のピン1は、C523が充電されてからHになるためピン 2より約0.2秒遅れてHになります。この遅延時間は(3)で述べ た機械的動作が完了した後にリール・モータがスタートする 為のものです。

U505 のピン1 とピン 2 が共に H になるとピン 3 がHになり Q510 を ON にします。 Q510 が ON になることによって Q509 が ON になり、オペ・アンプ U506 のピン5 には R547 で 調整されたプレイ・モードに必要な基準電圧(約2.8 V)が与えられ U506 のピン7 には正の電圧(約6.6 V)が発生し、 Q513 を 通してリール・モータを順方向に回転させます。

- (5) The H level signal output from pin 12 of U501 raises pin 12 of U505 to H, passing D514. Pin 13 of 505 goes to H about 0.2 sec. later than pin 12. When pins 13 and 12 are both H, pin 11 of U505 also goes to H. This signal is used to release the muting function of the playback amplifier (see 6-3-2).
- (6) Applies an H level signal to the base of Q502 via R504, D505, making the punch-in/out circuit ready (see 6-2-1).
- (5) U501のピン12から出力されたHはD514を通してU505のピン12をHにします。U505のピン13はピン12より約0.2秒遅れてHになります。ピン13とピン12が共にHになると U505 のピン11がHになります。この信号は再生アンプのミューティングを解除する為に使われます。(6-3-2項参照)
- (6) R504, D505を通してQ502のペースにHを与え、PUNCH IN/OUT回路を待機状態にします(6-2-1項参照)。

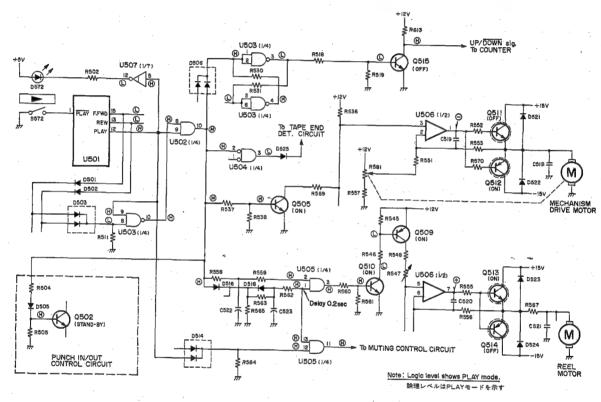


Fig. 6-3 Playback control circuit 再生制御回路

6-1-3 Record Control Circuit

See fig. 6-4.

When the deck is in STOP mode, the rec safety switch S582 is OPEN (REC side), the condition of the circuit is as follows:

Pins 5 and 6 of U504 are both H, pin 4 as well as pins 13 and 8 of U504 are L. Since pin 10 of U501 (REC OUT) is L, pin 3 of U507 and pin 9 of U504 are L. Pin 3 of U507 is L, so pin 14 is H. Hence, pin 12 of U504 is H, pin 11 L. Since both pin 8 and 9 of U504 are L, pin 10 is H, pin 1 of U507 is H, pin 16 L. As both pin 11 of U504 and pin 16 of U507 are L, C510 is discharged and pins 5 and 6 of U505 go to L as does pin 4. Because pin 4 of U505 is L, pin 2 of U507 also goes to L (via D513), thus making pin 15 of U507 H. As a result, pin 9 of U501 is H, and the system control IC is now ready to accept the record command. (For the functioning of the circuitry encircled by a broken line in fig. 6-4, See 6-2-1).

6-1-3 録音制御回路

図6-4を参照してください。

デッキが STOP モードで REC SAFETY SW S582 が REC側 (OPEN) の時、回路は次のような状態になっています。

U504のピン5, ピン6は共にH, ピン4(U504のピン13, ピン8)はL. U501のピン10(REC OUT)はL, 従ってU507のピン3及びU504のピン9もL. U507のピン3がLなのでピン14はH. 従ってU504のピン9もL. U507のピン3がLなのでピン14はH. 従ってU504のピン9が共にLなのでピン10はH.そしてU507のピン1はH, ピン16はLになっています. U504のピン1はとU507のピン16が共にLなのでC510は放電されていてU505のピン5とピン6はL, U505のピン4もLになっています. U505のピン4がLなのでD513を通してU507のピン2もL, 従ってU507のピン15はHになっています. この結果, U501のピン9はHとなっており,システム・コントロールICは録音命令を受け付けられる状態になっています. (図6-4で破線で囲まれた部分の回路動作については6-2-1項を参照してください).

When the RECORD and PLAY buttons are pressed simultaneously in order to perform recording, an H level PLAY signal is emitted from pin 12 of U501, and an H level REC signal from pin 10. The operation according to the PLAY signal is the same as detailed in 6-1-2.

When pin 10 of U501 goes to H, pins 8 and 9 of U505 go to H as does pin 10. This H level signal is sent to the CONTROL (B) PCB as the record control signal. See 6-3-3 for details.

録音動作をさせる為に、RECORD SWとPLAY SWを同時に押すとU501のビン12からはHのPLAY 信号が、ビン10からはHのREC 信号が出力されます。PLAY 信号による動作は、6-1-2再生制御回路で述べた動作と同じです。U501のビン10がHになることによりU505のビン1及びビン9がHになりビン10もHになります。このHレベル信号は録音制御信号としてCONTROL(B)PCBに送られます。その動作については6-3-3に述べられています。

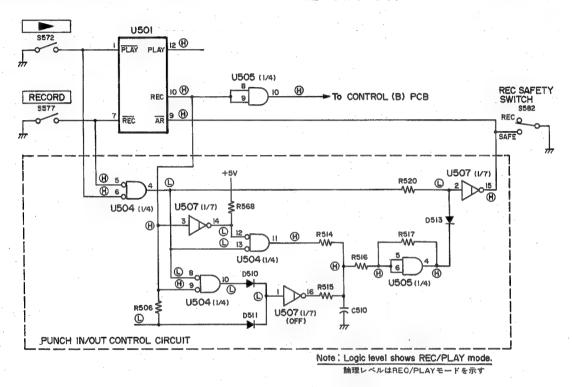


Fig. 6-4 Record control circuit 録音制御回路

6-1-4 Record Pause Control Circuit

In the REC/PAUSE mode, pins 11 and 10 of U501 develop H level signals. The function of the H signal from pin 10 (REC OUT) is the same as explained in the preceding chapter on the record control circuit.

The H signal from pin 11 (PAUSE OUT) performs the following functions:

- (1) Since pin 4 of U507 goes to H, pin 13 drops to L and the PAUSE LED D573 lights.
- (2) Turns Q506 on. As a result, pin 3 of the operational amplifier U506, which controls the mechanism drive motor, receives the reference voltage necessary for PAUSE operation (about 2.2V). According to this voltage, the mechanism drive motor is operated as explained in the chapter on the playback control circuit and stops when the cam is in the prescribed pause position. The semi-fixed resistor R542 is built in to regulate the cam's pause position.

6-1-4 録音ポーズ制御回路

REC/PAUSEモードの時は U501 のピン11とピン10がHになります。 U501のピン10(REC OUT) からのH出力の動作は前項録音制御回路と同じです。 U501のピン11 (PAUSE OUT) からのH信号は次の(1)~(3)の各動作をします。

- U507のピン4がHになるのでピン13はLになり、PAUSE LED D573が点灯します。
- (2) Q506をONにします。この結果メカニズム・ドライブ・モータを制御するオペ・アンプU506のピン3には、PAUSE動作に必要な基準電圧(およそ2.2V)が与えられます。この電圧によってメカニズム・ドライブ・モータは再生制御回路で述べたと同様の制御がされ、カムが所定のボーズ位置になったときモータが停止します。半固定抵抗 R542 はカムのボーズ位置を調整する為に設けられています。

- (3) Sets pin 12 of U505 to H via D514. In addition, sets pin 13 of U505 to H via D517, R563, R562. Since pin 13 of U505 goes to H only after C523 has been completely charged, it is about 0.2 sec. late compared with pin 12 in reaching H. When pins 12 and 13 of U505 both reach H, pin 11 also goes to H. This H signal is used to release the mutting operation of the playback amp.
- (3) D514 を通して U505 のピン12をHにします。また D517、R563、R562を通してU505のピン13をHにします。U505のピン13は、C523 の充電が完了してからHになるのでピン12より約0.2秒遅れてHになります。U505 のピン12とピン13が共にHになるとピン11がHになります。このH信号は再生アンプのミューティングを解除するために使われます。

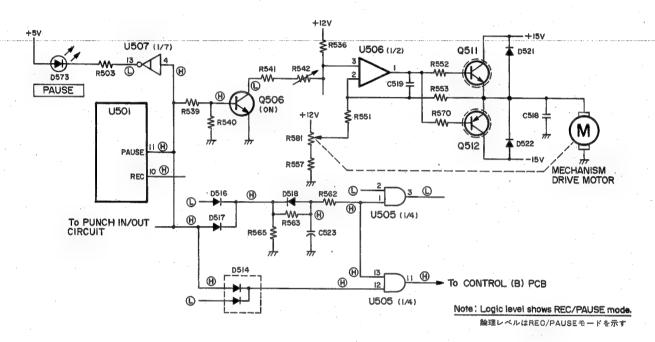


Fig. 6-5 Record/pause control circuit 録音ポーズ制御回路

6-1-5 FF Control Circuit

See fig. 6-6.

Since pins 13 and 15 of U501 are L in the STOP mode, both pin 13 and 12 of U503 are L and pin 11 of U503 (as well as pins 2, 13, 6 of U502) are H_{\star}

In FF mode, pin 14 and 15 of U501 output H level signals. According to each of these signals, pins 3 and 11 of U502 go to H. The output of pin 3 of U502 causes operations (1) and (2) described below, the output of pin 11 of U502 operations (3) and (4).

- (1) Raises pins 1 and 2 of U503 to H via D506, and lowers pin 3 to L. Since pin 3 of U503 is L, Q515 turns off and a H level "count up" signal is sent to the tape counter.
- (2) An H level signal is applied to pin 5 of the operational amplifier U506 via R549. Hence, a comparatively high positive voltage is developed at pin 7 of U506, driving Q513 fully and thus rotating the reel motor at high speed in forward direction.

6-1-5 F.FWD制御回路

図6-6を参照してください。

STOPモードの時U501のピン15及びピン13はLなのでU503のピン13とピン12は共にLで、U503のピン11(U502のピン2, 13, 6)はHになっています。

F.FWDモードの時はU501のピン15とピン14からH信号が出力されます。それぞれの信号によって U502 のピン 3 とピン11がHになります。U502 のピン 3 出力は,下記の(1)と(2),U502 ピン11の出力は下記の(3)と(4)の動作をします。

- (1) D506を通してU503のピン1とピン2をHにし、ピン3を Lにします。U503のピン3がLになることによってQ515は OFFになり、テープ・カウンタにHのカウント・アップ信号 を送出します。
- (2) R549 を通してオペ・アンプ U506のピン5 にHレベルの信号を与えます。このため U506 のピン7 には正の比較的高い電圧が出力され、これにより Q513 は充分ドライブされてリール・モータは高速正回転して早送りになります。

- (3) Since pin 1 of U504 goes to H, pin 3 goes to L and the tape end detecting circuitry becomes functional.
- (4) Turns Q504 on via R532 and applies the FF/REW mode reference voltage to pin 3 of operating amp U506. The mechanism drive motor then rotates, as explained for the PLAY mode, until it is in the FAST position and stops, putting the deck in the FF mode.

6-1-6 REW Control Circuit

In REW mode, H level signals are output from pins 14 and 13 of U501. Due to each signal, pins 11 and 4 of U502 go to H. The function of the H signal emitted from pin 11 of U502 is the same as in FF. The function of pin 4's H signal is as follows,

- (1) Raises pins 5 and 6 of U503 to H via D526. Hence, pin 4 of U503 goes to L, and since pins 1 and 2 of U503 go to L, pin 3 is raised to H. (U503, R530, R531 form a flip-flop circuit). The H signal from pin 3 of U503 turns Q515 on via R518. As a result, a L level "count down" signal is sent to the tape counter.
- (2) An H level signal is applied to pin 6 of the operating amp U506 via R550. In this case, a strong negative voltage is output from pin 7 of U506, driving Q514 fully and rotating the reel motor at high speed in the reverse direction.

- (3) U504のピン1がHになるのでピン3はLになり、テープ・エンド検出回路が能動状態になります。
- (4) R532を通してQ504をONにし、オペ・アンプU506のピン3 に F.FWD/REW モードの基準電圧を与えます。そして PLAYのモードの場合と同様にメカニズム・ドライブモータ が FAST 位置まで回転して停まり、デッキはF.FWDモードになります。

6-1-6 REW制御回路

REWモードの時はU501のピン14とピン13からH信号が出力されます。それぞれの信号によってU502のピン11とピン4がHになります。U502のピン11からのH信号の動作はF.FWDの場合と同じです。U502のピン4のH出力は次の動作をします。

- (1) D526を通してU503のピン5とピン6をHにします。このためU503のピン4はLになり、U503のピン1と2がLになるのでピン3はHになります。(U503、R530、R531でフリップ・フロップを構成しています)。U503のピン3のH信号はR518を通してQ515をONにします。この結果テープ・カウンタにはLレベルのカウント・ダウン信号が送出されます。
- (2) R550を通してオペ・アンプU506のピン6にHレベルが与えられます。この場合はU506のピン7からは大きな負電圧が出力され、Q514を充分ドライブしてリール・モータを高速逆回転させます。

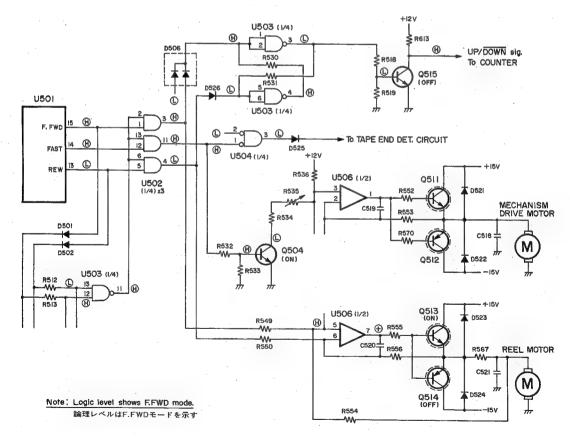


Fig. 6-6 F. FWD/REW control circuit F. FWD/REW制御回路

6-1-7 From FF to REW operation

See fig. 6-7.

When the deck is in fast forward mode, the circuits in fig. 6-7 are in the following condition:

Pins 15 and 14 of U501 are H, pin 13 L. C508 is charged, C509 discharged. Pin 12 of U503 is H, pin 13 L. Pin 11 (and pins 2, 13, 6 of U502) is H. Pin 3 of U502 is H, pin 11 H, pin 4 L.

When the REW button is pushed during FF mode, pin 15 of U501 drops from H to L, pin 13 goes from L to H. Pin 14 stays at H. Pin 13 of U501 outputs an H level signal which raises pin 13 of U503 to H via D502, R512 and simultaneously charges C509 via D502 and R508. During this time, pin 12 of U503 is kept to H while C508 is discharged via R507 and R513, though pin 15 of U501 is L.

During the approx. 0.3 sec. until C508 is discharged and pin 12 of U503 brought down to L, pins 13 and 12 of U503 are both H. Therefore, pin 11 of U503 is L during this time. Since pins 2, 13 and 6 of U502 are L as long as pin 11 of U503 is L, pins 11 and 4 of U502 do not go to H even if pins 14 and 13 of U501 go to H. When pin 12 of U503 drops to L when C508 is discharged, pin 11 of U503 goes to H and pins 2, 13 and 6 are raised to H as well. Then, a H level FAST control signal is output from pin 11 of U502, and an H level REW control signal from pin 4, putting the deck in REW mode. This circuitry serves the purpose of putting the deck in STOP mode for a moment before switching to the next mode when operation changes from FF to REW. Operation is the same when switching from REW to FF.

6-1-8 Control from FF/REW to PLAY

In order to prevent tape slack when switching from FF (REW) to PLAY mode, STOP mode is entered briefly before entering PLAY mode.

6-1-7 F. FWDから REWへの制御

図6-7を参照して下さい。

デッキがF.FWDモードのとき図6-7の回路は次のような状態になっています。

U501のピン15,14,はH,ピン13はL.C508は充電,C509は放電. U503のピン12はH,ピン13はL.U503のピン11(U502のピン2, 13,6)はH.U502のピン3とピン11はH,ピン4はL.

F.FWDモード中に REW SW を押すとU501のピン15はHから Lに、ピン13はLからHになります。ピン14はHのままです。 U501のピン13のH信号はD502, R512を通してU503のピン13 をHにすると同時に、D502とR508を通してC509を充電します。 この時 U501 のピン15はLになっていますが、 C508 の電荷が R507とR513を通して放電する間 U503のピン12はHに保たれ ています。C508の放電が終ってU503のピン12がLになるまで の約0.3秒間はU503のピン13とピン12が共にHなのでその間 U503のピン11はLになります。U503のピン11がLの間はU502 のピン 2 , ピン13及びピン 6 もしですからU501のピン14とピン 13がHになってもU502のピン11とピン4はHになりません。 C508の放電が終ってU503のピン12がLになるとU503のピン 11がHになり、U502のピン 2、 ピン13及びピン 6 もHになりま す。そしてU502のピン11からはHのFAST制御信号が、ピン 4 からはHのREW制御信号が出力されてデッキはREWモード になります。この回路はF.FWDモードからREWモードに移行 する時、一旦ストップ動作をして次のモードになるようにする 為の回路です。 REWモードからF.FWDモードへ移行する場合 も上記と同様の動作をします。

6-1-8 F. FWD/REWからPLAYへの制御

F.FWD(REW) モードから PLAY モードに切換える時には、テープのたるみを防止する為、一旦 STOP モードになってから PLAY モードになります。

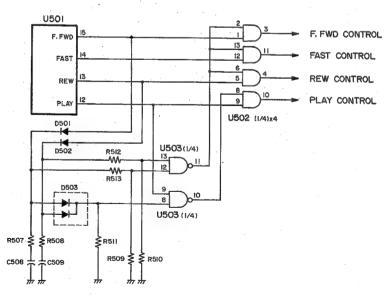


Fig. 6-7 FF to REW, FF/REW to PLAY control circuit FFからREW、FF/REWからPLAY制御回路

When the PLAY button is pressed during FF (or REW) mode, pin 12 of U501, that is to say pin 9 of U502, goes to H. Meanwhile, pin 15 (Pin 13) of U501 drops from H to L. Then, pin 9 of U503 does not drop to L immediately, but stays H for the 0.4 sec. (approx.) it takes for the charge in C508 (C509) to become discharged via R507 (R508), D503 and U503. Accordingly, pin 10 of U503 is L for about 0.4 sec. and goes to H when pin 9 of U503 drops to L after C508 (C509) has been fully discharged. When pin 10 of U503 (pin 8 of U502) goes to H, pin 10 of U502 goes to H since pin 9 of U502 is already H, and the deck enters PLAY mode.

6-1-9 Stop Control Circuit

(1) Initial Reset Circuit

When the deck's power switch is turned on, the POWER SUPPLY PCB's power muting circuit becomes operative, and Q708 turns on immediately. Hence, pin 2 (STOP) of U501 drops to L and U501 will not accept PLAY, PAUSE, RECORD, FF or REW commands as long as Q708 is on. Therefore, when power is turned on, the deck will always be in the STOP mode. In addition, Q708 turns on and places the deck in STOP mode immediately when power is turned off. See 6-3-1 for Q708 operation.

(2) Tape End Detecting Circuit

The Hall IC U571 installed on the sensor PCB emits an alternating H/L signal of a frequency proportional to the rotation of the right reel table. This signal is input into pin 7 of U507 and then output from pin 10 after structuring the wave form. This output is divided among 2 systems, one of them being used as the clock signal for the electronic counter, the other again dividing the signal among two circuits. One part is sent to pin 6 of U507, turned into a pulse wave by C513 and D507 after having its polarity reversed, and applied to the base of Q507 via R524. The other is applied to the base of Q507 after passing C514, D507, R524.

During PLAY, FF or REW modes, pin 3 of U504 is L. Hence, during tape motion, Q507 is constantly turned on and off by the pulse being sent from D507. Incidentally, since the time constant for discharging C530 via R526 and Q507 is very short compared with the time constant for charging C530 via R527, C530 is discharged while Q507 is turning on and off.

When the tape is fully wound and the right reel table has stopped rotating, the repeated output from the Hall IC stops. Hence, Q507 turns off, and C530 starts to charge via R527. While C530 is charging, the potential at the base of Q508 gradually grows, and Q508 turns on after approx. 1.2 sec. As a result, pin 2 of U501 drops to L and the deck enters STOP mode.

F.FWDモード(或いはREWモード)中にPLAY SWが押されるとU501のピン12即ちU502のピン9はHになります。一方U501のピン15(ピン13)はHからLになります。このときU503のピン9は直ちにLにならずC508(C509)に充電されていた電荷がR507(R508)、D503及びU503を通して放電するまでの約0.4秒間Hを保っています。従ってU503のピン10は約0.4秒間Lになり、C508(C509)の放電が終ってU503のピン9がLになるとHになります。U503のピン10(U502のピン8)がHになると、U502のピン9はすでにHになっているのでU502のピン10がHになりデッキはPLAYモードになります。

6-1-9 ストップ制御回路

(1) イニシアル・リセット回路

デッキの電源をONにするとPOWER SUPPLY PCBのパワー・ミューティング回路が動作してQ708が直ちに ONになります。この為U501のピン2(STOP)はLになり、Q708がON の間 U501は PLAY、PAUSE、RECORD、F.FWD、REWIND の各動作命令を受付けません。 従って電源ON時にはデッキは必ず STOP モードになります。尚デッキの電源を OFF にした時も Q708 が ON になりデッキを直ちに STOP モードにします。 Q708 の動作については6-3-1項に述べられています。

(2) テープ・エンド検出回路

センサ PCB に取付けられているホール IC U571は、右リー ル台の回転数に比例する周波数の H·L の繰返し信号を発生 します。この信号はU507のピン7に入力され、波形整形の後 U507のピン10から出力されます。この出力は2系統に分かれ、 その一つは電子カウンタのクロック信号として使用されます。 他の一系統は更に2回路に分かれ,一方はU507のピン6に与 えられ極性反転後C513, D507でパルス化され、R524を通し てQ507のベースに与えられます。もう一方はC514, D507, R524 を通して Q507 のペースに与えられます。一方PLAY, F.FWD 或いは REW モードの時U504のピン3はLになって います。従ってテープが走行している間Q507はD507側から 送られて来るパルスによって ON-OFF を繰返しています。 Q507がON-OFFを繰返している間、R527を通してC530を 充電する時定数に較べ, R526, Q507を通してC530を放電す る時定数の方がずっと短いのでC530は放電状態になってい ます.

テーブが終端まで巻取られ、右リール台の回転が停止すると、ホール IC からの繰返し出力が無くなるためQ507はOFFになり、C530にはR527を通して充電が始まります。C530の充電が進むに従ってQ508のペース電位は次第に上昇し、約1.2 秒後Q508は ON になります。この結果U501のピン2が上になり、デッキはSTOPモートになります。

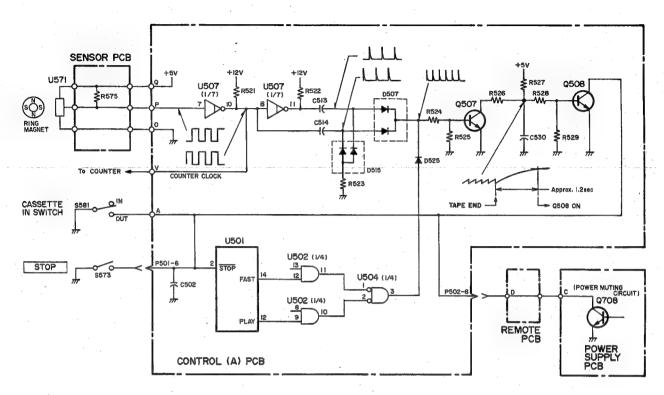


Fig. 6-8 Stop control circuit ストップ制御回路

6-2 Additional Function Control Circuits

6-2-1 Punch in/out Circuit

See figs. 6-9 and 6-10.

This circuit switches the deck's mode from PLAY to REC/PLAY, from REC/PLAY to PLAY, or from REC/PAUSE to REC/PLAY every time the REMOTE PUNCH IN/OUT jack (footswitch) is turned on. Instead of pressing the footswitch, the RECORD button can be pushed while holding the PLAY button down.

(1) From PLAY to REC/PLAY (PUNCH IN)

In PLAY mode, pin 12 of U501 is H, pin 10 of U502 also H. The output of pin 10 is applied to the base of Q502 via D505. If the footswitch is turned on in this condition, the emitter of Q502 is grounded and Q502 turns on. Accordingly, pins 1 and 7 of U501 drop to L and the deck enters REC/PLAY mode.

(2) From REC/PAUSE to REC/PLAY

In REC/PAUSE mode, an H level signals is applied to the base of Q502 from pin 10 of U501 via R506 and D508. If the foot switch is turned on in this condition, Q502 turns on as in the preceding case (PLAY mode) and the deck is played in REC/PLAY mode.

6-2 付属機能制御回路

6-2-1 パンチ・イン/アウト回路

図6-9及び図6-10を参照してください。

この回路はREMOTE PUNCH IN/OUT端子 (FOOT SW) を ON する毎にデッキのモードを PLAY から REC/PLAY に, REC/PLAY から PLAY に, 或いは REC/PAUSE から REC/PLAYに切替える回路です。FOOT SWの代りに, PLAY SW を押したままRECORD SWを押しても同じ動作をします。

(1) PLAYからREC/PLAY (PUNCH IN)

PLAYモードの時U501のピン12はHで, U502のピン10もHになっています。U502のピン10の出力はD505を通してQ502のペースに与えられています。この状態のときFOOT SW をONにするとQ502のエミッタが接地されQ502はONになります。Q502がONになるとU501のピン1とピン7がLになり、デッキはREC/PLAYモードになります。

(2) REC/PAUSEからREC/PLAY

REC/PAUSE モードの時は U501 のピン10からのH信号が R506とD508を通してQ502のベースに加えられています。この状態で FOOT SW を ON にすると PLAY モードから PUNCH INする場合と同様にQ502がONになることによってデッキはREC/PLAYモードになります。

(3) From REC/PLAY to PLAY (PUNCH OUT)

Since pin 10 of U501 (and pin 9 of U504) is H during REC/PLAY, pin 10 of U504 is L. Since pin 11 of U501 is L, point A in fig. 6-9 is also L. When both pin 10 of U504 and point A are L, pin 1 of U507 is L. U507 is an open collector type transistor array as can be seen by its interior circuitry in fig. 6-9. Therefore, when pin 1 of U507 is L, pin 16 is not H, but the transistor is off. On the other hand, pin 10 of U501 (pin 3 of U507) is H, pin 14 of of U507 is L. Since pin 4 of U504 is L, pins 12 and 13 of U504 are both L, pin 11 H. Therefore, C510 is charged from pin 11 of U504 via D512, R514, and pins 5 and 6, as well as pin 4, of U505 are H. Since pin 4 of U504 is L at this time, pin 2 of U507 also is set to L and pin 15 to H.

When the footswitch is pressed on, Q502 is turned on and pins 5 and 6 of U504 both drop to L. Pin 4 therefore goes to H, hence pin 15 of U507 is set to L, as is pin 9 of U501, releasing the RECORD mode. Since pin 9 of U501 remains L until the footswitch is turned off, U501 will not accept the RECORD command when the PLAY and RECORD commands are given even when Q502 is on. Therefore, only the PLAY signal is output and the deck switches from REC/PLAY to PLAY mode.

When pin 10 of U501 drops to L, pin 14 of U507 goes to H and pin 12 of 504 does so as well. Pin 11 of U504 therefore drops to L. When this pin drops to L, the current charging C510 via D512, R514 stops, but pins 5 and 6 of U505 are kept at H level because of the current flowing from pin 4 on the output side via R517. Accordingly, as long as the footswitch is on, pin 4 of U504 and pin 4 of U505 remain H, pin 2 of U507 is kept at H and pin 15 (pin 9 of U501) at L.

When the footswitch is turned off, Q502 turns off, pins 1 and 7 of U501 and pins 5 and 6 of U504 go to H, pin 4 of U504 to L. Hence, pin 2 of U507 goes to L, pin 15 of U507 (pin 9 of U501) to H, and the deck is thus prepared to accept the next RECORD command. When pin 4 of U504 is L, pins 8 and 9 of U504 both go to L and pin 10 to H. This H level signal is applied to pin 1 of U507 via D510, turning on its internal transistor and thus setting pin 16 to L. When pin 16 of U507 drops to L, C510's charge is discharged via R515, pins 5 and 6 of U505 drop to L as does its output pin 4. This condition means that the deck is back to the normal PLAY mode.

(3) REC/PLAYからPLAY (PUNCH OUT)

REC/PLAY 中 U501 のピン10 (U504のピン9) はHなので U504のピン10はLになっています。またU501のピン11はL なので図6-9中の⑥点もLになっています。U504のピン10と ⑥点が共にLなのでU507のピン1はLです。ここでU507は 図中にその内部回路を示してあるようにオープン・コレクタ 型のトランジスタ・アレイです。このためU507のピン1 がL のときピン16はHではなく、トランジスタ OFF の状態になっています。

一方REC/PLAY中U501のピン10 (U507のピン3) はH, U507のピン14はLです。U504のピン4もLですからU504のピン12とピン13は共にLで、ピン11はHです。このためC510はU504のピン11からD512、R514を通して充電されており、U505のピン5、ピン6はH,そしてピン4もHになっています。このときU504のピン4はLなのでU507のピン2もL、ピン15はHになっています。

FOOT SWをONにするとQ502がONになりU504のピン5 とピン6が共にLになるのでピン4はHになります。このた めU507のピン15はLになり、U501のピン9もLになります から RECORD モードは解除されます。 U501のピン9は, FOOT SW をOFFにするまでLのままなので、Q502がON になって PLAY と RECORD の命令が与えられても U501 は RECORD 命令を受け付けず PLAY 信号だけが出力されデッ キはREC/PLAYモードからPLAYモードに切替わります。 U501のピン10がLになるとU507のピン14はHになり、U504 のピン12がHになるのでそのピン11はLになります。U504の ピン11がLになるとD512, R514を通してのC510への充電々 流は止まりますが、U505のピン5とピン6はその出力側のピ ン4からR517を通して電流が流れHに保たれます。従って FOOT SWがONになっている間U504のピン4及びU505の ピン4はHのままで、U507のピン2はH、ピン15(U501の ピン9) はLに保たれています。

FOOT SWを OFF にするとQ502はOFFになりU501のピン1とピン7, U504のピン5とピン6はHに, U504のピン4はLになります。このためU507のピン2はLにU507のピン15(U501のピン9)はHになり次のRECORD命令を待つ状態なります。U504のピン4がLになるとU504のピン8とピン9は共にLになりピン10はHになります。U504のピン10のH出力はD510を通してU507のピン1に加えられその内部トランジスタをONにするためピン16はLになります。U507のピン16がLになるとC510の電荷はR515を通して放電し、U505のピン5とピン6はLになりその出力ピン4もLになります。この状態で通常のPLAYモードに戻ったことになります。

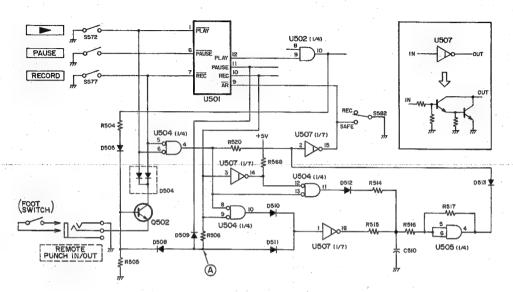


Fig. 6-9 Punch in/out circuit パンチ・イン・アウト回路

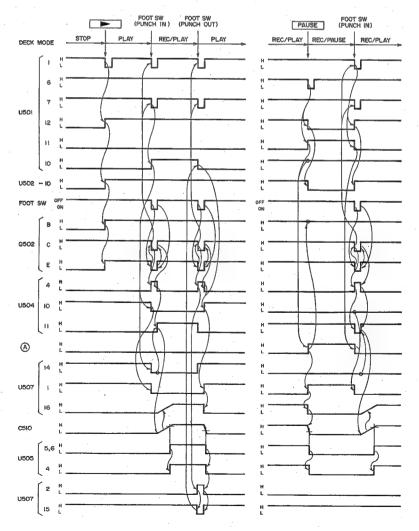


Fig. 6-10 Punch in/out timing chart パンチ・イン・アウト・タイミング・チャート

6-2-2 Electronic Counter Circuit

The Memory and Zero Return operations mentioned further below are controlled by signals output from the electronic counter. The functions of the electronic counter's input and output terminals are as follows:

J616-1: RESET terminal. Pressing the RESET switch resets the counter display as well as the counter value memorized internally to "0000".

J616-2: Setting this terminal to H makes the counter count up, setting it to L makes it count down.

J616-3: Input terminal of the counter signal (counter clock).

J616-4: Not used. Always set to L.

J616-5: Outputs an H signal when the counter is reset to "0000".

J616—6: Outputs an H signal when the memorized counter value is encountered.

J616-7: Power source for display tube filament

J617-1: ditto

J617-2: Input terminal for the command entering the displayed counter value into the memory.

J617-3: Input terminal for the command displaying the memory contents.

J617-5: Not used. Always set to L.

J617-7: Power source, +12V.

J617-8: Ground

J617-9: Power On Reset terminal. As long as this terminal is H, the counter display is off and the memory cleared.

J617-10: Power source, -12V.

6-2-2 電子カウンタ回路

後に述べるメモリ動作及びゼロ・リターン動作は電子カウンタからの出力信号で制御されます。 ここでは電子カウンタの入・ 出力端子の機能を述べます。

J 616-1: RESET 端子、RESET SW を押すとカウンタ表示 は"0000"になり、また内部に記憶されている カウントも"0000"になります。

J616-2: この端子をHにするとカウント・アップ, Lにする とカウント・ダウンします.

J616-3: カウント信号(カウンター・クロック)の入力端子です。

J616-4: 使用せず、Lレベルに固定

J616-5: カウントが"0000"になるとH信号が出力されます。

J616-6: 記憶されたカウントになるとH信号が出力されます.

J616-7: 表示管用フィラメント電源

J617-1: 表示管用フィラメント電源

J617-2: カウンタの内容(数値)をメモリに書込む命令入力端子

J617-3: メモリ内容を表示させる命令入力端子

J617-5: 使用せず, Lレベルに固定

J617-7: 電源 +12V

J 617-8: GND

J617-9: パワー・オン・リセット端子。この端子がHの間カウンタ消灯、メモリもクリアされます。

J 617-10:電源 -12 V

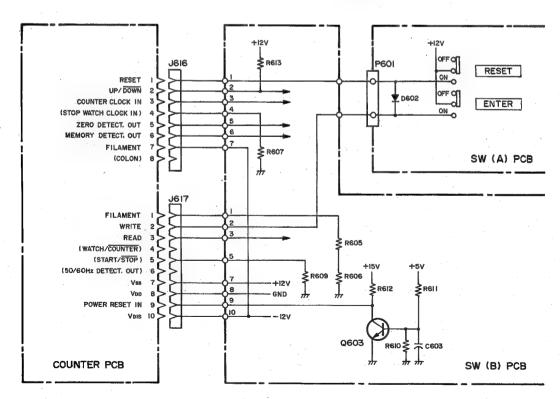


Fig. 6-11 Counter circuit カウンタ回路

6-2-3 Memory Circuit

(1) STOP

In PLAY, REC/PLAY, FF or REW mode, a H level signal is output from J616—6 when the value displayed on the counter corresponds to the value memorized using the ENTER switch. If the MEMORY STOP switch is on, this H signal turns on Q601 momentarily. During this moment, pin 2 of U501 drops to L and the deck enters STOP mode.

(2) REWIND

If the MEMORY REWIND switch is depressed, Q601 is turned on momentarily as above whenever the displayed counter mode corresponds to the value memorized using the ENTER switch in PLAY, REC/PLAY or FF mode. Pin 5 of U501 then drops to L, and the deck enters REWIND mode.

6-2-4 Zero Return Circuit

(1) STOP

If the displayed counter value becomes "0000" during REWIND mode, this circuit automatically stops the tape.

If the counter display becomes "0000" during REWIND mode, a H level signal is output from J616–5. This signal passes C601 and momentarily turns on Q602. If the ZERO RETURN STOP switch is pressed in, turning Q602 on momentarily sets pin 5 of U501 to L. When this terminal is L, the REWIND mode is released and STOP mode entered.

ZERO RETURN STOP does not function in PLAY, REC/PLAY or FF mode.

(2) PLAY

This circuit automatically sets the deck in PLAY mode when the tape counter displays "0000" during FF or REWIND.

In such a case, a H level signal is output from J616–5. This signal passes C601 and momentarily turns on Q602. If the ZERO RETURN PLAY switch is pressed in, turning Q602 on momentarily sets pin 1 of U501 to L. As a result, the deck enters PLAY mode after shortly switching to STOP mode as explained in paragraph 6-1-8.

6-2-3 メモリー回路

(1) STOP

PLAY, REC/PLAY, F.FWD, REW いずれのモードでもカウンタ表示数値が ENTER スイッチで記憶させた値になると J 616-6からH信号が出力されます。 MEMORY STOP スイッチを ON にしてある時 J 616-6からのH信号によって Q 601が一瞬 ONになり、その間 U 501のピン 2を L にして、デッキをSTOPモードにします。

(2) REWIND

MEMORY REWINDスイッチをONにしてある場合、PLAY、REC/PLAY、F.FWD各モード中ENTERスイッチで記憶させたカウンタ表示数値になると、上記と同じ様にQ601が一瞬ONになってU501のピン5にLを与え、デッキはREWINDモードになります。

6-2-4 ゼロ・リターン回路

(1) STOP

REWIND モードの時, カウンタ表示数値が "0000"に なるとテープを自動的に停止させる回路です.

REWINDモード中カウンタ表示数値が"0000"になると J 616-5からH信号が出力されます。この信号はC601を通ってQ602を一瞬ONにします。ZERO RETURN STOPスイッチがONになっていると、Q602がONになることによってU 501のピン5が一瞬 L になります。この端子をL にすると REWINDモードが解除されSTOPモードになります。

ZERO RETURN STOPは、PLAY、REC/PLAY、F.FWD 各モートでは動作しません。

(2) PLAY

F.FWD又はREWINDモード中,テープ・カウンタ表示数値 が "0000"になると,テープを自動的にPLAYモードに する回路です。

F.FWD又はREWINDモード中,テーブ・カウンタ表示数値が"0000"になるとJ616-5からH信号が出力されます。この信号はC601を通ってQ602を一瞬 ON にします。この時 ZERO RETURN PLAYスイッチがONになっていると、Q602がONになることによってU501のピン1が一瞬 L になります。この結果、6-1-8項で述べたようにデッキは一旦STOP状態になった後PLAYモードになります。

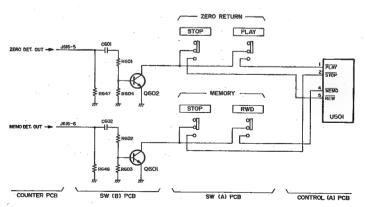


Fig. 6-12 Memory, Zero return circuit メモリ、ゼロ・リターン回路

6-3 Amp Control Circuit

6-3-1 Power Muting Circuit

This power muting circuit prevents noise accompanying transient power surges when the deck is turned on or off. It stops noise being output from the 234 by isolating the signal circuitry until the voltage has stabilized after power has been turned on, or before power source voltage drops when power is turned off. The power muting signal is also used to keep the deck in the STOP mode shortly after turning on power, and for immediately placing it in the STOP mode when power is turned off.

When the deck's power is turned on, C729, C730, C734 are immediately charged and Q707's emitter potential rises. Since C735 and C736 are charged via R722 and R723, Q707's base potential is low immediately after power is turned on, and Q707 turns on. Since Q707 turns on, base current is applied to Q102, Q109 and Q708, turning them on. When Q102 and Q109 are on, the LINE OUT and CUE OUT signal circuits are grounded, preventing noise which occurs when switching on power from reaching the output. Turning Q708 on sends an L level STOP signal to pin 2 of system control IC U501.

When C735, C736 are charged, Q707's base potential rises and Q707 turns off. Q102 and Q109 also turn off, muting is released. Q708 turns off as well, turning off the STOP signal.

Turning off the deck's power rapidly discharges the charge of C735 and C736 into the meter lamps via D708, lowering Q707's base potential. Q707 thus turns on immediately, turning on Q102 and Q109 as well, both muting the amp circuit and placing the deck in STOP mode by turning on Q708.

6-3 アンプ制御回路

6-3-1 パワー・ミューティング回路

パワー・ミューティング回路は、デッキの電源 ON-OFF 時に発生する電源電圧の過渡現象に伴う雑音を除去するための回路です。電源 ON 時には電圧が安定するまで信号回路を遮断し、また、電源 OFF 時には電源電圧が低下する前に信号回路を遮断することによって雑音が234から外部へ送出されることを防止します。またパワー・ミューティング信号は、電源 ON 時にデッキを STOPモードに固定し、電源 OFF 時には直ちに STOPモードにする目的にも使われています。

デッキの電源をONにするとC729、C730、C734は直ちに充電されてQ707のエミッタ電位が上昇します。C735及びC736はR722及びR723を通して充電されるので電源ON直後はQ707のペース電位は低く、Q707はONになります。Q707がONになることによってQ102、Q109及びQ708にはそれぞれペース電流が流れてONになります。Q102及びQ109 ONによってLINE OUT及びCUE OUTの信号回路は接地され、電源ON時に発生する雑音が外部に出力される事を防止します。またQ708 ONによってシステム・コントロールIC U501のピン2にLレベルのSTOP信号が与えられます。

C735, C736が充電されるとQ707のペース電位が上昇してQ707 はOFFになり、Q102及びQ109がOFFになってミューティングは解除され、またQ708がOFFになってSTOP信号も解除されます。デッキの電源をOFFにするとC735, C736の電荷はD708を通してメータ・ランプに急速に放電しQ707のペース電位を下げます。このためQ707は直ちにONになり、Q102とQ109をONにしてアンプ回路をミューティングすると共に、Q708をONにしてデッキをSTOPモードにします。

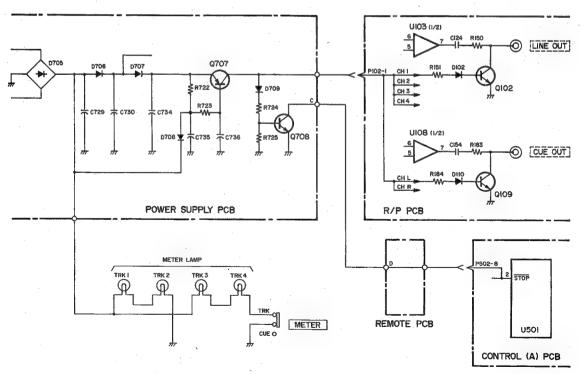


Fig. 6-13 Power muting circuit パワー・ミューティング回路

6-3-2 Playback Muting Circuit

As explained in paragraphs 6-1-2(5) and 6-1-4(3), pin 11 of U505 goes to H in PLAY mode and PAUSE mode, thus turning on Q101. Except during PLAY and PAUSE modes, Q101 is off, C108 is charged via R103, R104 and pin 11 of U106 is H. When Q101 turns on, C108 is discharged via R104, Q101, and pin 11 of U106 drops to L about 0.2 sec. after Q101 turned on. (This delay mainly serves the purpose of preventing noise that could occur when playback circuit muting is cancelled after the head touches the tape in PLAY mode. When muting is on, i.e. when Q101 is off, pin 11 of U106 is immediately set to H via R103, D101.) When pin-11 of U106 goes to L, pins 12 and 13 also go to L. The output of pins 12 and 13 is distributed among channels 1 to 4, but the following explanation is limited to channel 1.

When pins 12 and 13 of U106 drop to L, pin 13 of U104 does so too. U104's other input pin, 12, is H only when the FUNCTION SELECT switch (in this case for CH 1) is on and REC mode (REC/PLAY or REC/PAUSE) is engaged. In all other modes, it is L. Therefore, pins 13 and 12 of U104 both drop to L and their output pin 11 drops to L only during PLAY or PAUSE mode, or when CH 1 FUNCTION SELECT switch is not pressed even though the deck is in REC/PLAY mode or REC/PAUSE mode. When pin 11 of U104 is L, Q103 is off and the output of the playback equalizer amp is sent to the next stage without being muted.

In all modes not mentioned above, i.e. STOP, FF, REW, and when the FUNCTION SELECT switch for CH 1 is engaged during REC/PLAY or REC/PAUSE modes, pin 11 of U104 is H. When this is the case, Q103 turns on because of the base current applied to it via D101 and R124, and the output of the playback equalizer amp is muted.

6-3-2 再生ミューティング回路

6-1-2(5)項及び6-1-4(3)項で述べたように、 PLAYモード及び PAUSEモード時にはU505のピン11はHになります。このため Q101はONになります。PLAYモード及びPAUSEモード以外 の時Q101はOFFで、C108はR103、R104を通して充電されて おり、U106のピン11はHになっています。Q101がONになってから約0.2秒後にU106のピン11がLになります。(この遅延時間は 主としてPLAYモード時にヘッドにテーブが接触した後に再生 回路のミューティングを解除することによって、雑音の発生を 防止するためのものです。ミューティングONつまりQ101OFF 時にはU106のピン11はR103、D101を通して直ちにHになります。U106のピン11がLになるとピン12、13もLになります。U106のピン12、13の出力はCH1からCH4に振分けられますが、以下の説明はCH1のみについて行ないます。

U106のピン12、13がLになるとU104のピン13もLになります。U104の他の入力ピン12は、FUNCTION SW(CH1)がONで且つRECモード(REC/PLAY又はREC/PAUSE)の時のみHで、その他のモードではLになっています。従って「PLAYモード又はPAUSEモードの時」或いは「デッキはREC/PLAYモード又はREC/PAUSEモードであってもCH1のFUNCTION SWが押されていない場合」のみU104のピン13とピン12が共にLになりその出力ピン11がLになります。U104のピン11がLのときはQ103はOFFで、再生イコライザ・アンプの出力はミューティングされることなく次段に送られます。

上記以外のモード、つまり STOP, F.FWD, REWIND 及び、FUNCTION SW(CH1)がONで且つデッキがREC/PLAY又はREC/PAUSE モードの時、U104のピン11はHになります。U104のピン11がHの時、D101とR124を通してQ103にペース電流が流れてQ103はONになり、再生イコライザ・アンプの出力をミューティングします。

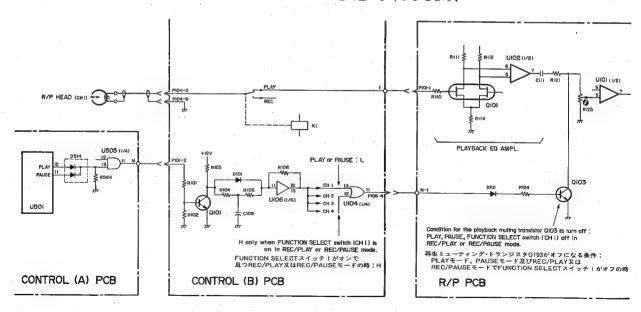


Fig. 6-14 Playback muting circuit 再生ミューティング回路

6-3-3 Record Control Circuit

(1) Control Signal Circuit

In RECORD mode (REC/PLAY or REC/PAUSE), an H level signal is output from pin 10 of U501 and pin 10 of U505 goes to H. Pin 3 of U601 therefore drops to L, Q613 turns off. When Q613 is off, Q612's base current is applied to Q612 via R642, turning Q612 on and raising its emitter to H (When Q613 is on, the base potential of Q612 is about 1V, the power source voltage of +12V being divided by R642 and R641, and its emitter drops to L). The H signal from Q612 raises pin 6 of U101 to H, passing the SYNC/INPUT switch, FUNCTION SELECT switch 1, R113 and R114. On the other hand, when pin 10 of U505 goes to H, Q102 turns on, and Q103 also turns on because of the base current applied. Hence pin 5 of U101 goes to H. When both pin 5 and 6 of U101 go to H, pin 4 drops to L. In other words, pin 4 of U101 is L when FUNCTION SELECT switch 1 is pressed in during RECORD mode.

6-3-3 録音制御回路

(1) 制御信号回路

RECORDモード (REC/PLAY又はREC/PAUSE) 時,U501 のピン10からはHが出力され,U505のピン10はHになります.このためU601のピン3はLに,そしてQ613はOFFになります.Q613がOFFのとき,Q612はR642を通してベース電流が流れてONになりそのエミッタはHになります(Q613がONのときQ612のベース電位は,+12V電源がR642とR641で分圧された電圧約1Vとなり,そのエミッタはLになります).Q612のH信号はSYNC/INPUT SW,FUNCTION 1 SW,R113及びR114を通してU101のピン6をHにします.一方U505のピン10がHになるとQ102がONになり,Q103のベース電流が流れてQ103もONになります.このためU101のピン5はHになります.U101のピン5とピン6が共にHになると,そのピン4はLになります.つまりU101のピン4は,FUNCTION SW 1 がONで RECORD モードの時しになります.

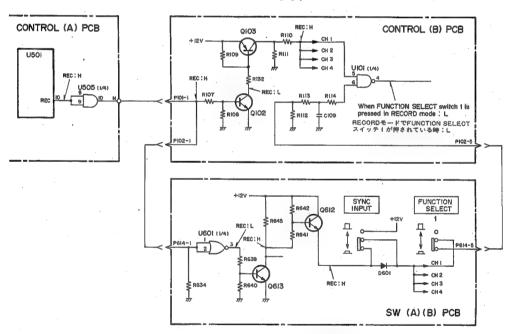


Fig. 6-15 Record control signal circuit 錄音制御信号回路

(2) Record Muting Circuit

When pin 4 of U101 is H, pins 8 and 9 of U103 are H and output pin 10 is L. Therefore, Q110 turns on because of the base current applied, turning on Q104 as well. When Q104 turns on, audio signal input to the record amp is muted. When pin 4 of U101 drops to L, pin 8 of U103 goes to L, as does pin 9 after C110 has been discharged via D105, R115 and pin 4 of U101. When pins 8 and 9 of U103 both drop to L, output pin 10 goes to H, Q110 and Q104 turn off and muting of the audio signal input to the record amp is released.

(2) 録音ミューティング回路

U101のピン4がHのときU103のピン8及びピン9はHで、その出力ピン10はLになっています。このためQ110にベース電流が流れてQ110はONになり、Q104もONになります。Q104がONになると録音アンプへのオーディオ信号入力はミューティングされます。U101のピン4がLになるとU103のピン8はLになり、またC110がD105、R115、U101のピン4を通して放電した後U103のピン9もLになります。U103のピン8とピン9が共にLになるとその出力ピン10はHになり、以下Q110、Q104がOFFになって録音アンプへのオーディオ信号入力のミューティングが解除されます。

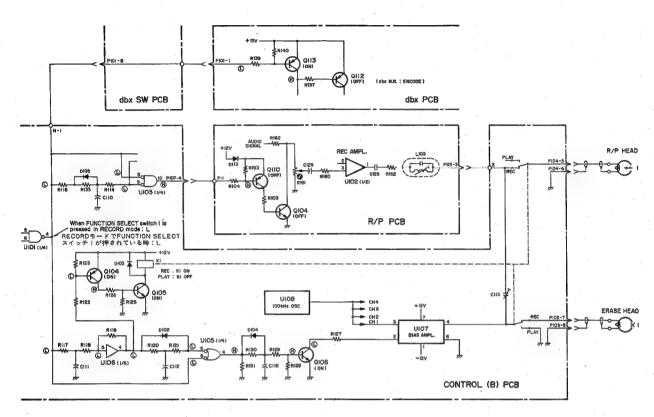


Fig. 6-16 Record control circuit 錄音制御回路

(3) Head Switching Circuit

When pin 4 of U101 is H, pins 4 and 5 of U106 are also H, Q104 is off and so is Q105. Since Q105 is off, relay K1 does not function, its contacting point remaining on the PLAY side. Therefore, the rec/play head is connected to the playback equalizer amp, the erase head is open and output pin 4 of the bias amp is grounded.

When pin 4 of U101 goes to L, pin 5 of U106 does so as well, as does pin 4. Q104 turns on, so does Q105. Relay K1 becomes operative, its contacting point switching to the REC side. As a result, the rec/play head is connected to the output circuit of the record amp, the erase head to the output of the bias amp.

If FUNCTION SELECT switch 1 is not on, the head is not switched even if the deck is in RECORD mode, because pin 4 of U101 remains at H.

(4) Bias Amp Circuit

Bias oscillator U108 always emits a 100 kHz signal when the deck's power is on. When pin 4 of U101 is H, pin 5 of U106 is H, as is pin 4. Therefore, pin 5 of U105 is H. Since pin 6 of U105 is also H, pin 4 is L and hence Q106 is off. When Q106 is off, bias amp U107 does not operate.

(3) ヘッド切替回路

U101のピン4がHのときU106のピン5及びピン4もHで、Q104はOFF そしてQ105もOFFになっています。Q105がOFFなのでリレーK1は動作せず、その接点はPLAY側になっています。従って録 $\sqrt{$ 再ヘットは再生イコライザ・アンプに接続されており、消去ヘットはオープン、そしてバイアス・アンプ出力ピン4は接地されています。

U101のピン4がLになるとU106のピン5もLになり、以下U106のピン4はL、Q104はONそしてQ105もONになってリレーK1が動作し、その接点はREC側に切替わります。この結果、緑/再ヘッドは録音アンブの出力回路に接続され、消去ヘッドはパイアス・アンプの出力に接続されます。尚デッキがRECORDモードであってもFUNCTION 1 SWがONになっていない場合、U101のピン4がHのままなのでヘッド切替は行なわれません。

(4) バイアス・アンプ回路

パイアスOSC U108はデッキの電源がONの間,常に100kHz 信号を発振しています。U101のピン4がHのときU106のピン5はH,そしてピン4もHなのでU105のピン5はHです。このときU105のピン6もHなのでピン4はL,従ってQ106はOFFになっています。Q106かOFFの時パイアス・アンプU107は動作しません。

When pin 4 of U101 drops to L, pin 6 of U105 also goes to L. Its pin 4 therefore goes to H, Q106's base goes to H via R130 and R129, and Q106 turns on. When Q106 turns on, the bias amp becomes operative, amplifying the bias oscillator's output and outputting it from pin 4 of the bias amplifier. This output is sent to the erase head and also to the rec/play head after being adjusted by C113 and added to the audio signal from the record amp as record bias.

C111, C112 and the circuits in their vicinity determine the timing for applying bias to the head in order to avoid noise being recorded that occurs f.e. when the head is switched when starting and stopping RECORD mode.

(5) dbx NR Circuit

When pin 4 of U101 is H, Q113 on the dbx PCB is off, Q112 on and the dbx NR circuit works as a decoder.

When pin 4 of U101 is L, Q113 on the dbx PCB is on, Q112 is off, and the dbx NR circuit works as an encoder.

C115's purpose is to output a bias envelope to the heads in order to prevent a bias click which could occur when starting or stopping RECORD mode.

6-3-4 RECORD LED, FUNCTION SELECT LED Circuit

The circuitry encircled by a broken line in fig. 6-17 is the square wave oscillator used for flashing the LEDs on and off. When the deck is on, it constantly emits alternating H/L signals.

(1) When the FUNCTION SELECT switch is off

When the FUNCTION SELECT switch is off, Q605's base is fixed at L and Q605 is off. Hence, the FUNCTION SELECT LED is off regardless of the mode the deck is in.

In any mode except RECORD (REC/PLAY, REC/PAUSE), pin 10 of U501 is L, as are pin 10 of U505 and pins 1 and 2 of U601. Pin 3 of U601 is H. Since pin 3 is H, pin 5 of U601 is also H, pin 4 L. Therefore Q614 is off and the RECORD LED is out.

When the deck is in RECORD mode, pin 10 of U501 outputs an H signal, pins 8, 9 and 10 of U505, pins 1 and 2 of U601 go to H, pin 3 of U601 to L. Pin 5 of U601 therefore also goes to L. When the output of pin 11 of U601 is L, pin 6 goes to L via D614, when the output of pin 11 is H, pin 6 goes to H via R635. In other words, pin 6 of U601 receives an alternating H/L signal synchronous with the one output from the oscillator. Since pin 5 of U601 is L, a reversed alternating H.L signal is output from pin 4 when pin 6 repeats the H/L signal. When pin 4 of U601 is L, Q614 is off. When this pin is H, Q614 is on and the RECORD LED flashes.

U101のピン4がLになるとU105のピン6もLになるのでそのピン4はHになり、R130及びR129を通してQ106のペースをHにし、Q106はONになります。Q106がONになるとバイアス・アンプは動作状態になり、バイアスOSC出力を増幅してピン4から出力します。この出力は消去ヘッドに送られると共に、C113で調整された後、録音バイアスとして録音アンプからのオーディオ信号に重畳されて録/再ヘッドに送られます。尚C111、C112及びその周辺回路は、RECORDモードのスタート・ストップ時にヘッド切替その他に伴う雑音がテープ上に録音されることを防ぐため、ヘッドにバイアスを与えるタイミングを決定しています。又C115はヘッドに加わるバイアスのエンペロープを作って、RECORDモードのスタート・ストップ時のバイアス・クリックを防止しています。

(5) dbx NR回路

U101のピン4がHのときdbx PCBのQ113はOFF,Q112はONで,dbx NR回路はデコーダとして動作します。 U101のピン4がLのときdbx PCBのQ113はON,Q112はOFFになり,dbx NR回路はエンコーダとして動作します。

6-3-4 RECORD LED, FUNCTION LED 回路

図6-17で破線で囲まれた回路はLED点滅用の矩形波発振器で、デッキの電源がONになっている間、常に $H \cdot L$ の繰返し信号を発生しています。

(1) FUNCTION SW OFFの場合

FUNCTION SW がOFFになっているとQ605のベースはL に固定されていてQ605はOFFです。このためデッキのモー ドに関係なくFUNCTION LEDは消えています。

デッキがRECORDモード (REC/PLAY又はREC/PAUSEモード) 以外の時U501のピン10はして,U505のピン10, U601のピン1, 2もし,U601のピン3はHになっています.U601のピン3がHなのでU601のピン5もH,そしてU601のピン4はLになっています.従ってQ614はOFF,RECORD LEDは消えています.

デッキがRECORDモードになるとU501のピン10からHが出力され、U505のピン8,9及び10,U601のピン1,2はHに、U601のピン3はLになります。従ってU601のピン5もLになります。U601のピン10出力がLのときD614を通してLになり、U601のピン11の出力がHのときはR635を通してHになります。つまりU601のピン6には発振器出力に同期したH・Lの繰返し信号が与えられます。そしてU601のピン5はLになっているのでピン6がH-Lを繰返すとピン4からはその反転出力L・Hの繰返し信号が出力されます。U601のピン4がLのときQ614かOFF、HのときONとなってRECORD LEDが点減します。

(2) When the FUNCTION SELECT switch is on

When the FUNCTION SELECT switch is on, Q605 is in standby since bias is applied via R617 and R619.

In any other mode than RECORD, pin 3 of U601 is H. Hence, Q613 is on and its collector is L. In this case, an alternating H/L signal is sent applied to the base of Q604, coming from pin 11 of U601 via D605 and R618. Since bias is already being applied to the base of Q605, Q604 and Q605 both turn on when an H signal is applied to the base of Q604, and the FUNCTION SELECT LED lights. When Q604's base is L, Q604 turns off and the FUNCTION SELECT LED goes out. Therefore, when an alternating H/L signal is applied to the base of Q604, the FUNCTION SELECT LED flashes on and off. On the other hand, when pin 3 of U601 is H, its pin 5 is also H and its output pin 4 is fixed to L. Therefore, Q614 is off and the RECORD LED is out.

When the deck is in RECORD mode, pin 3 of U601 is L, Q613 is off, pin 5 of U601 L. When Q613 is off, bias is applied to the base of Q604 via R645, D605, R618. Q604 and Q605 are therefore fixed to on and the FUNCTION SELECT LED remains on. Furthermore, when Q604 and Q605 both turn on, Q604's collector is L, fixing pin 6 of U601 to L via D613. (When the FUNCTION SELECT switch of any one of the 4 channels is on, pin 6 of U601 is L.) Therefore, pins 5 and 6 of U601 both go to L, its output to H, Q614 turns on and the RECORD LED remains on.

(2) FUNCTION SW ONの場合

デッキがRECORDモード以外のモードの時、U601のピン3はHですからQ613はONになっていてそのコレクタはLになっています。このときQ604のペースにはU601のピン11からD605とR618を通してH・Lの繰返し信号が与えられます。Q605のペースには既にパイアスが与えられているので、Q604のペースにHが与えられるとQ604とQ605は共にONになりFUNCTION LEDが点灯します。Q604のペースがLのときQ604はOFFになりFUNCTION LED は消えます。従ってQ604のペースにH・Lの繰返し信号が与えられるとFUNCTION LED は点滅を繰返します。一方U601のピン3がHのときU601のピン5もHでその出力ピン4はLに固定されています。従ってQ614はOFFのままでRECORD LEDは消えています。デッキがRECORDモードになるとU601のピン3はLになり、Q613はOFF、そしてU601のピン5はLになります。Q613

FUNCTION SW を ON にすると R 617と R 619を通してハイ

アスが与えられるのでQ605は待機状態になります。

Q613はOFF, そしてU601のピン5はLになります。Q613 かOFFになるとR645, D605, R618を通してQ604のベースにパイアスが与えられるのでQ604及びQ605はONに固定され、FUNCTION LED は点灯したままになります。更にQ604とQ605が共にONになるとQ604のコレクタはLになりますから、U601のピン6はD613を通してLに固定されます。(尚CH1からCH4のうちどれか1チャネルでもFUNCTIONSWがONになっているとU601のピン6はLになります)。

この為U601のピン6 とピン5 は共にLになりその出力はH, Q614はONになって RECORD LED は点灯したままになります。

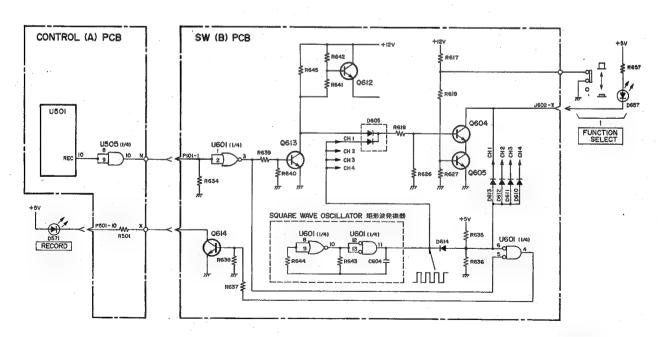


Fig. 6-17 RECORD LED, FUNCTION SELECT LED circuit RECORD LED、FUNCTION SELECT LED回路

6-3-5 Monitor Control Circuit

(1) Monitor Output Select Circuit

U104 shown in fig. 6-18 is an analog switch. When +12V is applied to the control terminal (pins 12, 6), the switch turns on, when -12V is applied, the switch turns off. The CONTROL(C) PCB's circuit is a level shift circuit which divides the control signals between +12V and -12V in order to control the analog switch.

An H signal (+12V) is applied to point A in the fig. under any of the following conditions. Under any other conditions, point A is pulled down to the -12V side, becoming L, due to R104.

- When the OUTPUT SELECT switch is set to INPUT
- When FUNCTION SELECT switch 1 is on and the INPUT/ SYNC switch is set to INPUT
- When FUNCTION SELECT switch 1 is on, the INPUT/SYNC switch is set to SYNC and the deck is in RECORD mode

When point A is H, Q101 is off, and -12V is applied to pin 6 of U104 via R103, R102 and R130. Therefore, analog switch U104 (pins 9, 8) is off. When Q101 is off, Q103 also turns off. Pin 12 of U104 receives +12V via R101 and R131. Hence, the analog switch U104 (pins 11, 10) is on. As a result, the source signal from LINE IN or MIC/INST is sent to LINE OUT and the meter circuitry, and to the CUE OUT circuit via PAN.

When point A is L, things are exactly reversed. Q101, Q103 turn on, U104 (pins 9, 8) is on, U104 (pins 11, 10) is off.

6-3-5 モニタ制御回路

(1) モニタ出力選択回路

図6-18に示したU104はアナログ・スイッチで、コントロール端子(ピン12、ピン6)に+12Vが与えられたときスイッチON、-12Vが与えられるとスイッチOFFになります。CONTROL (C) PCBの回路はアナログ・スイッチを制御するために制御信号を+12Vと-12Vに振り分けるレベル・シフト回路です。

図中の個点には次のいずれかの条件のときH信号(+12V)が 与えられます。それ以外の条件の時個点はR104によって-12 V側に引かれてLレベルになります。

- ・OUTPUT SELECTスイッチがINPUTのとき
- ・FUNCTION 1 スイッチがONで、且つINPUT/SYNCスイッチがINPUTのとき
- ・FUNCTION 1 スイッチがONで、INPUT/SYNCスイッチがSYNCで且つデッキがRECORDモードのとき

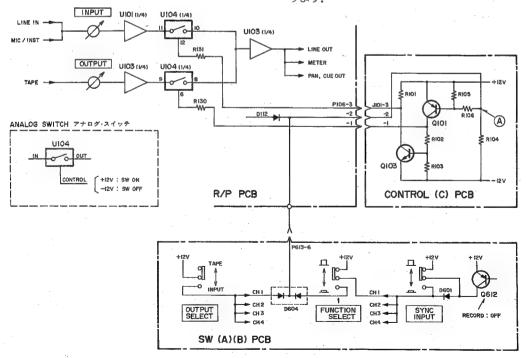


Fig. 6-18 Monitor output select circuit モニタ出力選択回路

(2) dbx NR Input Select Circuit

See fig. 6-19. The operation of this circuit is the same as that of the aforementioned monitor output select circuit. Pin 10 of U103 on CONTROL(B) PCB is H only when FUNCTION SELECT switch 1 is on and the deck is in RECORD mode (see 6-3-3).

When pin 10 of U103 is H, Q102, Q104 are both off, analog switch U104 (pins 3 and 4) is off, U104 (pins 1 and 2) on. Therefore, the source signal from LINE IN or MIC/INST is input into the dbx NR circuitry.

When pin 10 of U103 is L, things are reversed. Q102, Q104 are on, U104 (pins 1 and 2) is off, U104 (pins 3 and 4) on. In this case, the playback signals from the tape are input into the dbx NR circuitry.

(2) dbx NR入力選択回路

図6-19を参照してください。この回路の動作は前述のモニタ 出力選択回路と同様です。CONTROL(B) PCB のU103のピン10は、FUNCTION 1 SWがONでデッキがRECORDモー ドの時だけHになります(6-3-3項参照)。

U103のピン10がHのときQ102, Q104は共にOFF, Pナロク-スイッチU104のピン3, ピン4はOFF, U104のピン1, ピン2はONとなります。従ってこの場合には LINE IN 或いはMIC/INSTからのソース信号がdbx NR回路に入力されます。

U103のピン10がLのときはこの逆にQ102,Q104はON,U104(ピン1,ピン2)はOFF,U104(ピン3,ピン4)はONとなります。従ってこの場合dbx NR回路にはテープの再生信号が入力されます。

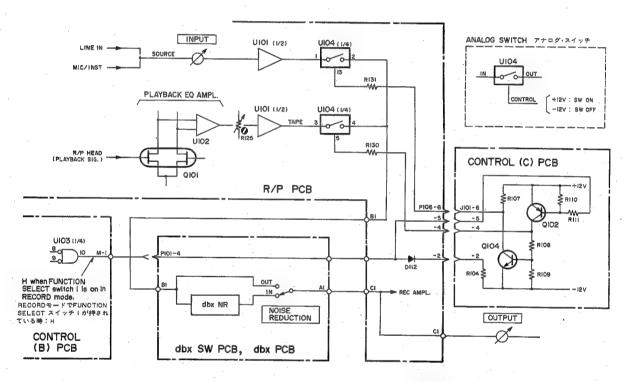


Fig. 6-19 dbx NR input select circuit dbx NR 入力選択回路

(3) Meter Switching Circuit

When the METER switch is in the TRK position, Q105, Q205, Q305, Q405 turn on and the LINE OUT signal is sent to each channel's meter circuit.

When the METER switch is in the CUE position, Q106 and Q107 are on and the CUE OUT signal is sent to the meter circuit. In this case, the meter lamps of channels 3 and 4 go out.

(3) メータ切換回路

METERスイッチがTRK位置のときQ105, Q205, Q305, Q405がONになり、LINE OUT信号がそれぞれのチャネルのメータ回路に送られます。

METERスイッチがCUE位置のときはQ106とQ107がONになり、CUE OUT信号がメータ回路へ送られます。この場合チャネル3とチャネル4のメータ・ランプは消えます。

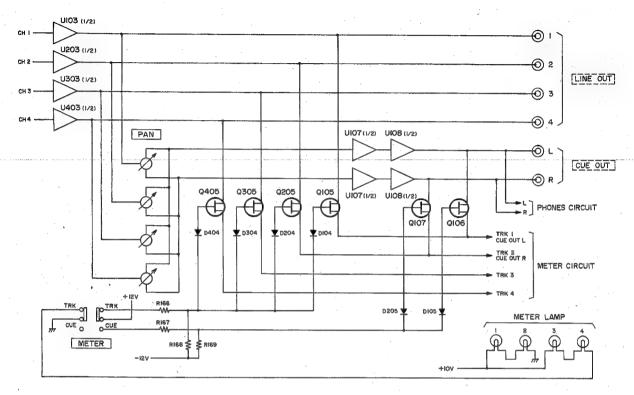


Fig. 6-20 Meter circuit メータ回路

6-4 Amp Circuit

Here, we will mainly give an outline of the amp circuit as far as channel 1 is concerned. Please see the block diagram and the schematic diagrams supplied with the service manual. In the following text, U101—7 f.e. means an operating amp U101 in which pin 7 is the output pin.

6-4-1 Recording System

There are two inputs for the signal to be recorded, LINE IN and MIC/INST in.

The MIC/INST input is input into a mike amp consisting of Q101 and U101—7 on the MIC AMPL PCB. When the TRIM knob is rotated fully to the right, this amp's gain is about 50dB, when turned fully to the left, it operates as a flat amp with a gain of 0dB. The mike amp output is sent to the R/P PCB and mixed with the LINE IN input. After that, it is sent to the VR PCB's INPUT volume control. The signal whose level has been adjusted with the INPUT volume control is again sent to the R/P PCB and enters U101—1. The signal, which is raised to the nominal level (-10dBV)

6-4 アンプ回路

ここでは主としてチャネル1のみについてアンプ回路の概要を述べます。プロック・ダイアグラム及びサービス・マニュアルに添付の回路図を参照してください。尚説明文中,例えばU101-7とあるのは、U101のうちピン7を出力ピンとするオペ・アンプであることを示します。

6-4-1 録音系

録音信号の入力個所はLINE INとMIC/INSTの 2ヶ所です。MIC/INST入力はMIC AMPL PCBのQ101とU101-7で構成されているマイク・アンプに入力されます。このアンプはTRIM つまみを右一杯にまわした時利得は約50dBとなり、左一杯にまわした時は利得 0 dBのフラット・アンプとして動作します。マイク・アンプ出力は R/P PCBへ送られLINE IN 入力とミキシングされた後 VR PCBのINPUTポリウムへ送られます。INPUTポリウムでレベル調整された信号は再び R/P PCB に戻りU101-1に入ります。このU101-1で基準レベル(-10dBV)

by U101—1 is then divided into to, one part being sent to pin 11 of the output select circuit's analog switch U104, the other to pin 1 of the input select circuit's analog switch U104. The signal which has passed input select circuit U104 (pins 1, 2) is sent to the dbx switching PCB. If the NOISE REDUCTION switch is in at that time, the signal is sent to the dbx PCB and encoded. It then returns to the R/P PCB via the dbx switching PCB and to record amp U102—1. If the NOISE REDUCTION switch is out, the signal is sent to the record amp directly without passing the dbx NR circuitry. The output of record amp U102—1 is sent to CONTROL(B) PCB via bias trap L103. After-bias has been applied to the audio signal by C113 on the CONTROL(B) PCB, the combined signal is sent to the rec/play head.

6-4-2 Playback System

The tape playback signal from the rec/play head is sent to the playback equalizer amp consisting of Q101 and U102—7 on the R/P PCB via the CONTROL(B) PCB. The time constant for the low frequency range is established by R118 and C112, that for the high frequency range by R119 and C112 of this amp's feedback circuit. Bias traps L101 and L102 are installed on the playback equalizer amp's input and output sides. Semi-fixed resistor R122 is provided for fine adjustment of frequency characteristics, thermistor RT01 for temperature compensation.

The output of the playback equalizer amp is level adjusted by R125 and then amplified to the nominal level (-10dBV) by U101-7, from where it is sent to pin 3 of the input select circuit's analog switch U104. Having passed U104 (pins 3 and 4), the signal is sent to the dbx PCB via the dbx switching PCB and decoded. The decoded signal is sent to the VR PCB's OUTPUT volume control via the dbx switching PCB and the R/P PCB. Its level having been adjusted by the OUTPUT volume control, the signal is then amplified by the R/P PCB's U103-1 to nominal level and then sent to pin 9 of the output select circuit's analog switch U104.

6-4-3 Monitor System

The source signal is fed to pin 11 of the R/P PCB's output select circuit analog switch U104, the tape signal to pin 9 of U104. The selected source or tape signal is divided into three parts after passing buffer amp U103—7.

- Part one is output from LINE OUT via R150.
- Part two passes the same R150 and is then sent to Q105 in the meter switching circuit.
- Part three is sent to the VR PCB's PAN control and there distributed among the left and right channels. The left channel components of channels 1 to 4 are mixed and sent to the R/P PCB's cue amp U107—7, the right channel component signals mixed and sent to U107—1. U107—7's output is sent to U108—7 whose output then goes to CUE OUT, to the meter switching circuit's Q106 and to the PHONES volume control via R137. Having passed the PHONES volume control, the signal is sent to the PHONES jack via phones amp U109—5.

まで引上げられた信号は2系統に別れ、一方は出力選択回路のアナログ・スイッチU104のピン11へ、他方は入力選択回路のアナログ・スイッチU104のピン1 へ送られます。入力選択回路U104(ピン1、ピン2)を通った信号はdbx SW PCBへ送られます。このとき NOISE REDUCTION スイッチがINになっていると信号はdbx PCBへ送られエンコードされてからdbx SW PCBを経てR/P PCBに戻り、録音アンブU102-1へ送られます。NOISE REDUCTION スイッチがOUTになっている場合はdbx NR回路を経ないで録音アンブへ送られます。録音アンブU102-1の出力はバイアス・トラップL103を通ってCONTROL(B) PCBへ送られます。CONTROL(B) PCBではC113によってオーディオ信号にバイアスが重畳された後、その重畳信号は録人再へットに送られます。

6-4-2 再生系

録/再ヘッドからのテーブ再生信号は、CONTROL (B) PCB を通ってR/P PCBのQ101とU102-7で構成されている再生イコライザ・アンプに送られます。このアンプの帰還回路のR118とC112で低域の、R119とC112で高域の時定数を設定しています。再生イコライザ・アンプの入力側と出力側にはそれぞれパイアス・トラップL101とL102が設けられています。半固定抵抗R122は周波数特性微調整のため、サーミスタ RT01 は温度補償の為に設けられています。

再生イコライザ・アンプの出力はR125でレベル調整された後U101-7で基準レベル (-10dBV)まで増幅され、入力選択回路のアナロク・スイッチU104のピン3に送られます。U104(ピン3、ピン4)を通った信号はdbx SW PCBを経てdbx PCBに送られデコードされます。デコードされた信号はdbx SW PCBとR/P PCBを経てVR PCBのOUTPUTボリウムに送られます。OUTPUTボリウムでレベル調整された信号はR/P PCBのU103-1で基準レベルまで増幅された後、出力選択回路のアナログ・スイッチU104のピン9に送られます。

6-4-3 モニタ系

R/P PCBの出力選択回路のアナログ・スイッチ U104のピン11 にはソース信号が, U104のピン9 にはテープ信号が与えられています。ここで選択されたソース又はテープ信号は, バッファ・アンブ U103-7を通った後3系統に分かれます。

第一の系統はR150を通ってLINE OUTに出力されます。

第二の系統は同じくR150を通った後メータ切換回路のQ105に 送られます。

第三の系統はVR PCBのPANコントロールに送られ、ここで LチャネルとRチャネルに振り分けられます。更にチャネル1 からチャネル4のLチャネル同志及びRチャネル同志がミック スされ、Lチャネルの信号はR/P PCBのキュー・アンブU107-7、Rチャネルの信号は同じくU107-1に送られます。U107If the SW(A) PCB's CUE switch is set to MONO, Q108 turns on and the outputs of U107-7 and U107-1 are mixed for a monaural output.

6-4-4 Meter Circuit

When the METER switch is in the TRK position, the LINE OUT signal passes Q105. In the CUE position, the CUE OUT signal passes Q106. In both cases, the signal is then sent to meter amp U106—7 and to peak level indicator amp U105—2. U106—7 operates the VU meters,

The peak level reference voltage (approx. 1V), which has been divided by R192 and R193, is applied to pin 5 of U105. When the signal voltage of input pin 4 is lower than the reference voltage, output pin 2 is H, but when the signal level rises and exceeds the reference voltage, output pin 2 drops to L.

A reference voltage of about 7.2V is applied to pin 4 of U205. The reference voltage of this pin is considerably higher than that of U105's pin 5 in order to ensure stable operation of the circuit. R195 and C144 form a filter which prevents the peak level indicators from flickering due to the input signal. The function of U205 is the opposite of U105. When the voltage of U205's pin 5 becomes lower than that of pin 4, output pin 2 drops to L and the peak level indicator lights. The threshold level of the peak level indicators is +8VU.

7出力はU108-7を経てCUE OUTに出力されると共にメータ切換回路のQ106及びR137を通してPHONES ボリウムに送られます。PHONESボリウムを経た信号はホーン・アンブU109-5を通ってPHONESシャックへ出力されます。

SW (A) PCB の CUE スイッチを MONO 位置にすると Q108が ON になり、 U107-7の出力と U107-1の出力とがミックスされてモノラルになります。

6-4-4 メータ回路

METERスイッチがTRK位置のときはLINE OUT信号がQ105 を通して、またCUE位置の時はCUE OUT信号がQ106を通してメータ・アンプU106-7とピーク・レベル・インジケータ・アンプU105-2に送られます。

U106-7はVUメータを振らせます。

U105のピン 5 には R192と R193で分圧されたピーク・レベル基準電圧(約 1 V)が与えられています。 入力ピン 4 の信号電圧が基準電圧より低いとき出力ピン 2 はHですが、信号レベルが高くなって基準電圧を越えると出力ピン 2 はLになります。


U205はピン4に基準電圧約7.2Vが与えられています、U205のピン4の基準電圧はU105のピン5の基準電圧よりかなり高い電圧で、回路動作をより安定なものにしています。R195とC144で入力信号によってピーク・レベル・インジケータがちらつく事を防ぐためのフィルターを構成しています。U205はU105と動作が逆です。U205のピン5の電圧がピン4の電圧より低くなると出力ピン2はしになり、ピーク・レベル・インジケータが点灯します。ピーク・レベル・インジケータの点灯レベルは+8 VUです

PARTS LIST SECTION

7 EXPLODED VIEWS AND PARTS LIST

分解図とパーツ・リスト

EXPLODED VIEW-1

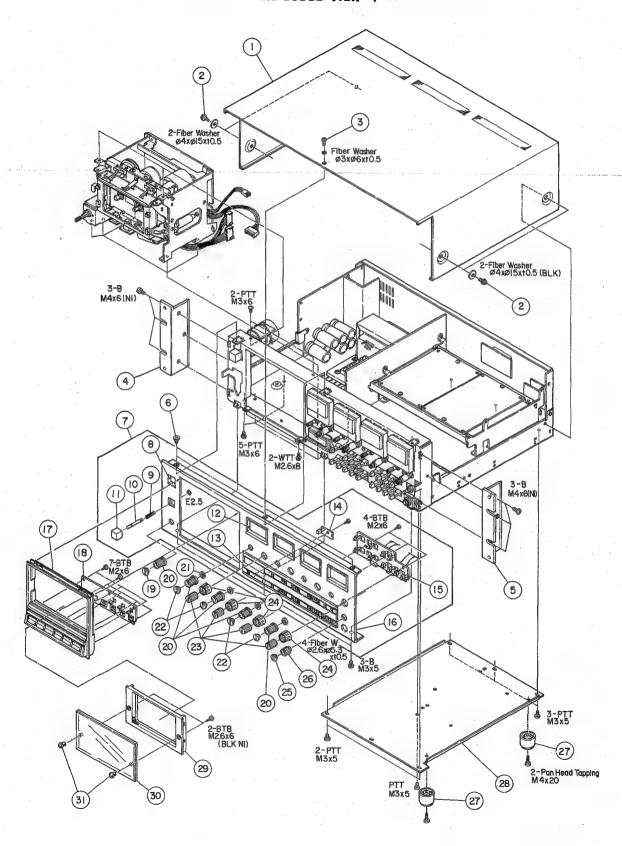

REF.NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
1 - 1 1 - 2 1 - 3	*5800132000	Cover, Top Screw, M4 x 6 (BLK Ni) Screw, M3 x 6 (BLK Ni)		
1 - 4	*5800173300 *5800173400	Bracket, Handle; L Bracket, Handle: R	133 133	
1 - 6 1 - 7 1 - 8 1 - 9 1 -10	*5581055000 *5640045800 *5800473200 5800471500 *5800472200	Screw, Shoulder: D Panel Assy, Front Escutcheon, Button Spring, Eject; A Rod, Eject		
1 -11 1 -12 1 -13 1 -14 1 -15	5800475700 *5800349301 *5800473401 *5200120500 *5200120400	Button, P; (1) Escutcheon, Meter Escutcheon Assy, SW PCB Assy, LED B PCB Assy, LED A		
1 -16 1 -17 1 -18 1 -19 1 -20	*5800473501 *5800473601 *5200121000 6006054100 5800146800	Panel, Front Escutcheon Assy, Cassette PCB Assy, SW Cap, Kob Knob, B-15S	M-5 M-35	
1 -21 1 -22 1 -23 1 -24 1 -25	6006055100 5800278301 5800367900 5800134200	Washer, Fiber; ϕ 2.6 x ϕ 5.3 x t0.5 Cap, Kob; ORG Knob, B Knob B Assy, (1) Cap, L; GRN	M-5 244 244 M-50	
1 -26 1 -27 1 -28 1 -29 1 -30	5800382800 *5504676000 *5552340204 *5800122500 5800471701	Knob, B-11D Foot, 19L Chassis, Bottom Cover, Cassette; (2) Cover, Cassette	M-50 f-500 133 V-9	
1 -31	5800116800	Bushing	V-9	

Parts marked with * require longer delivery time.

INCLUDED ACCESSORIES

REF.NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
	*5700045200	234 Owner's Manual [J]		
	*5700045300	234 Owner's Manual [US, GE, UK, A]		
	*5700045400	234 Owner's Manual [C, E]		
	*5740000500	Sash, Side; B	C-3X	
	*5544995000	Washer	C-1	
	*5534659000	Spacer	l č-i	
		Screw, F M5 x 15 (Ni)		
	5504567000	Handle Assy, Audio Rack [E, UK] Screw, F M5 x 10 (Ni) [E, UK]	C-1	


Parts marked with * require longer delivery time.

[US]: U.S.A. [A]: AUSTRALIA [C]: CANADA [J]: JAPAN [GE]: GENERAL EXPORT

[E]: EUROPE

[UK]: U.K.


EXPLODED VIEW-2

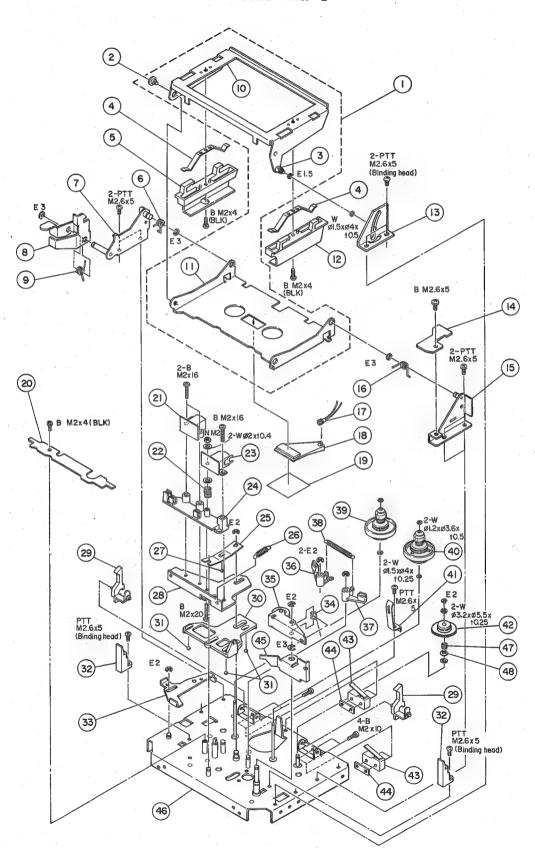

REF.NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
2 - 1 2 - 2 2 - 3 2 - 4 2 - 5	*5800157400 *5581056000 *5800120100 5800115402 5800109600	Holder Sub-assy, Cassette Screw, Shoulder; A Roller, Guide Spring, Cassette Pressure Holder, L	V-3RX A-304 V-9 V-9 V-9	
2 - 6 2 - 7 2 - 8 2 - 9 2 -10	*5800115500 *5800471100 *5800471900 *5800115700 *5800122901	Spring, Holder; L Bracket Assy, Holder; L Arm, Eject Spring, Lock Holder Sub-assy, Cassette; (1)	V-9 V-9 V-9	
2 -11 2 -12 2 -13 2 -14 2 -15	*5800157300 5800122100 *5800119000 *5200118900 *5800159201	Holder, Cassette; (3) Holder, R Bracket, Holder Guide PCB Assy, SENSOR Bracket Assy, Holder; R	V-3RX V-9 V-9 V-3RX	
2 -16 2 -17 2 -18 2 -19 2 -20	*5800115600 5142089000 *5800033300 *580002900 *5800169400	Spring, Holder; R Lamp, DC 6V 65mA Lens, Lamp Plate, Reflective Cover, Head	V-9 ff-55 c-2	
2 -21 2 -22 2 -23 2 -24 2 -25	5378600900 5800114700 5378600800 *5800279202 *5800114900	Head, Erase; 4T-4CH Spring, Head Head, R/P; 4T-4CH Stand, Head Spring, Base Plate Pressure	V-9 244 V-9	
2 -26 2 -27 2 -28 2 -29 2 -30	*5800304100 5540055000 *5800472101 *5800117301 *5800122802	Spring, Head Base Steel Ball, #2 Plate, Head Base Arm, Sensor Plate, Slider	244 A-450 V-9 V-9	
2 -31 2 -32 2 -33 2 -34 2 -35	5540056000 *5800117400 *5800119200 5800276100 5800275700	Steel Ball, \$\phi 3\$ Guide, Cassette Plate, Stopper Spring, Pinch Roller Pinch Roller Assy	A-450 V-9 V-9 244 244	
2 -36 2 -37 2 -38 2 -39 2 -40	*5800131601 *5800131701 *5800114800 5800107300 5800108701	Arm Assy, Brake; L Arm Assy, Brake; R Spring, Brake Table Assy, Reel; Supply Table Assy, Reel; Take-up	V-9 V-9 V-9 V-9 V-9	
2 -41 2 -42 2 -43 2 -44 2 -45	5800115002 5800304600 5301455300 *5554447000 *5800276201	Spring, Cassette Pressure Gear Assy, Counter Switch, Micro Plate, Micro Switch Arm, Spring	V-9 244 A-400 244	
2 -46 2 -47 2 -48	*5800472501 *5800124300 *5800159100	Chassis Assy, Mechanism Spring, Tension Holder, Spring	ff-70 V-3RX	

Parts marked with * require longer delivery time.


EXPLODED VIEW-3

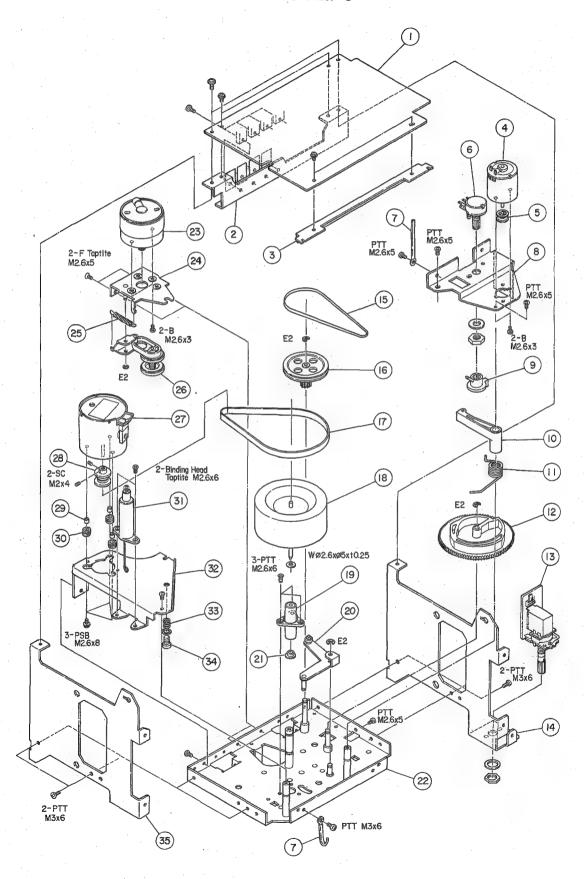

3 - 1 *5200119700 Bracket, PCB; A Say, CONTROL A S- 2 *5800470900 Bracket, PCB; B S- 4 537001400 Motor, Control; DC V-9 V-9 Separation of the policy of the	REF.NO.	EF.NO. PARTS NO. DESCRIPTION		COMMON MODELS	REMARKS		
3 - 6	3 - 2 3 - 3 3 - 4	*5800470900 *5800471000 5370001400	Bracket, PCB; A Bracket, PCB; B Motor, Control; DC				
3 -12 *5800122700	3 - 7 3 - 8 3 - 9	*5581038000 *5800122200 *5800116700	Clamper, Cord; A Bracket, Motor Joint	V-9	R581		
3 -17	3 -12 3 -13 3 -14	*5800122700 *5200119900 *5800472300	Cam, Control PCB Assy, PITCH CONTROL Bracket, Mechanism Chassis; L	V-9			
3 -22	3 -17 3 -18 3 -19	5800472000 5800106401 5800106200	Belt, Capstan Drive Flywheel Assy, Capstan Houshing Assy, Capstan	V-9			
3 -27 5370003700 Motor, Capstan; DC 3 -28 5800475800 Pulley, Motor 3 -29 Spacer, \$\phi_2.6 \times t_5 3 -30 *5534537000 Cushion, Rubber A-206 3 -31 5800131802 Damper Assy 3 -32 *5800122301 Bracket, Flywheel 3 -33 *5800161400 Spring, Thrust 3 -34 *5800166300 Screw, Thrust 5 V-9 5 V-9 7 V-9	3 -22 3 -23 3 -24	*5800472500 5370001200 *5800121801	Chassis Assy, Mechanism Motor Assy, Reel; DC Bracket Assy, Reel Motor	V-9 V-9			
3 -32	3 -27 3 -28 3 -29	5370003700 5800475800	Motor, Capstan; DC Pulley, Motor Spacer, \$\phi 2.6 \times t5				
3 -35 *5800472400 Bracket, Mechanism Chassis	3 -32 3 -33	*5800122301 *5800161400	Bracket, Flywheel Spring, Thrust	V-9 V-9			

Parts marked with * require longer delivery time.

EXPLODED VIEW-4

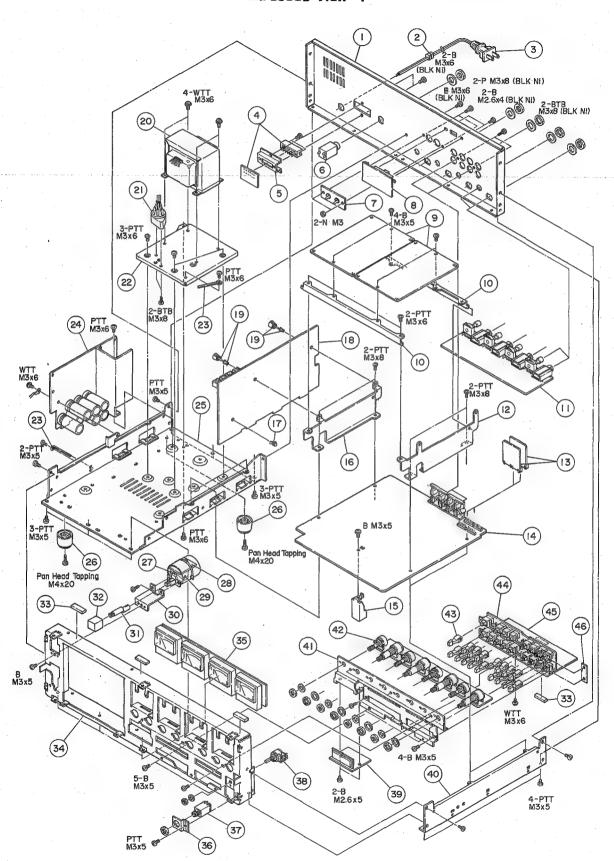

REF.NO.	PARTS NO.	DESCRIPTION	COMMON MODELS	REMARKS
4 - 1 4 - 2	*5800473700 Δ *5534660000 Δ *5317001700	Panel, Rear Bush, Cord; 4N-4 [All except UK] Bush, Cord; 4N-5 [UK]		
4 - 3	Δ*5128027000 Δ*5350010800 Δ*5350008200 Δ*5128047000 Δ*5350008300	Cord, AC Power [J] Cord, AC Power [US, C, GE] Cord, AC Power [E] Cord, AC power [UK] Cord, AC Power [A]		
4 - 4 4 - 5 4 - 6 4 - 7 4 - 8	*5200120900 *5554099100 *5330008400 *5330508100 *5200119500	PCB Assy, REMOTE Bracket, Connector Jack, REMOTE Jack, Pin; 2P PCB Assy, DBX SW		
4 - 9 4 -10 4 -11 4 -12 4 -13	*5200120701 *5800472800 *5200119400 *5800472700 *5200126900	PCB Assy, DBX Bracket, DBX PCB PCB Assy, MIC AMPL. Bracket, PCB; B PCB Assy, CONTROL C		
4 -14 4 -15 4 -16 4 -17 4 -18	*5200119300 *5555565200 *5800472600 *5787030400 *5200119000	PCB Assy, R/P AMPL. Bracket, R/P AMPL. PCB Bracket, PCB; A Support, PCB PCB Assy, CONTROL B	f-500	
4 -19 4 -20	*5786618200 ± 5320023100 ± 5320023200 ± 5320023300 ± 5320023400	Rivet, Push; T-type Transformer, Power [J] Transformer, Power [US, C] Transformer, Power [GE] Transformer, Power [E, UK, A]		
4 -21 4 -22 4 -23 4 -24	▲ 5302101700 *5553353104 *5581038090 *5200119800 *5200119810	Switch, Voltage Selector [GE] Bracket, Power Transformer; B Clamper, Cord; A PCB Assy, POWER SUPPLY [J, US, C, GE] PCB Assy, POWER SUPPLY [E, UK, A]	C-3	
4 -25 4 -26 4 -27	*5800474200 *5504676000 \$ 5052905000 \$ 5052910000 \$ 5292002600 \$ 5292002500 \$ 5267702500	Chassis, R Foot, 19L Spark Killer, $0.1\mu\text{F} + 120\Omega/300\text{V}$ [J] Spark Killer, $0.033\mu\text{F} + 120\Omega/125\text{V}$ [US] Spark Killer, $0.033\mu\text{F} + 120\Omega/125\text{V}$ [C] Spark Killer, $0.01\mu\text{F} + 300\Omega/300\text{V}$ [GE] Spark Killer, $0.0047\mu\text{F}/250\text{V}$ [E, UK, A]	f-500 f-500	
4 -28 4 -29 4 -30 4 -31 4 -32 4 -33	*5210127100 ▲ 5300030800 *5800471400 *5800116200 5800173100 *5555570000	PCB, POWER SW Switch, Push; Power Bracket, Power Switch Rod, A Button, Power Cushion, B	V-9 133 f-500	
4 -34 4 -35 4 -36 4 -37	*5800474101 *5200118200 5296005000 *5800471800 5330008500	Chassis, Front PCB Assy, METER Meter, VU Bracket, Jack Jack, PHONES		
4 -38 4 -39 4 -40 4 -41 4 -42	5282409100 5312000100 *5553269101 *5800473900 *5200120800	Var. Res., 10kΩ (A) x 2 Counter Assy Chassis, L Bracket, SW PCB Assy, VR		
4 -43 4 -44 4 -45 4 -46	5800302300 *5200120100 *5200120200 *5800471300	Button, Push; Counter PCB Assy, SW A PCB Assy, SW B Plate, Switch		

Parts marked with * require longer delivery time.

[C]: CANADA [US]: U.S.A. [A]: AUSTRALIA [J]: JAPAN

[GE]: GENERAL EXPORT

[E]: EUROPE

[UK]: U.K.


ASSEMBLING HARDWARE CODING LIST ねじ類一覧表


All screws conform to ISO standards, and have crossrecessed heads, unless otherwise noted. ISO screws have the head inscribed with a point as in the figure to the right.

本機のねし類は特に分解図中に明記されているものを除いて、全て十字穴付のISOメート

ルねじを使用しております。 ISOねじは右図のように頭部に点が刻印されています。

=()R E)	(AMPLE:	
3	M 3 x	6	
1		Length in mm (L)	
!		Diameter in mm (D) *	
! }	L	Metric System	






* Inner dia. for washers and nuts

	Code	Name	Туре		. Code	Name	Туре
MACHINE SCREW	R	Round Head Screw		TAPPING SCREW	вта	Binding Head Tapping Screw(A Type)	
	P	Pan Head Screw			BTB	Binding Head Tapping Screw(B Type)	
	Ţ	Stove Head Screw (Truss)			RŢA	Round Head Tapping Screw(A Type)	
	В	Binding Head Screw		*	RTB	Round Head Tapping Screw(B Type)	
	F	Flat Countersunk Head Screw	(3)	SETSCREW	SF	Hex Socket Setscrew(Flat Point)	
	0	Oval Countersunk Head Screw			sc	Hex Socket Setscrew(Cup Point)	
WOOD SCREW	RW	Round Head Wood Screw			SS	Slotted Socket Setscrew(Flat Point)	Ø <u></u>
TAPTITE SCREW	PTT	Pan Head Taptite Screw		WASHER	E	E-Ring (Retaining Washer)	(2)
	WTT	Washer Head Taptite Screw			w	Flat Washer (Plain)	
SEMS SCREW	BSA	Binding Head SEMS Screw(A Type)			sw	Lock Washer (Spring)	G
	BSB	Binding Head SEMS Screw(B Type)			LWI	Lock Washer (Internal Teeth)	(5,000)
	BSF	Binding Head SEMS Screw(F Type)			LWE	Lock Washer (External Teeth)	ĘĢ.
	PSA	Pan Head SEMS Screw(A Type)		in the second se	T _i W ,	Trim Washer (Countersunk)	0
	PSB	Pan Head SEMS Screw(B Type)		NUT	N	Hex Nut	


8 PC BOARDS AND PARTS LIST

基板図とパーツ・リスト


R/P PCB ASSY

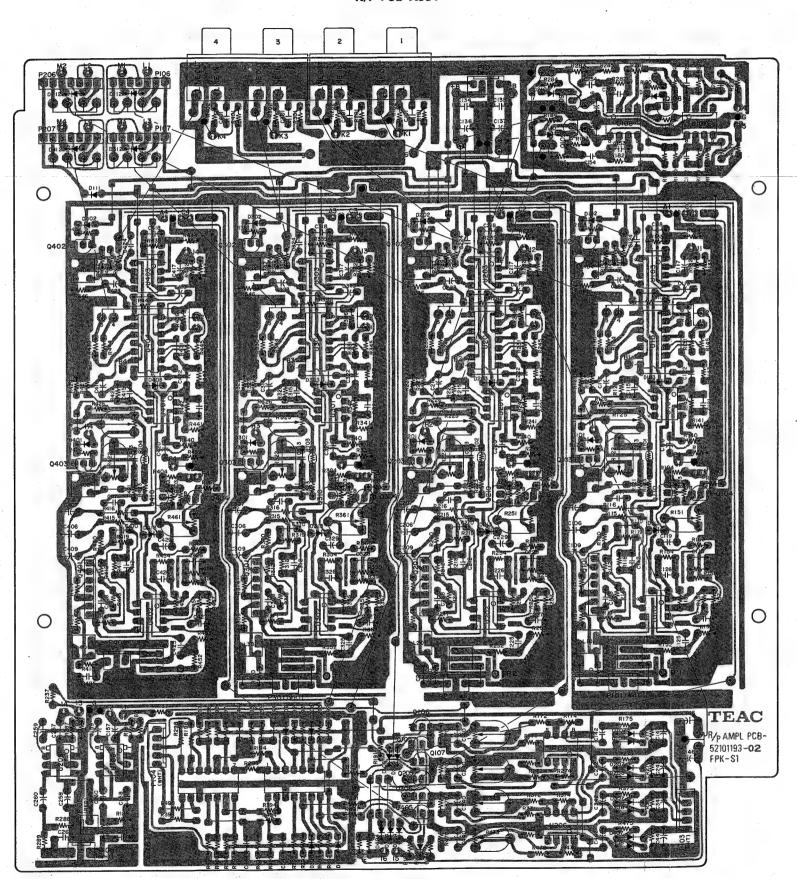


CONTROL B PCB ASSY

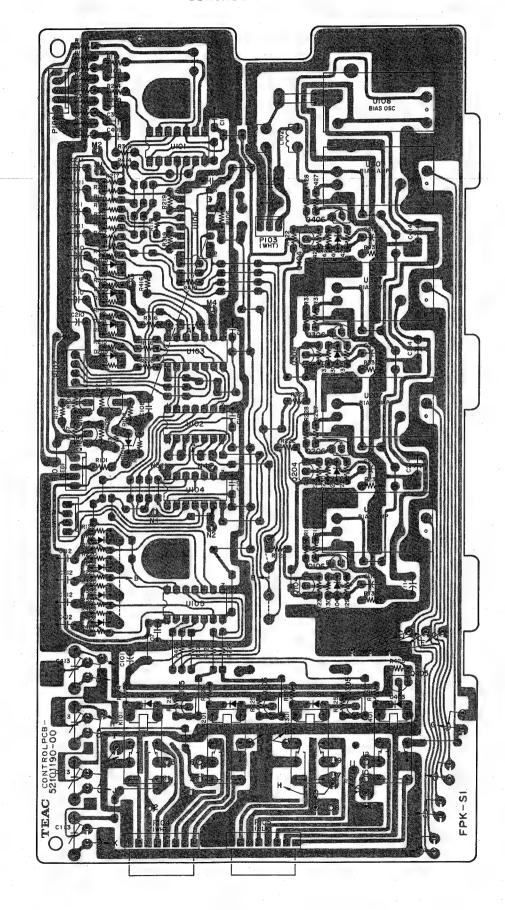


CONTROL A PCB ASSY

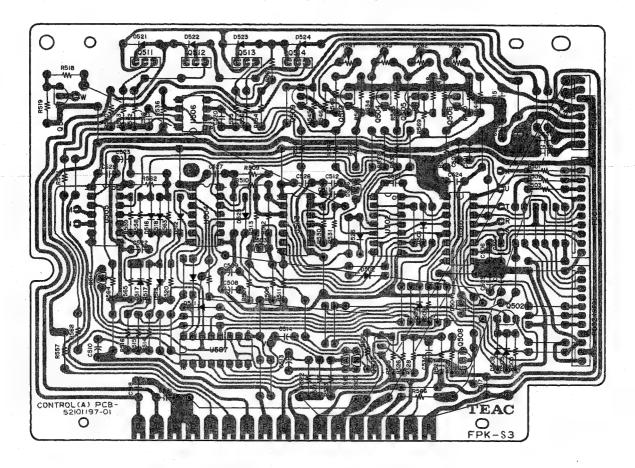


DBX PCB ASSY

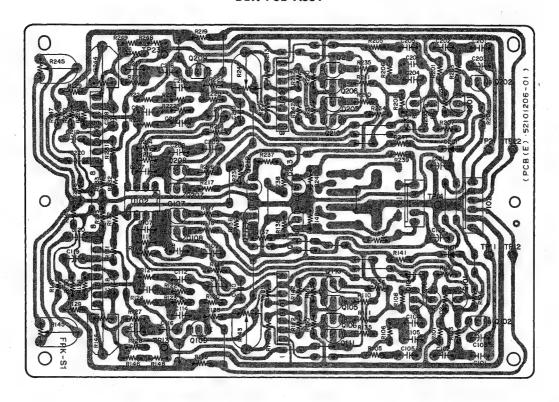


MIC AMPL. PCB ASSY

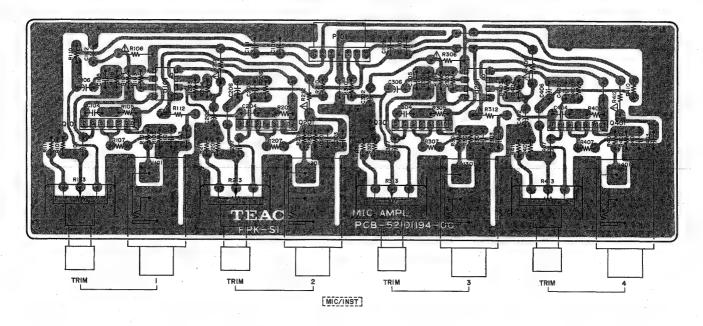


SW A PCB ASSY

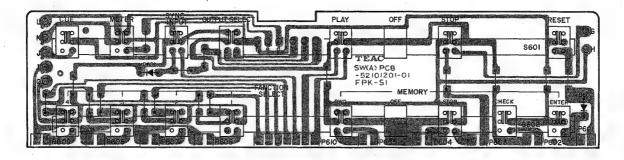


SW B PCB ASSY

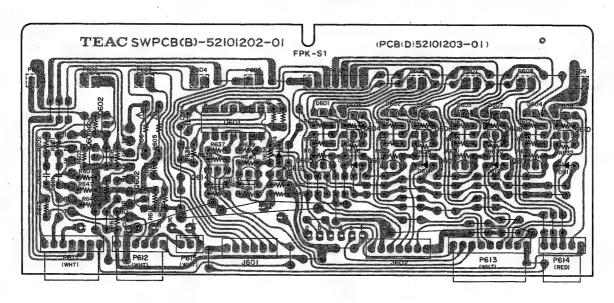


VR PCB ASSY

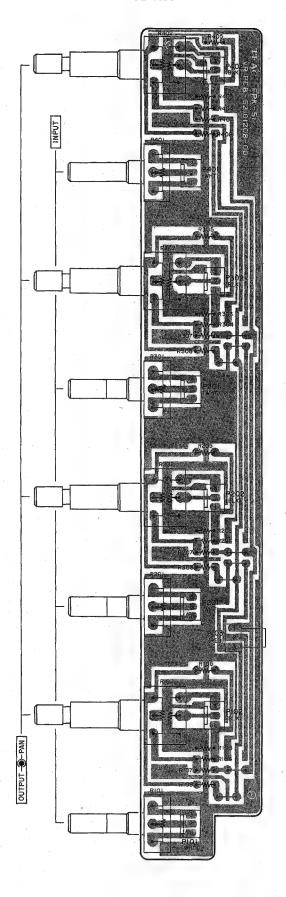


METER PCB ASSY

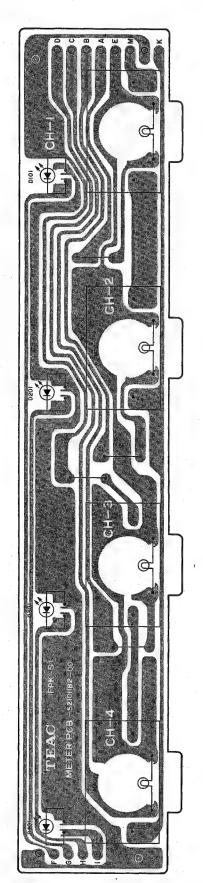

OPERATION SW PCB ASSY

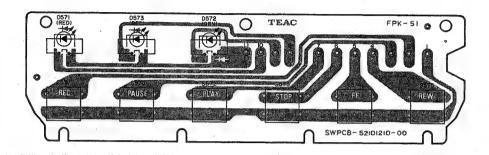


LED A PCB ASSY

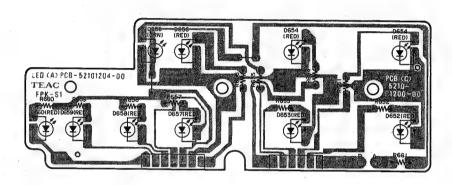


REMOTE PCB ASSY


DBX SW PCB ASSY

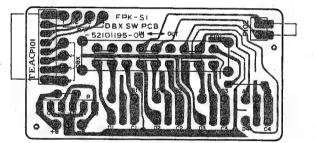

CONTROL C PCB ASSY

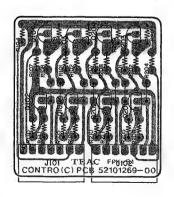

PITCH CONT PCB ASSY







LED B PCB ASSY



SENSOR PCB ASSY



POWER SUPPLY PCB ASSY

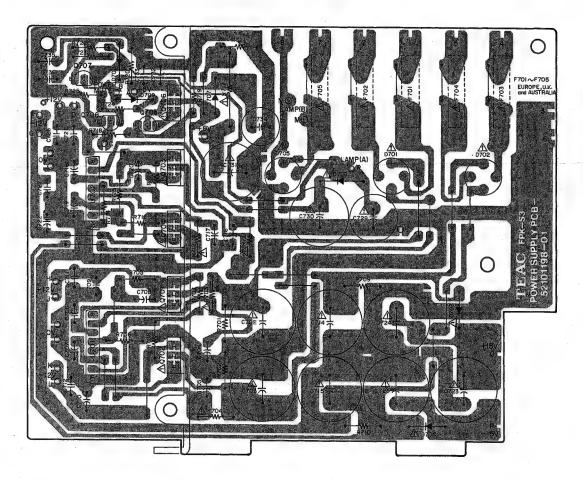

NOTES

- 1. PC boards are shown viewed from foil side.
- 2. Resistor values are in ohms (k=kilo-ohms M=megohms).
- 3. All capacitor values are in microfarads (p=picofarads).
- △ Parts marked with this sign are safety cirtical components.

They must always be replaced with identical components.

Refer to the appropriate parts list to ensure exact replacement.

注

- 1. 基板図はパターン面が示されています。
- 2. 抵抗の単位は $\Omega(k = k \Omega, M = M \Omega)$ です。
- 3. コンデンサの単位はμF(pF)です。
- 4. △マークのある部品は安全重要部品です。 交換するときは必ずティアック指定の部品を使用して ください。

R/P PCB ASSY

-	REF.NO.	PARTS NO.	DESCRIPTION
	+	* 52001 19300	PCB Assy
		5210119301	PCB
		IC's	
	U102~U402 U103~U403 U104~U404	5220414300 5220406700 5220414300 5220419400 5220416900	NJM4560D
	U107 U108	5220406700 5220414300 5220414300 6048649000	NJM4560D
		TRANSISTO	ORS
	Q102~Q402 Q103~Q403 Q104~Q404	5232006100 5230775000 5145185000 5145185000 5232007000	FET 2SK270GR 2SC2878B 2SD655E 2SD655E FET 2SK304EF
	Q107 Q108 Q109, Q209	5232007000	FET 2SK304EF FET 2SK304EF FET 2SK304EF 2SC2878B 2SA733P
		DIODES	
	D102~D402	5224015020	1SS133T-77 1SS133T-77
	D107~D407 D108~D408 D109	5224015020 5224015400 5224015400 5224015020 5224015020	1K60 1K60
	D111 D112~D412 D113~D413	5224015020 5224015020 5224015020	1SS133T-77 1SS133T-77 1SS133T-77
		CARBON RI ors are rated ± nerwise noted.	5% tolerance and 1/8 watt
	R101~R401 R102~R402 R103~R403 R104~R404 R105, R205		22kΩ 22kΩ 22kΩ 47kΩ
	R109~R409 R110~R410 R111~R411 R112~R412 R113~R413	5240032620 5240028220 5240029220 5240029220 5240026620	68kΩ 1kΩ 2.7kΩ 2.7kΩ 220Ω
	R116~R416	15183578000 15183578000 5240034120	$4.7 k\Omega$ 100 Ω Nonflammable 100 Ω Nonflammable 300 $k\Omega$ 7.5 $k\Omega$

REF.NO.	PARTS NO.	DESCRIPTION
R120~R420		120 \\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
R121~R421 R123~R423		5.6 kΩ 33 kΩ
R124~R424	5240030620	10kΩ
R126~R426		100 kΩ
R127~R427	5240029020	2.2kΩ
R128~R428	5240032220	47kΩ
R129~R429 R130~R430	5240032220 5240032220	47kΩ 47kΩ
R131~R431	5240032220	47 kΩ 47 kΩ
R132~R432	5240033820	220kΩ
	5240033820	220kΩ
R134~R434	5240030620	10kΩ
R135~R435 R136~R436	5240031420 5240032220	22kΩ 47kΩ
R137, R237	5240031820	33kΩ
R139~R439	5240033020	100 kΩ
R140~R440	5240033020	100 κΩ
R141~R441	5240029020	2.2kΩ
R142~R442	5240032220	47kΩ
R143~R443	5240032220	47kΩ
R144~R444 R145~R445	5240032220 5240032220	47kΩ
R146~R446	5240032220	47kΩ 100kΩ
R147~R447	5240033020	100 kΩ
R148~R448	5181490000	2.2kΩ 1/4W
R149~R449	5240032220	47kΩ
R150~R450	5240025820	100Ω
R151~R451 R152~R452	5240031420 5240030020	22kΩ 5.6kΩ
R153~R453 R154~R454	5240032220 5240031820	47kΩ 33kΩ
R155~R455	5240031020	15κΩ
R156~R456	5240027020	330Ω
R157~R457	5240029420	3.3 kΩ
R158~R458	5240031820	33kΩ
R159~R459	5240033020	100kΩ
R160~R460 R162~R462	5240030020 5240030620	5.6kΩ 10kΩ
R163~R463	5240030020	5.6 kΩ
R166	5240031420	22kΩ
R167	5240031420	22kΩ
R168	5240035420	1 ΜΩ
R169 R170~R470	5240035420 5240030620	1 MΩ 10 kΩ
R171~R471	5240033020	100 kΩ
R172~R472	5240033020	2.2 kΩ
R174~R474	5240030620	10 kΩ
R175~R475	5240028820	1.8kΩ
R176~R476	5240028820	1.8kΩ
R177, R277	5240033820 5240033820	220 kΩ
R178, R278 R179, R279	5240033820	220 kΩ - 33 kΩ
R180, R280	5240030620	10kΩ
R181, R281	5240030620	10 kΩ
R182, R282	5240031420	22 kΩ
R183, R283	5240025820	100Ω
R184, R284 R185, R285	5240031420 5240032220	22 kΩ 47 kΩ
R186, R286	5240033020	100 kΩ

REF.NO.	PARTS NO.	DESCRIP	MOIT	
R187, R287 R188, R288 R189, R289 R190 R191~R491	5240033020 5240032220 5240021020 5240031420 5240033020	100 kΩ 47 kΩ 1Ω 22 kΩ 100 kΩ		
R192~R492 R193~R493 R194~R494 R195~R495 R196~R496	5240033420 5240031020 5240023420 5240033020 5240031620	150kΩ 15kΩ 10Ω 100kΩ 27kΩ		
R197~R497 R198~R498 R199	5240032220 5181486000 5240035420	47kΩ 1.5kΩ 1MΩ	1/4W	
	CAPACITO	RS		
C101~C401 C105~C405 C106~C406 C107~C407 C108~C408	5172224000 5263107020 5260165252 5260165252 5170360000	Ceramic Polypro. Elec. Elec. Mylar	0.001μF 470pF 47μF 47μF 0.0022μF	50 V 100 V 5% 25 V 25 V 100 V 5%
C109~C409 C110~C410 C111~C411 C112~C412 C113~C413		Elec. Ceramic Elec. Mylar Mylar	$\begin{array}{c} 47 \mu \text{F} \\ 220 \text{pF} \\ 10 \mu \text{F} \\ 0.01 \mu \text{F} \\ 0.0047 \mu \text{F} \end{array}$	25V 50V 16V (BP) 100V 5% 100V 5%
C114~C414 C115~C415 C116~C416 C117~C417 C118~C418	5260162550 5172211000 5260163452 5260162550 5172216000	Elec. Ceramic Elec. Elec. Ceramic	10μF 82pF 22μF 10μF 220pF	16 V 50 V 25 V 16 V 50 V
C119~C419 C120~C420 C121~C421 C122~C422 C123~C423	5260163452 5260162550 5172204000 5260163452 5260162550	Elec. Elec. Ceramic Elec. Elec.	22μF 10μF 22pF 22μF 10μF	25V 16V 50V 25V 16V
C124~C424 C125~C425 C126~C426 C127~C427 C128~C428	5260067050 5260067050 5260065250 5170372000 5170370000	Elec. Elec. Elec. Mylar Mylar	10μF 10μF 0.22μF 0.0068μF 0.0056μF	16V (BP) 16V (BP) 50V (BP) 100V 5% 100V 5%
C129~C429 C134 C135 C136 C137	5260162550 5173433000 5173433000 5260165252 5260165252	Elec. Ceramic Ceramic Elec. Elec.	10μF 0.01μF 0.01μF 47μF 47μF	16 V 50 V 50 V 25 V 25 V
C140~C440 C142~C442 C143~C443 C144~C444 C145, C146	5260162550 5260163452 5260162150 5260160750 5260165252	Elec. Elec. Elec. Elec.	10μF 22μF 4.7μF 1μF 47μF	16 V 25 V 50 V 50 V 25 V
C151, C251 C152, C252 C153, C253 C154, C254 C155, C156	5260162550 5172216000 5172216000 5260067850 5260165252	Elec. Ceramic Ceramic Elec. Elec.	10μF 220pF 220pF 22μF 47μF	16 V 50 V 50 V 16 V (BP) 25 V
C157, C257 C158, C258 C159, C259 C160, C260 C161, C261	5260162550 5260165952 5260165952 5173070000 5171872000	Elec. Elec. Elec. Elec. Mylar	10μF 100μF 100μF 470μF 0.047μF	16 V 10 V 10 V 6.3 V 100 V 5%
· ·				

	:	
REF.NO.	PARTS NO.	DESCRIPTION
	VARIABLE	RESISTORS
R122~R422 R125~R425 R161~R461 R173~R473	5150094000 5150233000 5150092000 5150097000	Semi-fixed $50\mathrm{k}\Omega$ (B) Semi-fixed $20\mathrm{k}\Omega$ (B) Semi-fixed $10\mathrm{k}\Omega$ (B) Semi-fixed $5\mathrm{k}\Omega$ (B)
	COILS	
L101~L401 L102~L402 L103~L403 L104~L404	5286000200 5286000200 5286000200 5286000200	Trap 100 kHz
	MISCELLA	NEOUS
RT01, RT02 RT02, RT04 P101~P401 P102 P103	5143128000 5143128000 5122127000 5122128000 5122129000	Thermistor, S5C34 Thermistor, S5C34 Connector Plug, 3P (WHT) Connector Plug, 4P (WHT) Connector Plug, 5P (WHT)
P104 P105 P106, P206 P107, P207 P108	5122129000 5122299000 5122359000 5122359000 5122127000	Connector Plug, 5P (WHT) Connector Plug, 2P (RED) Connector Plug, 7P Connector Plug, 7P Connector Plug, 3P (WHT)
TP1~TP4	5544750000 5210131001 5210132000	Pin, Combination PCB, Shield; A PCB, Shield; B
		1

CONTROL B PCB ASSY

REF. NO.	PARTS NO.	DESCRIP	TION	
	*5200119000	PCB Assy		
	*5210119000	РСВ		
	IC's		· - · · · · · · · · · · · · · · · · · ·	
U101 U102 U103 U104 U105 U106	5220019100 5220019100 5220019000 5220019500 5220019100 5220020100	TC4011BI TC4011BI TC4001BI TC4071BI TC4011BI TC4050BI	P P P	
	TRANSISTO	ORS		
Q101 Q102 Q103 Q104~Q404 Q105~Q405 Q106~Q406		2SC18150 2SC18150 25A733P 2SA733P 2SC945AI 2SC945AI	GR K	••
7	DIODES			
D101 D102~D402 D103~D403 D104~D404 D105~D405	5224015020	1SS133T- 1SS133T-	77 77 77	
	CARBON R ors are vated ± nerwise noted	5% tolera	S ance and 1/8 watt	
R101 R102 R103 R104 R105	5240030620 5240030620 5240029020 5240031420 5240030620	10kΩ 10kΩ 2.2kΩ 22kΩ 10kΩ		
R106 R107 R108 R109 R110	5240034620 5240030620 5240030620 5240030620 5240030620	470 kΩ 10 kΩ 10 kΩ 10 kΩ 10 kΩ		
R111				
R112~R412 R113~R413 R114~R414 R115~R415	5240030620	10kΩ 100kΩ 10kΩ 10kΩ 2.7kΩ		
R112~R412 R113~R413 R114~R414	5240033020 5240030620 5240030620 5240029220 5240030620	100 kΩ 10 kΩ 10 kΩ 2.7 kΩ		
R112~R412 R113~R413 R114~R414 R115~R415 R116~R416 R117~R417 R118~R418 R119~R419	5240033020 5240030620 5240030620 5240029220 5240030620 5240030620 5240034620	100 kΩ 10 kΩ 10 kΩ 2.7 kΩ 10 kΩ 10 kΩ 10 kΩ 470 kΩ .22 kΩ		
R112~R412 R113~R413 R114~R414 R115~R415 R116~R416 R117~R417 R118~R418 R119~R419 R120~R420 R121~R421 R122~R422 R123~R423 R124~R424	5240033020 5240030620 5240030620 5240029220 5240030620 5240034620 5240034620 5240030620 5240030620 5240030620 5240030620 5240030620 5240030620	100 kΩ 10 kΩ 10 kΩ 2.7 kΩ 10 kΩ 10 kΩ 470 kΩ .22 kΩ 10 kΩ 10 kΩ 10 kΩ 10 kΩ	1/4W	
R112~R412 R113~R413 R114~R414 R115~R415 R116~R416 R117~R417 R118~R418 R119~R419 R120~R420 R121~R421 R122~R422 R123~R423 R124~R424 R125~R425 R126~R425 R127~R427 R128~R428 R129~R428	5240033020 5240030620 5240030620 5240030620 5240030620 5240030620 5240031420 5240030620 5240030620 5240030620 5240025220 5240030620 5240025220 5240030620 5240030620 5240030620	100 kΩ 10 kΩ 10 kΩ 2.7 kΩ 10 kΩ 10 kΩ 470 kΩ 22 kΩ 10 kΩ 10 kΩ 10 kΩ 10 kΩ 10 kΩ 10 kΩ 10 kΩ 10 kΩ	1/4W	

REF. NO.	PARTS NO.	DESCRIPTION
R131~R431 R132 R133~R433	5240029820 5240030620 5240031820	4.7 kΩ 10 kΩ 33 kΩ
	CAPACITO	RS
C101 C102~C107 C108 C109~C409 C110~C410	5260165252 5173433000 5260162550 5172236000 5260162550	Elec. 47μ F 25 V Ceramic 0.01μ F 50 V Elec. 10μ F 16 V Ceramic 0.01μ F 50 V Elec. 10μ F 16 V
C111~C411 C112~C412 C114~C414 C115~C415 C116 C117	5260161150 5260162050 5260161150 5260161150 5260165252 5260165252	Elec. 2.2μ F 50 V Elec. 4.7μ F 35 V Elec. 2.2μ F 50 V Elec. 2.2μ F 50 V Elec. 47μ F 25 V Elec. 47μ F 25 V
	MISCELLA	NEOUS
C113~C413 U107~U407 U108 K101~K401 L101, L102	5292202700	Trimmer Cap., 180pF Bias Ampl. OSC Unit Relay, G2V2 Choke Coil, 1.5mH
P101 P102 P103 P104 P105	5122301000 5122129000 5122127000 5122151000 5122208000	Connector Plug, 4P (RED) Connector Plug, 5P (WHT) Connector Plug, 3P (WHT) Connector Plug, 8P (WHT) Connector Plug, 8P (BLK)
P106 P107	5122128000 5122185000	Connector Plug, 4P (WHT) Connector Plug, 4P (BLK)

CONTROL A PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5210119701	PCB Assy
	* 5210119700	PCB
	IC's	
U501 U502 U503 U504 U505	5220020400 6048939000 5220019100 5220019000 6048939000	BA843 MC14081B TC4011BP TC4001BP MC14081B
U506 U507	5220405000 6048661000	μPC4557C M54517P
	TRANSISTO	ORS
Q502 Q504~Q508 Q509 Q510 Q511	5042553000	2SC1815GR 2SA733P 2SC1815GR
Q512 Q513 Q514 Q515	5230017500 5230779200 5230017500 5145151000	2SA1184Y 2SC2824Y 2SA1184Y 2SC1815GR
	DIODES	
D501, D502 D503, D504 D505 D506, D507 D508~D513	5224015200 5224012920 5224015200	1S2473FT MC921 1S2473FT MC921 1S2473FT
D514 D515 D516~D518 D521~D524 D525, D526		MC921 MC911 1S2473FT W03C 1S2473FT
All resisto	CARBON R ors are rated ±	ESISTORS 5% tolerance and 1/4 watt.
R501 R502 R503 R504 R505	5181472000 5181466000 5181472000 5181508000 5181514000	390 Ω 220 Ω 390 Ω 12 kΩ 22 kΩ
R506 R507, R508 R509, R510 R511 R512, R513		4.7 kΩ 22 kΩ 100 kΩ 1MΩ 22 kΩ
R514 R515 R516 R517 R518	5181498000 5181482000 5181514000 5181430000 5181506000	4.7 kΩ 1 kΩ 22 kΩ 100 kΩ 10 kΩ
R519 R520 R521, R522 R523 R524, R525	5181506000 5181498000 5181482000 5181436000 5181506000	10kΩ 4.7kΩ 1kΩ 12Ω 10kΩ
		~

REF. NO.	PARTS NO.	DESCRIPT	ION	
R526 R527 R528 R529 R530, R531	5181436000 5181524000 5181514000 5181522000 5181506000	12Ω 56kΩ 22kΩ 47kΩ 10kΩ		
R532, R533 R534 R536 R537, R538 R539, R540	5181494000 5181500000 5181508000	12kΩ 3.3kΩ 5.6kΩ 12kΩ 12kΩ		•
R541 R544 R545, R546 R548 R549, R550	5181478000 5181492000 5181508000 5181528000 5181506000	680Ω 2.7kΩ 12kΩ 82kΩ 10kΩ	·	
R551 R552 R553 R554 R555	5181488000 5181470000 5181534000 5181506000 5181470000	1.8kΩ 330Ω 150kΩ 10kΩ 330Ω		
R556 R557 R558, R559 R560, R561 R562	5181506000 5181442000 5181514000 5181506000 5181514000	10kΩ 22Ω 22kΩ 10kΩ 22kΩ		
R563 R564 R565 R566 R567	5181510000 5181530000 5181514000 5181450000 5181434000	15kΩ 100kΩ 22kΩ 47Ω 10Ω		
R568 R569 R570	5181498000 5181468000 5181470000	4.7 kΩ 270Ω 330Ω		
	CAPACITO	RS		
C501 C502 C503~C506 C508~C510 C511, C512		Ceramic Elec. Ceramic Elec. Ceramic	0.01μF 1μF 0.01μF 10μF 0.01μF	50 V 50 V 50 V 16 V 50 V
C513, C514 C515, C516 C517~C521 C522 C523	5260161150 5260166052 5173433000 5260160750 5260162550	Elec. Elec. Ceramic Elec. Elec.	2.2µF 100µF 0.01µF 1µF 10µF	50 V 16 V 50 V 50 V 16 V
C524~C528 C530 C531, C532	5173433000 5260165952 5173433000	Ceramic Elec. Ceramic	0.01μF 100μF 0.01μF	50 V 10 V 50 V
	VARIABLE	RESISTO	RS	
R535 R542, R543 R547	5150154000 5150152000 5150156000	Semi-fixed	, 10kΩ (B) , 2kΩ (B) , 50kΩ (B)	
	MISCELLA	NEOUS		
P501 P502 P503	5122135000 5122308000 5122132000	Connector	Plug, 11P (V Plug, 11P (F Plug, 8P (V	RED) VHT)

DBX PCB ASSY

	PARTS NO.	DESCRIPTION
	*5200120701	PCB Assy
	*5210120701	PCB
	IC's	
U101, U201 U102 U103, U203		μPC1252H2 M5218P μPC1253H2
	TRANSISTO	ORS
Q101, Q201 Q102, Q202 Q103, Q203 Q104, Q204 Q105, Q205	5230778300 5232007300 5230775000 5230775000 5230775000	2SC2320F FET 2SK364 V 2SC2878B 2SC2878B 2SC2878B
Q106, Q206 Q107, Q207 Q108, Q208 Q109, Q209 Q110, Q210	5230778300	2SC2878B 2SC2878B 2SC2878B 2SC2320F 2SC2878B
Q111, Q211 Q112, Q212 Q113, Q213	5230775000 5230016600 5230016600	2SC2878B 2SA999F 2SA999F
	DIODES	
D101, D201	5224015010	1SS133HV
	CARBON R tors are rated ± therwise noted	5% tolerance and 1/8 watt
R101, R201 R102, R202 R103, R203 R104, R204 R105, R205	5240025820 5240031920 5240030020	120 kΩ 100 Ω 36 kΩ 5.6 kΩ 33 kΩ
R106, R206 R107, R207 R108, R208 R109, R209 R110, R210	5240032220 5240032220 5240029620	10 kΩ 47 kΩ 47 kΩ 3.9 kΩ 47 kΩ
R114, R214		47kΩ 47Ω 100kΩ 10kΩ 33kΩ
R116, R216 R117, R217 R118, R218 R119, R219 R120, R220	5240032220 5240025820 5240033020	47 kΩ 47 kΩ 100 Ω 100 kΩ 33 kΩ
R117, R217 R118, R218 R119, R219	5240032220 5240025820 5240033020 5240031820 5240032920 5240029820 5240031820 5240030220	47 kΩ 100 Ω 100 kΩ

		<u> </u>	
REF. NO.	PARTS NO.	DESCRIPTION	
R131, R231 R132, R232 R133, R233 R134, R234 R135, R235	5240035120 5240035420 5240028220 5240033020 5240033020	750 kΩ 1 MΩ 1 kΩ 100 kΩ 100 kΩ	
R136, R236 R137, R237 R138, R238 R139, R239 R140, R240	5240029820 5240033020 5240029820 5240032220 5240030620	4.7kΩ 100kΩ 4.7kΩ 47kΩ 10kΩ	
R141, R241 R142, R242 R146, R246 R147, R247 R148, R248	5240033220 5240030620 5240032020 5240031420 5240177800	120kΩ 10kΩ 39kΩ 22kΩ 10MΩ 1/4W	
R149, R249 R150, R250 R151, R251	5240177800 5240024220 5240031420	. 10 MΩ 1/4W 22 Ω 22 kΩ	
	CAPACITO	RS	
C101, C201 C102, C202 C103, C203 C104, C204 C105, C205	5263167923 5263167923 5260160750 5171856000 5263169523		50V 5% 50V 100V 5%
C106, C206 C107, C207 C108, C208 C109, C209 C110, C210	5263106110 5172212000 5172212000 5171856000 5260066550	Polypro. 200 pF Ceramic 100 pF Ceramic 100 pF Mylar 0.01 µF Elec. 4.7 µF	50 V 50 V 100 V 5%
C111, C211 C112, C212 C113, C213 C114, C214 C115, C215	5263167923 5263167923 5170364000 5170364000 5172218000	Meta. 0.1μ F Meta. 0.1μ F Mylar 0.003μ F Mylar 0.003μ F Ceramic 330μ F	50V 5% 100V 5% 100V 5%
C116, C216 C117, C217 C118, C218 C119, C219 C120, C220	5263167923 5171856000 5260160750 5260227010 5260162550	$\begin{array}{lll} \text{Meta.} & 0.1 \mu\text{F} \\ \text{Mylar} & 0.01 \mu\text{F} \\ \text{Elec.} & 1 \mu\text{F} \\ \text{Elec.} & 10 \mu\text{F} \\ \text{Elec.} & 10 \mu\text{F} \\ \end{array}$	100V 5% 50V 35V
C121 C122	5260165252 5260165252	Elec. 47μF Elec. 47μF	
	VARIABLE	RESISTORS	
R143, R243 R144, R244 R145, R245	5280004002 5280033200 5280004002	Semi-fixed, $50 k\Omega$ (B Semi-fixed, $470 k\Omega$ (Semi-fixed, $50 k\Omega$ (B	B)
	MISCELLA	NEOUS	
P101 P102	5122129000 5122130000 5544750000	Connector Plug, 5P (Connector Plug, 6P (Pin, Combination 7	WHT)
		•	

MIC AMPL. PCB ASSY

<u></u>	DADTONO	DECEDITION				
REF. NO.	PARTS NO.	DESCRIPTION				
	*5200119400	PCB Assy				
	*5210119400	PCB				
	IC's					
U101, U201	5220406700	RC4558P				
	TRANSISTO	ORS				
Q101~Q401	5232006100	FET 2SK270GR				
	CARBON RESISTORS All resistors are rated ±5% tolerance and 1/8 watt unless otherwise noted.					
R101~R401 R102~R402 R103~R403 R104~R404 R105~R405	5240033020 5240029220 5240029220	100 Ω 100 kΩ 2.7 kΩ 2.7 kΩ 220 Ω				
R107~R407 R108~R408 R109~R409		100 Ω 1/4W Nonflammable 4.7 k Ω 1 M Ω 100 k Ω 100 Ω				
R111~R411 R112~R412	5240024520 \$\Delta 5183578000	30Ω 100 Ω 1/4W Nonflammable				
	CAPACITO	RS				
C101 ~ C401 C102 ~ C402 C103 ~ C403 C104 ~ C404 C105 ~ C405	5260165252 5170360000					
C106~C406 C107~C407 C108, C109 C110, C111	5260165252	Elec. $10\mu F$ $16V$ Elec. $47\mu F$ $25V$ Elec. $47\mu F$ $25V$ Ceramic $0.01\mu F$ $50V$				
	VARIABLE	RESISTORS				
R113~R413	5282011902	10kΩ (C)				
	MISCELLA	NEOUS				
J101~J401 P101	5330008800 5785290100 5122150000	Jack, MIC Washer, Jack 4 used Connector Plug, 7P (WHT)				

SW A PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200120100	PCB Assy
	* 5210120101	PCB
D601, D602 \$601 \$602 P601~P609 P610	5224015020 5300032500 5300032600 5336156200 5336156700	Diode, 1SS133T-77 Switch, Push; 8-gang Switch, Push; 9-gang Connector Plug, 2P Connector Plug, 7P

Parts marked with * require longer delivery time.

SW B PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200120200	PCB Assy
	*5210120201	РСВ
,	ic	
U601	5220019000	TC4001BP
	TRANSIST	ORS
Q601~Q614	5145151000	2SC1815GR
	DIODES	
D601~D608 D609~D614		
	CARBON R ors are rated ± herwise noted	5% tolerance and 1/8 watt
	5240030620 5240029820 \$5185692000 5240033020 5240030620	$10\mathrm{k}\Omega$ $4.7\mathrm{k}\Omega$ 150Ω $1/2\mathrm{W}$ Nonflammable $100\mathrm{k}\Omega$ $10\mathrm{k}\Omega$
R611 R612 R613~R617 R618 R619	5240031820 5240033020 5240030620 5240031820 5240031420	33 kΩ 100 kΩ 10 kΩ 33 kΩ 22 kΩ
R620 R621 R622 R623 R624	5240031820 5240031420 5240031820 5240031420 5240031820	33 kΩ 22 kΩ 33 kΩ 22 kΩ 33 kΩ
R625 R626 R627 R628 R629	5240031420 5240032220 5240030620 5240032220 5240030620	22 kΩ 47 kΩ 10 kΩ 47 kΩ 10 kΩ
R630 R631 R632 R633 R634	5240032220 5240030620 5240032220 5240030620 5240033020	47kΩ 10kΩ 47kΩ 10kΩ 100kΩ
R635 R636 R637~R640 R641 R642	5240030020 5240033020 5240030620 5240028220 5240030620	5.6kΩ 100kΩ 10kΩ 1kΩ 10kΩ
R643 R644 R645 R646, R647	5240031820 5240034620 5240028420 5240030620	33 kΩ 470 kΩ 1.2 kΩ 10 kΩ
	MISCELLA	NEOUS
P611 P612 P613 P614 P615	5122150000 5122149000 5122152000 5122456000 5122146000	Connector Plug, 7P (WHT) Connector Plug, 6P (WHT) Connector Plug, 9P (WHT) Connector Plug, 5P (RED) Connector Plug, 3P (WHT)
J601 J602	5336153600 5336153700 5122167000 5122170000 5122172000 5122283000	Connector Socket, 6P Connector Socket, 7P Connector Socket, 5P (WHT) Connector Socket, 8P (WHT) Connector Socket, 10P (WHT) Connector Socket, 5P (RED)

VR PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	* 5200120800	PCB Assy
. —	*5210120800	PCB
All resist	CARBON R ors are rated ±	ESISTORS 5% tolerance and 1/8 watt.
R103~R403 R104~R404		47 kΩ
	5240029020 5240029020	2.2kΩ 2.2kΩ
	5240031420	22kΩ
R108~R408	5240031420	22kΩ
	VARIABLE	RESISTORS
R101~R401 R102~R402		- · · · · · · · · · · · · · · · · · · ·
H102**H402		10kΩ (A), 5kΩ (B) 2-gang
	MISCELLA	NEOUS
P101~P401	5122146000	Connector Plug, 3P (WHT)
P102~P402	5122454000	Connector Plug, 3P (RED)
P103	5122203000	Connector Plug, 3P (BLK)

METER PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200118200	PCB Assy
	*5210118200	PCB
M101 ~ M401 D101 ~ D401 J615 J103, J104		Meter, VU LED, SLP144B Connector Socket, 3P (WHT) Connector Socket, 5P (WHT)

OPERATION SW PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200121000	PCB Assy
	*5210121000	PCB
\$572~\$577 D571, D572 D573 J501	5302101400 5225010100 5225010200 5122173000	Switch, Tact LED, SLP155B LED, SLP255B Connector Socket, 11P (WHT)

LED A PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200120400	PCB Assy
	*5210120400	PCB
D651 ~ D654 D655 D656 ~ D660 R651 ~ R661	5225012500 5225012400	LED, SLP177B (RED) LED, SLP277B (GRN) LED, SLP177B (RED) Res., Carbon; 390Ω 1/8W 5%
	5354027900 5354028000	Cable, Flat; 6P x 200 Cable, Flat; 7P x 200

Parts marked with * require longer delivery time.

DBX SW PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	* 5200119500	PCB Assy
	*5210119500	PCB
S101	5300909700	Slide Switch, 6-2 5
P101	5122151000	Connector Plug, 8P (WHT)
P102	5122145000	Connector Plug, 2P (WHT)
J101	5122167000	Connector Socket, 5P (WHT)
J102	5122168000	Connector Socket, 6P (WHT)

PITCH CONT PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200119900	PCB Assy
	*5210119900	PCB
	CARBON R	ESISTORS
R572 R574		1.6kΩ 1/4W 5% 620Ω 1/4W 5%
	VARIABLE	RESISTORS
R571 R573		Semi-fixed, $1 \text{ k}\Omega$ (B) $1 \text{ k}\Omega$ (B) w/Switch
	CONNECTO	OR .
P571	5122146000	Plug, 3P (WHT)

LED B PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200120500	PCB Assy
	*5210120500	PCB
D661	5225012600	LED, SLP253B (GRN)

SENSOR PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*520018900	PCB Assy
	*5210118900	PCB
U571 R575	5228700200 5181498000	IC, TL170C Carbon Res., 4.7 kΩ 1/4W 5%

CONTROL C PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200126900	PCB Assy
	*5210126900	PCB
	TRANSISTO	ORS .
Q101, Q201 Q102, Q202 Q103, Q203 Q104, Q204	5042553000	2SC1815GR
All resist	CARBON R tors are rated ±	ESISTORS 5% tolerance and 1/8 watt.
R101, R201 R102, R202 R103, R203 R104, R204 R105, R205	5240031420 5240030020 5240032220	
R106, R206 R107, R207 R108, R208 R109, R209 R110, R210	5240030620 5240031420 5240030020	10kΩ 10kΩ 22kΩ 5.6kΩ 10kΩ
R111, R211	5240030620	10kΩ
	CONNECTO	PRS
J101, J102	5122378000	Socket, 7P

REMOTE PCB ASSY

	REF. NO.	PARTS NO.	DESCRIPTION	
1		*5200120900	PCB Assy	
		*5210120900	PCB	
	R591~R596	5334010100 5240027020	Connector Socket, 12P Carbon Res. 330 \Omega 1/8W 5%	

POWER SUPPLY PCB ASSY

REF. NO.	PARTS NO.	DESCRIPTION
	*5200119800 *5200119810	PCB Assy [J, US, C, GE] PCB Assy [E, UK, A]
	*5210119801	PCB
	IC's	
U701, U702	5220416400	M5230L
	TRANSISTO	ORS .
0701 0702 0703 0704 0705	△5145087000 △5145129000 △5145087000 △5145129000 5145091000	2SB507E
Q706 Q707 Q708	△5145087000 5042553000 5145091000	2SD313E 2SA733P 2SC945AK

REF. NO.	PARTS NO.	DESCRIPTION
	DIODES	
D703, D704 D705 D706, D707	Δ5228005000 Δ5143089000 Δ5228005000 Δ5143089000 5224012920	W02 W03C W02 W03C 1S2473FT
RESISTORS All resistors are rated $\pm 5\%$ tolerance, 1/4 watt and are carbon type unless otherwise noted.		
R705 R706	∆5183596000	10 kΩ 560 Ω Nonflammable 18 kΩ 2% 3.3 kΩ 2% 15 kΩ 2%
R711, R712 R713 R714	5181506000	10 kΩ 10 Ω Nonflammable 18kΩ 2% 3.3 kΩ 2% 15 kΩ 2%
R718 R719	∆5184307000 5184940000 5184944000 5181506000 5181530000	10Ω Cement 2W 2% 2.2kΩ 2% 3.3kΩ 2% 10kΩ 100kΩ
R723 R724, R725	5181506000 5181514000	10kΩ 22kΩ
CAPACITORS		
C704, C705 C706, C707 C708	∆5173094000 5260165252 5260162050 5260160750 5260166052	Elec. 4.7μF 35 V Elec. 1μF 50 V
C711, C712 C714, C715 C716, C717 C718, C719 C720	5173433000 ∆5173094000 5260165252 5260162050 5260160750	Ceramic $0.01 \mu F$ 50 V Elec. $3300 \mu F$ 25 V Elec. $47 \mu F$ 25 V Elec. $4.7 \mu F$ 35 V Elec. $1 \mu F$ 50 V
C721, C722 C723, C724 C725 C726, C727 C729	∆5173094000 ∆5173082000	Elec. 100 µF 16 V Elec. 3300 µF 25 V Elec. 1000 µF 25 V Ceramic 0.01 µF 50 V Elec. 1000 µF 16 V
C730, C731 C732 C733 C734 C735 C736	△5173088000 5260165952 5173433000 5173072000 5260160750 5260162550	Elec. 2200μF 16 V Elec. 100μF 10 V Ceramic 0.01μF 50 V Elec. 470μF 16 V Elec. 1μF 50 V Elec. 10μF 16 V
MISCELLANEOUS		
F701, F702 F703, F704 F705	∆5041138000 ∆5142185000 ∆5041140000 5142087000	Fuse, T500mA 250V Fuse, T630mA 250V Fuse, T1A 250V Holder, Fuse 10 used [E, UK, A]
	5555951001 5033291000 5033295000	Heatsink Plate, Insulating Tube, Insulating

Parts marked with * require longer delivery time.

[US]: U.S.A. [[A]: AUSTRALIA

[C]: CANADA [J]: JAPAN

[GE]: GENERAL EXPORT


[E]: EUROPE

[UK]: U.K.


9 IC BLOCK DIAGRAMS

ICブロック・ダイヤグラム


LC4066B QUAD BILATERAL SWITCH (TOP VIEW)

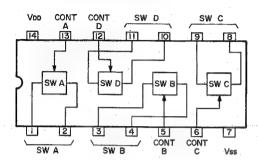


TC4001BP QUAD 2-INPUT POSITIVE NOR GATE (TOP VIEW)

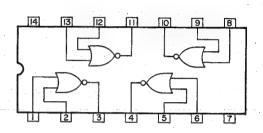


TC4011BP QUAD 2-INPUT POSITIVE NAND GATE (TOP VIEW)

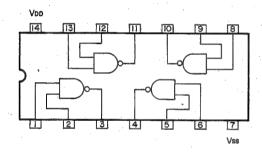


TC4071BP QUAD 2-INPUT POSITIVE OR GATE (TOP VIEW)

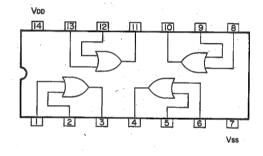


MC14081B QUAD 2-INPUT POSITIVE AND GATE (TOP VIEW)

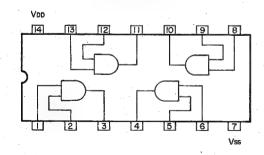


LM339N QUADRUPLE DIFFERENTIAL COMPARATOR (TOP VIEW)

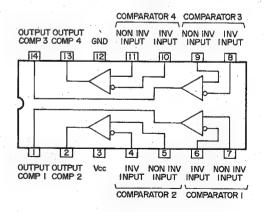


TC4050BP
HEX BUFFER/CONVERTER NON-INVERTING TYPE
(TOP VIEW)

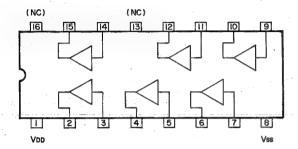


M54517P BUFFER/CONVERTER INVERTING TYPE (TOP VIEW)

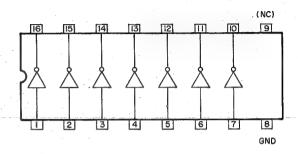


μPC1252H2 dbx NR VCA CIRCUIT (TOP VIEW)

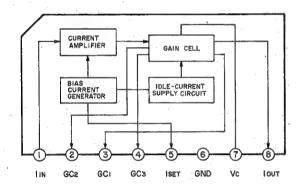


 $\begin{array}{c} \mu \text{PC1253H2} \\ \text{dbx NR RMS LEVEL SENSOR} \\ \text{(TOP VIEW)} \end{array}$

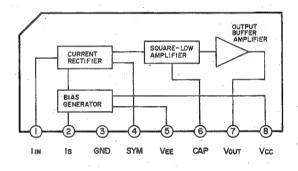


M5230L VOLTAGE REGULATOR (VIEWED FROM LETTER SIDE)

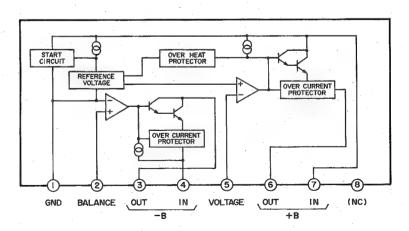


NJM386D AUDIO POWER AMPLIFIER (TOP VIEW)

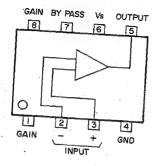


TL170C SILICON HALL-EFFECT SWITCH




NJM4560D μPC4557C RC4558P M5218P OPE-AMP. (TOP VIEW)

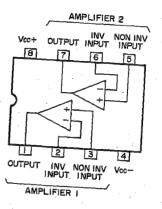

10 BLOCK DIAGRAM

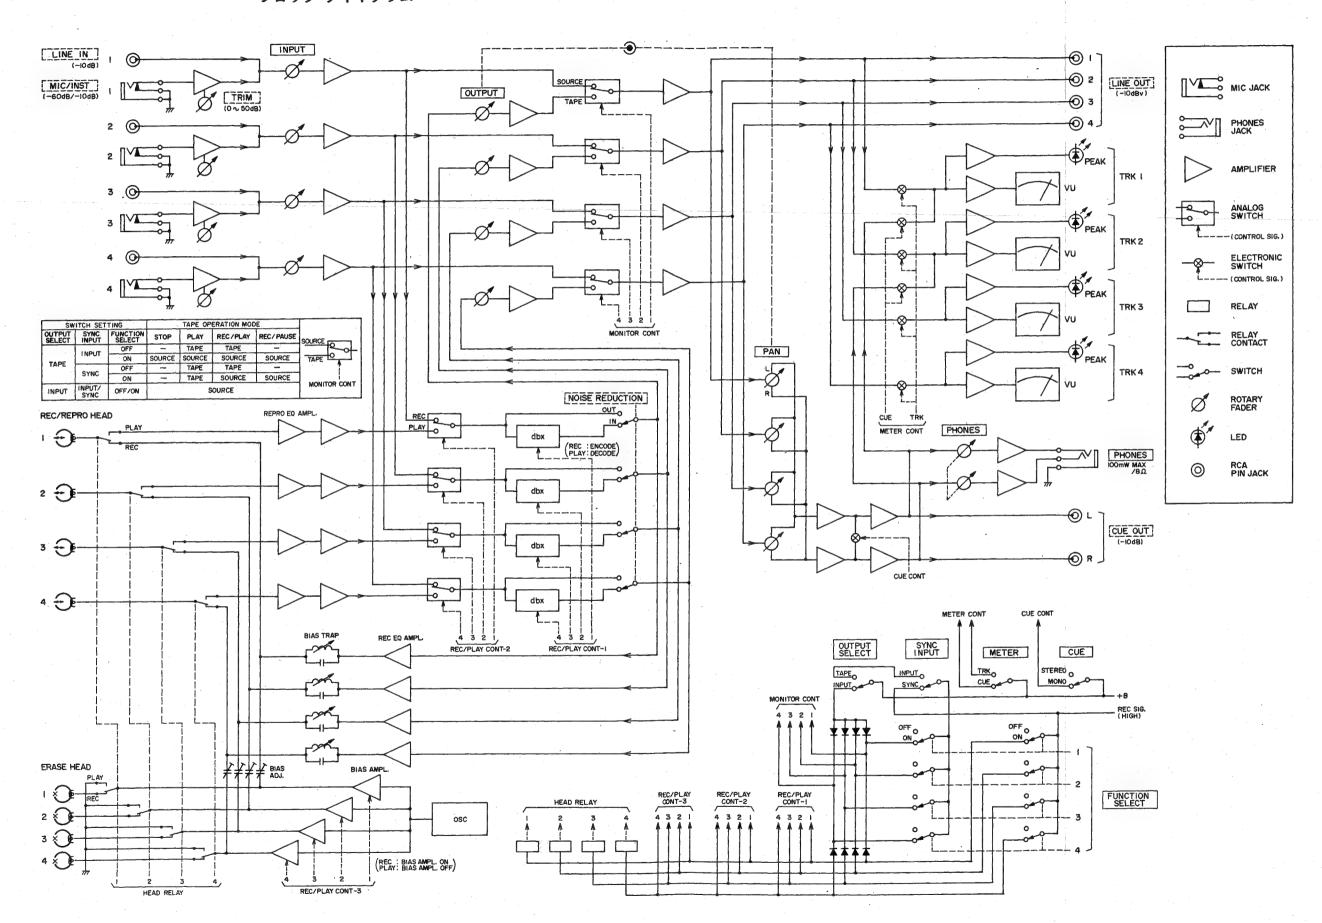


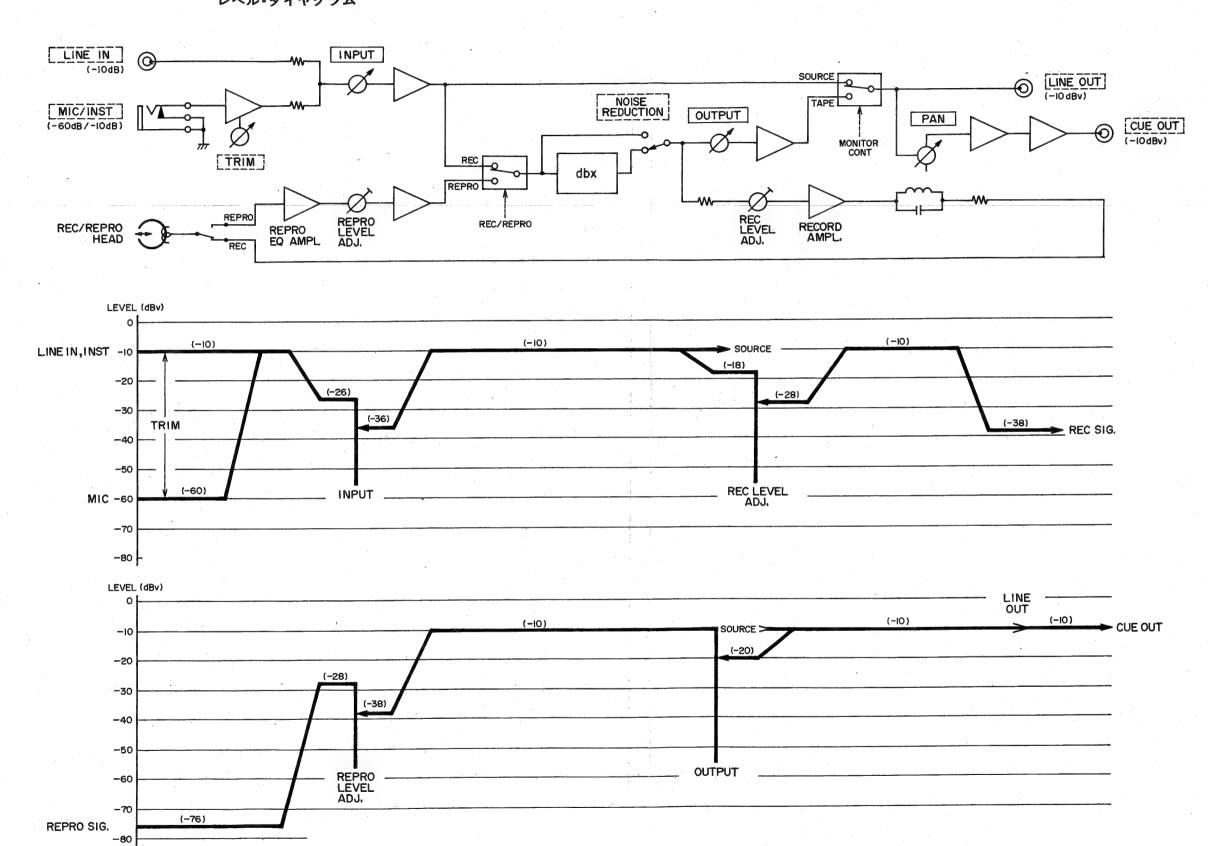

D

E

234 SYNCASET October 1983

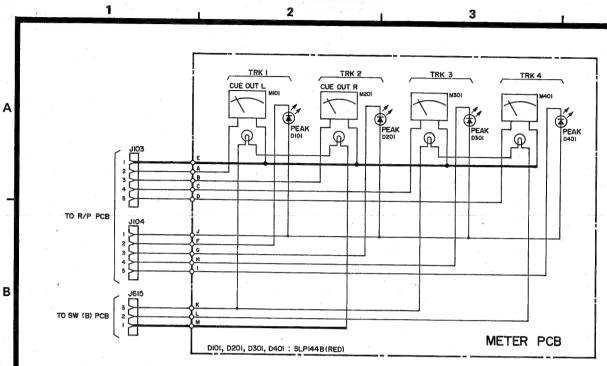

INSTRUCTIONS FOR SERVICE PERSONNEL

BEFORE RETURNING APPLIANCE TO THE CUSTOMER, MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT.

NOTES


- 1. Resistor values are in ohms (k=kilo-ohms, M=megohms).
- 2. Capacitor values are in microfarads (p=picofarads).
- 3. Voltage and signal level values are for reference only. 0dB=1V
- 4. Front panel indication
- 5. [Rear panel indication
- 6. $\Delta\,\text{Parts}$ marked with this sign are safety critical components. They must always be replaced with identical components-refer to the appropriate parts list and ensure exact replacement.


注意


- 1. 抵抗の単位は $\Omega(k=k\Omega, M=M\Omega)$ です
- 2. コンデンサの単位は μ F(p=pF)です。
- 3. 電圧及び信号レベルは参考値です。 0 dB = 1V
- フロント・パネル上の表示
 リア・パネル上の表示
- 交換するときは必ずティアック指定の部品を使用してください。

REMOTE CONTROL

Н

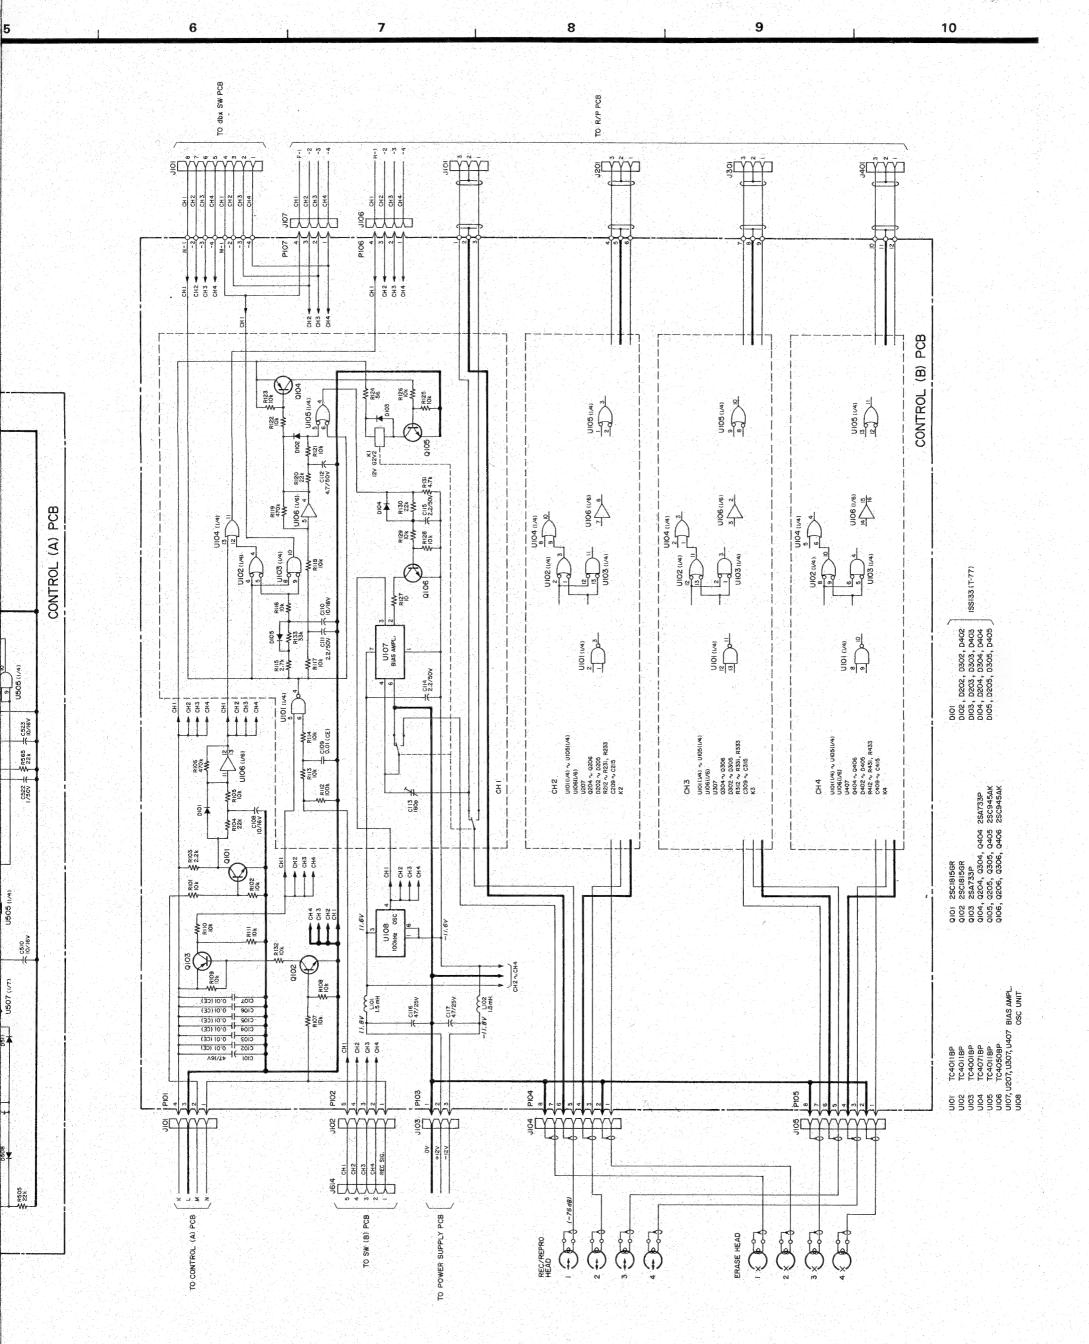

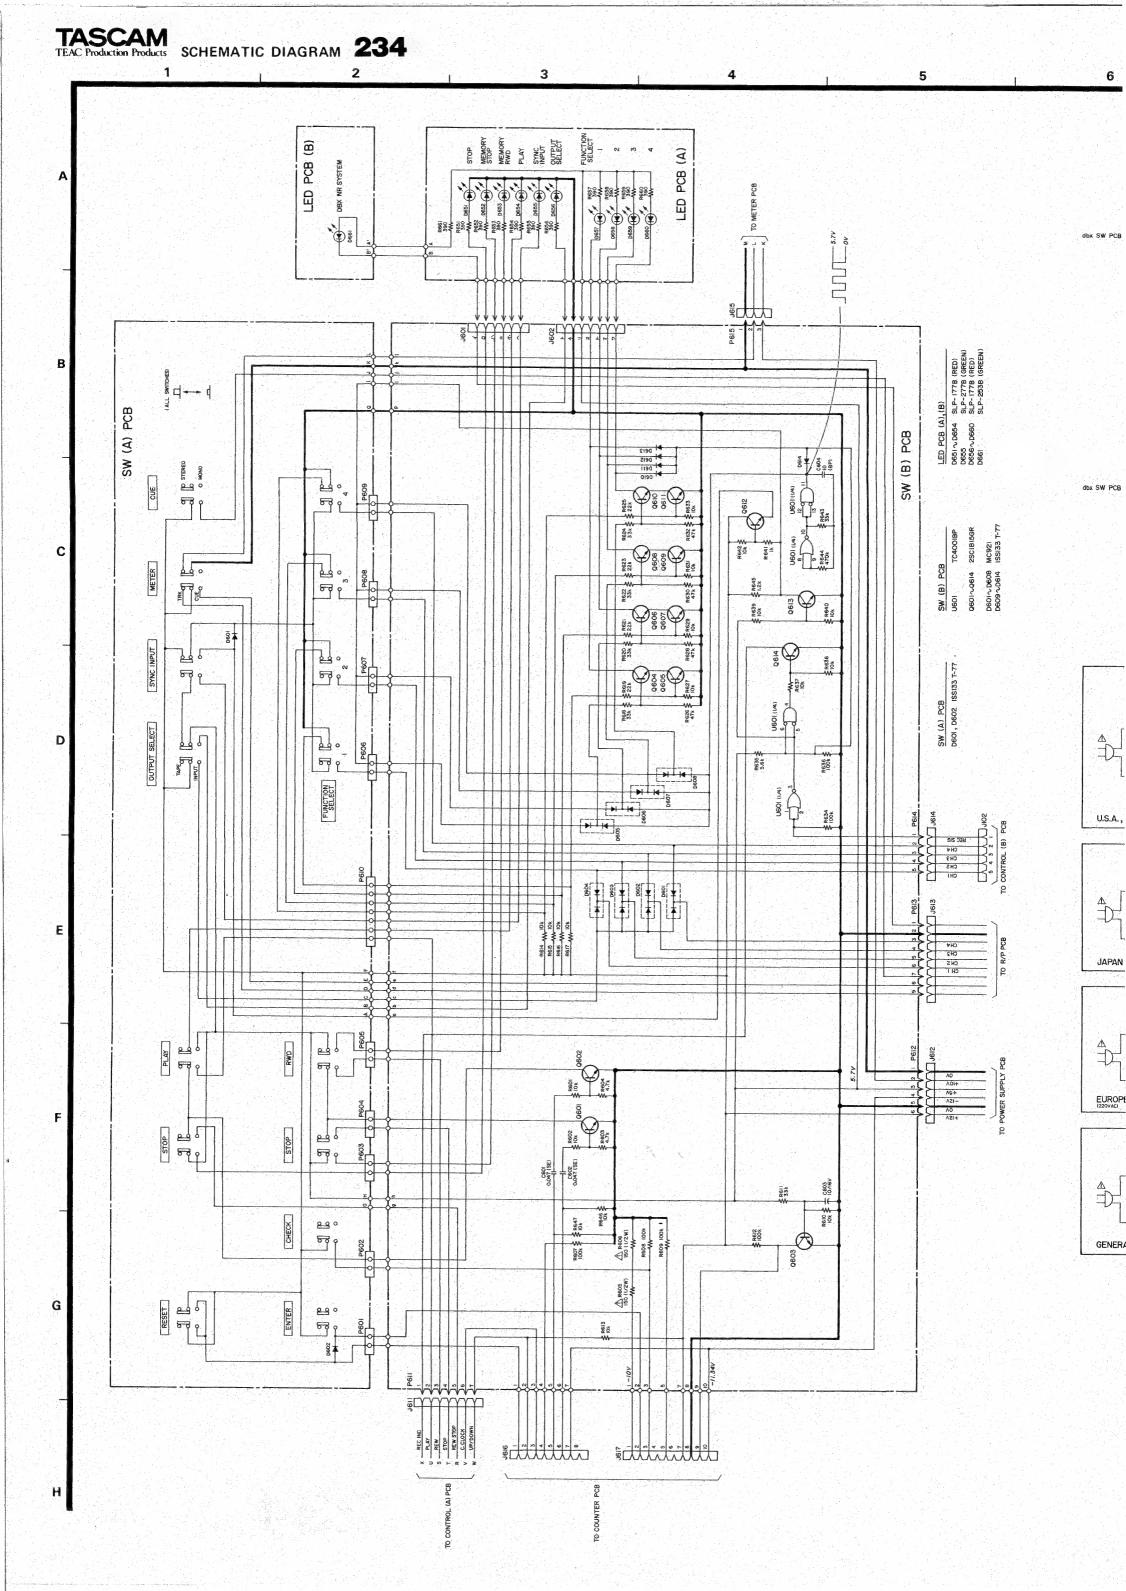

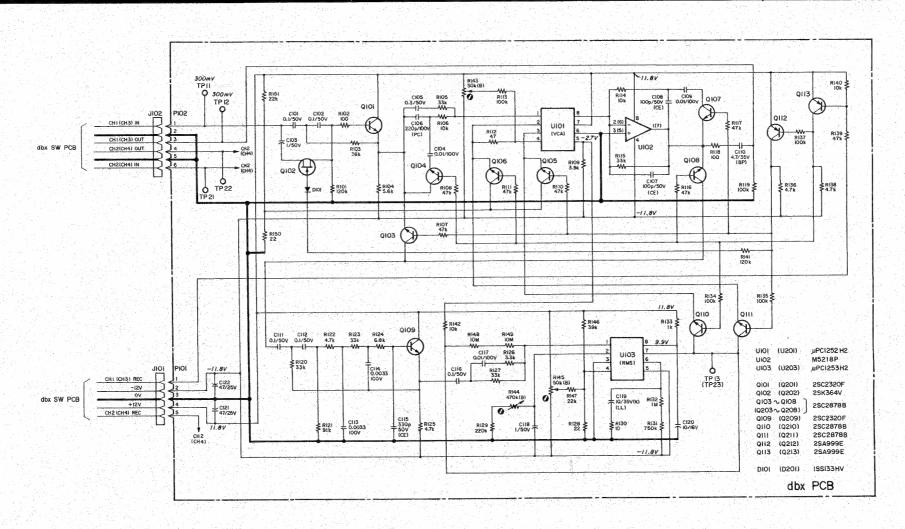


D655 SLP-2778 (GREEN)
D656~D660 SLP-1778 (RED)
D661 SLP-2538 (GREEN)


MC921 1SSI33 T-77

9601~0614 D601~D608 D609~D614

TO RVP PCB

TO POWER SUPPLY PCB

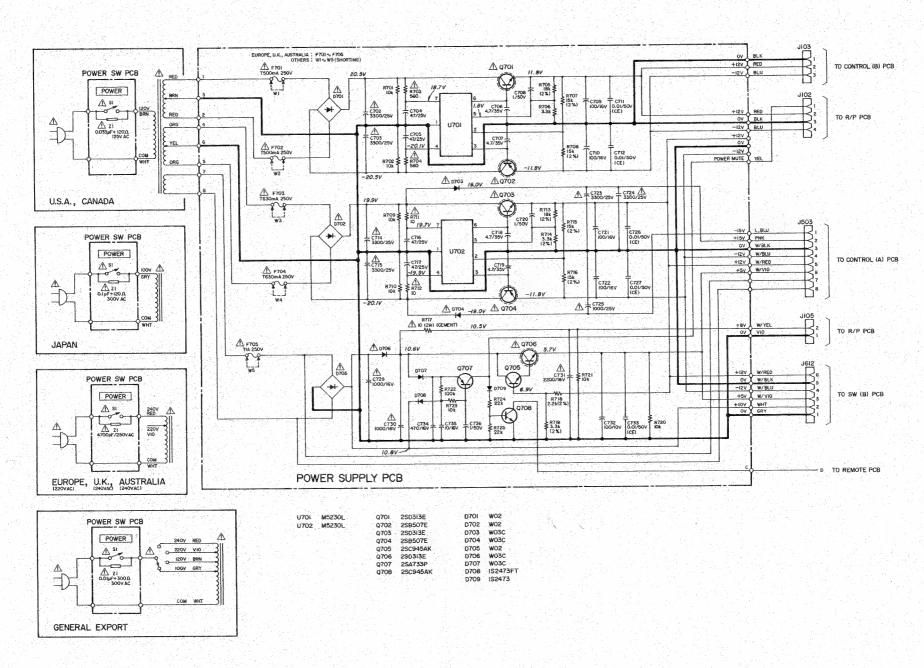

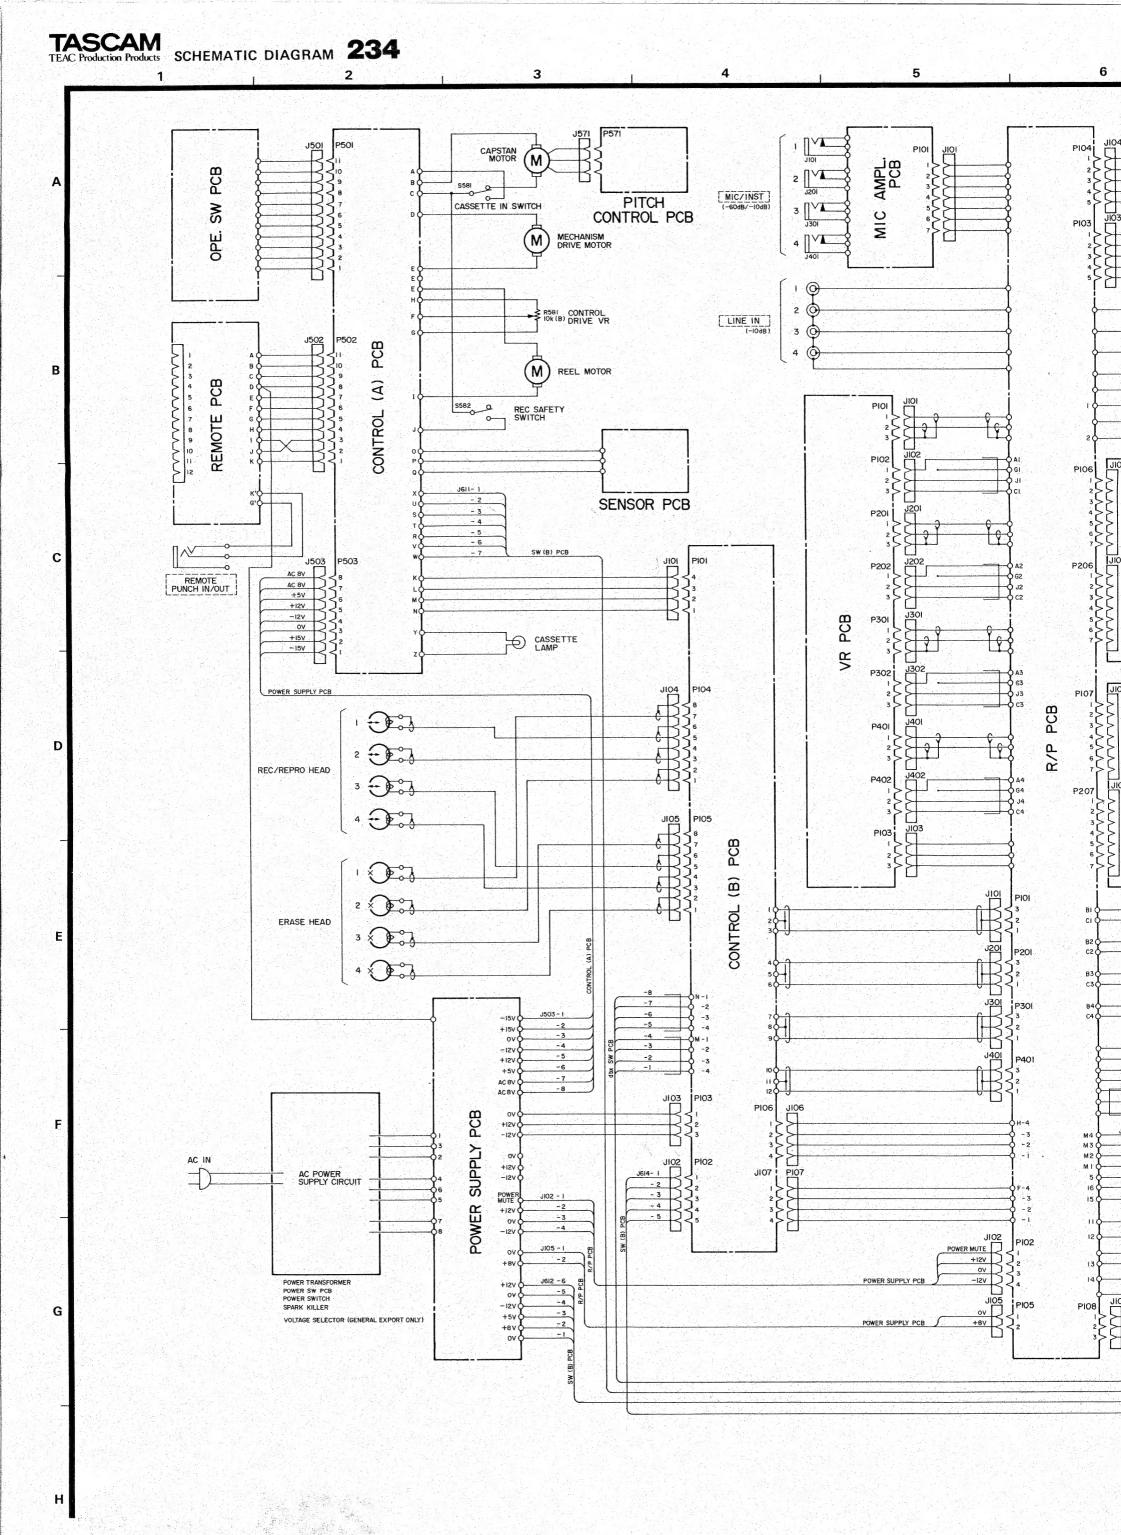


10

9

8

6

7

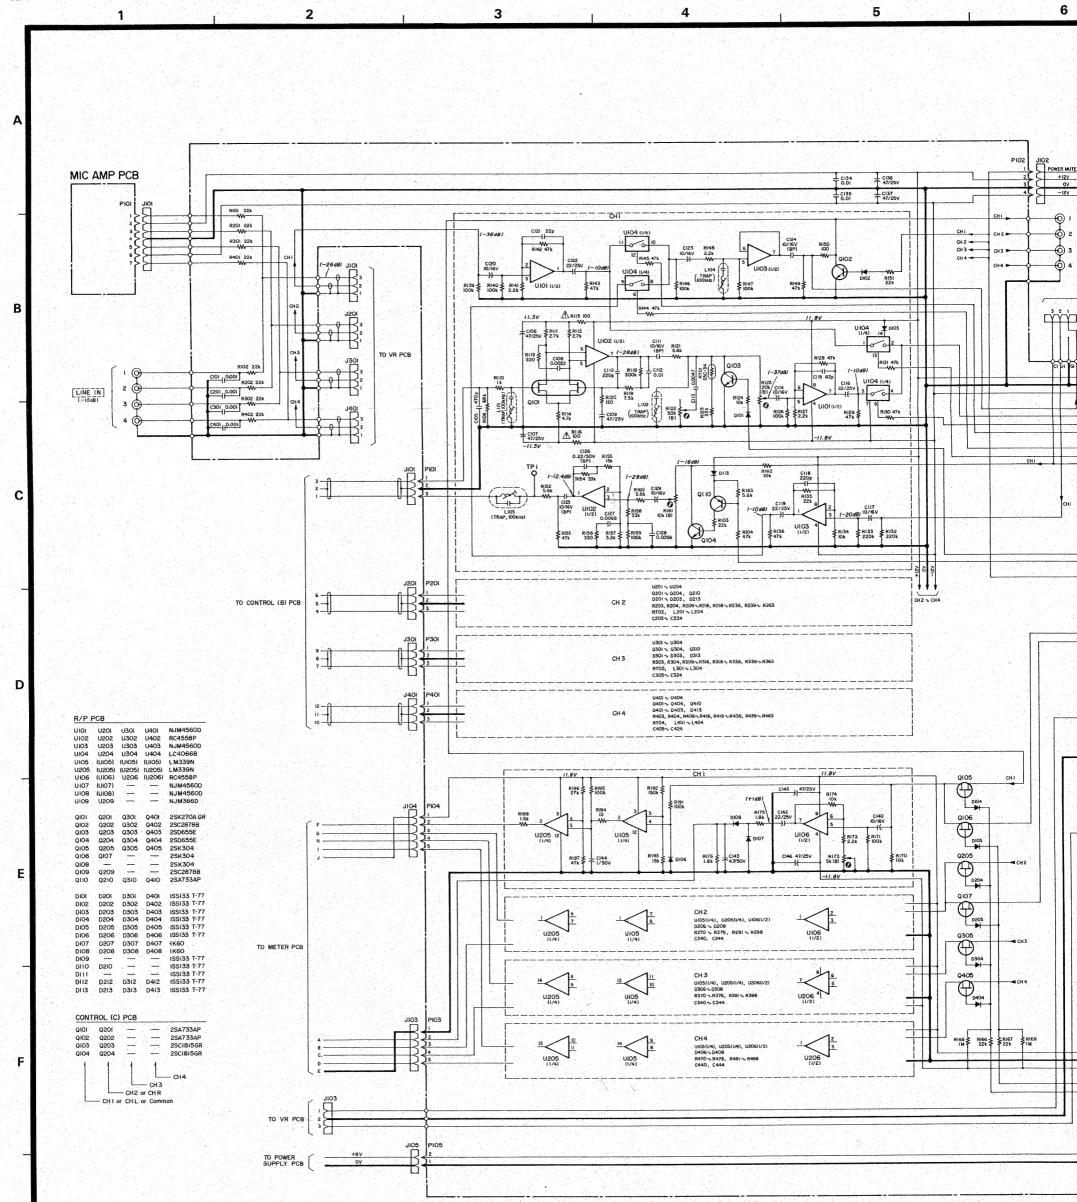

G

